

Samsung GALAXY S5[®]

4 G L T E S M A R T P H O N E

User Manual

Please read this manual before operating your phone, and keep it for future reference.



Warning! This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR

ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Modification of Software

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

SAFE™ (Samsung Approved For Enterprise)

SAFE™: "SAFE™" (Samsung for Enterprise) is a mark for a Samsung device which has been tested against Samsung's own internal criteria for interoperability with certain third party security-related solutions for MDM and VPN. The testing includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. During the testing, the device is tested with the security solutions to see if the solutions work with the device as described by the third party security solution providers. The testing, for example, includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. For more information about Samsung's SAFE™ program, please refer to www.samsung.com/us/safe.

Disclaimer of Warranties: EXCEPT AS OTHERWISE PROVIDED IN THEIR STANDARD END USER LICENSE AND WARRANTY, TO THE FULL EXTENT PERMITTED BY LAW SAMSUNG ELECTRONICS CO., LTD., SAMSUNG TELECOMMUNICATIONS AMERICA, LLC, AND THEIR AFFILIATES (COLLECTIVELY REFERRED TO HEREIN AS THE "SAMSUNG ENTITIES") EXPRESSLY DISCLAIM ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, INTEROPERABILITY OR NON-INFRINGEMENT, WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES AND APPLICATIONS TESTED WITH SAFE™ DEVICES. IN NO EVENT SHALL THE SAMSUNG ENTITIES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES OR APPLICATIONS TESTED WITH SAFE™ DEVICES. In addition, information technology security protection will be affected by features or functionality associated with, among other things the e-mail platform, master data management, and virtual private network solutions selected by the software provider, solution provider or user. Choice of an e-mail, master data management, and virtual private network solution is at the sole discretion of the software provider, solution provider or user and any associated effect on information technology security protection is solely the responsibility of the software provider, solution provider or user. For complete statement of limited warranty, please refer to www.samsung.com/us/safe, available on the web and where Samsung smartphone and Galaxy Tab™ devices are sold. [101212]

Samsung Telecommunications America (STA), LLC

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address:

<http://www.samsung.com>

©2014 Samsung Telecommunications America, LLC. Samsung is a registered trademark of Samsung Electronics Co., Ltd.

Do you have questions about your Samsung Mobile Phone? For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: <http://www.samsung.com/us/support>.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Nuance[®], VSuite[™], T9[®] Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

The Bluetooth[®] word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD[™] and the microSD logo are Trademarks of the SD Card Association.

Openwave[®] is a registered Trademark of Openwave, Inc.

LTE is a trademark of ETSI.

SRS CS Headphone and **SRS** WOW HD are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under license from SRS Labs, Inc.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Hangouts, Picasa, YouTube and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2010 Swype, Inc. All rights reserved.

Dynamic Noise Suppression from Audience

Your phone is equipped with an advanced voice processing chip that delivers clear mobile calls by suppressing background noise, intermittent sounds (like a siren or nearby conversation), and echoes, allowing you to hear and be heard nearly anywhere.

How Does It Work?

Based on the intelligence of the human hearing system, the technology:

- Captures, evaluates and distinguishes all the sound signals surrounding your phone, and the person you're speaking with.
- Then isolates the primary voice in conversation and filters out the background noise - so the person you're calling hears only your voice, without disturbing background noise.
- Dynamically equalizes and adjusts voice volume to optimize your calling experience, so you can hear clearly and don't need to speak louder to overcome surrounding noise.

The noise suppression technology is built-in and already enabled in your new mobile phone. So it's ready to provide unsurpassed voice clarity with every call.

Phone Health/Safety and Warranty Guide

The online version of the Health/Safety and Warranty guide for your device can be found at:

English: http://www.samsung.com/us/Legal/Phone_HSGuide

Spanish: http://www.samsung.com/us/Legal/Phone_HSGuide_SP

Location of Legal Information on the Device:

Health and Safety Information

- Settings → About device → Legal information → Samsung Legal → Health & Safety.

Warranty

- Settings → About device → Legal information → Samsung Legal → Warranty.

EULA

- Settings → About device → Legal information → Samsung legal → End User License Agreement.
- or -

Available online at: <http://www.samsung.com/us/Legal/SamsungLegal-EULA2>.

Table of Contents

Section 1: Getting Started 5

Setting Up Your Phone	5
Charging the Battery	9
Extending Your Battery Life	11
Switching the Device On or Off	12
Locking and Unlocking the Touch Screen	13
Configuring your Phone	13
Creating a New Google Account	14
Creating a Samsung Account	14
Setting Up Your Voice Mail	15

Section 2: Understanding Your Phone 16

Features of Your Phone	16
Front View	17
Back View	18
Side Views	19
Status Bar	20
Menu Navigation	23
Using the Multi Window	25
Customizing Your Home Screen	31
Notification Panel	39

Entering Text	41
Using Google Voice Typing	42
Using the Samsung Keyboard	42
Entering Text Using Swype	46

Section 3: Call Functions 48

Displaying Your Phone Number	48
Making a Call	48
Ending a Call	50
Answering a Call	51
Making Emergency Calls	51
Making a Call Using Speed Dial	52
Dialing Options	52
Call Log	53
Call Duration	55
Options During a Call	56
Call Settings	60

Section 4: Contacts 61

Adding a New Contact	61
Editing an Existing Contact	63
Using Contacts	63

Linking Contacts	64	More networks	89
Synchronizing Accounts	66	NFC	92
Contacts list Options	66	Nearby devices	93
Groups	68	Printing	93
Favorites	70	Screen Mirroring	94
Managing Contacts	70	Sound settings	94
Section 5: Messaging	73	Display settings	97
Types of Messages	73	Wallpaper	98
Creating and Sending Messages	73	Lock Screen settings	99
Message Options	75	Multi window	100
Viewing New Received Messages	77	Notification panel	101
Deleting Messages	78	Toolbox	101
Message Search	79	One-handed operation	102
Messages Settings	79	Easy Mode	102
Section 6: Changing Your Settings	82	Accessibility	103
Accessing Settings	82	Blocking Mode	106
Wi-Fi Settings	84	Private Mode	106
Download booster	85	Finger Scanner	107
Bluetooth	85	Motions and gestures	108
Tethering and Wi-Fi hotspot	86	Air view	109
Airplane mode	87	Accounts	110
Data Usage	88	Back up and reset	111
Location	89	Language and input	113

Date and time	119	Bluetooth	153
Safety assistance	120	USB Tethering	157
Accessories	121	Portable Wi-Fi hotspot	158
Battery	121	Section 8: Applications	161
Power saving mode	122	Amazon	161
Storage	122	Calculator	162
Security	123	Calendar	162
Help	127	Camera	163
About Device	127	ChatON	170
Application Manager	129	Chrome	170
Default applications	132	City ID	171
Calendar	132	Clock	171
Call	133	Contacts	173
Contacts	138	Drive	174
Email	139	Dropbox	174
Gallery	140	Email	174
Internet	141	Flipboard	176
Messages	143	Gallery	177
S Voice	145	Gameloft	181
Section 7: Connections	147	Gmail	181
PC Connections	147	Google	182
Wi-Fi	148	Google Settings	182
NFC	152	Google+	183

Hangouts	183
Internet	184
Maps	186
Memo	187
Messages	187
Mobile Data Security	187
Mobile TV	187
Music	188
My Files	191
Phone	192
Photos	192
Play Books	192
Play Games	192
Play Movies & TV	192
Play Music	193
Play Newsstand	193
Play Store	194
POLARIS Office 5	194

S Health	195
S Voice	196
Samsung Apps	197
Settings	197
Slacker	197
Smart Remote	198
Tone Room Deluxe	202
Video	203
Voice Recorder	204
Voice Search	204
Wi-Fi Now	205
Your Navigator Deluxe	205
YouTube	206

Section 9: Samsung Product

Registration	207
---------------------------	------------

Index	208
--------------------	------------

Section 1: Getting Started

This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your voice mail.

 
Setting Up Your Phone

Prior to use it is necessary to install both the battery and SIM into their corresponding internal compartments. The microSD™ card slot is also located in this same internal area.

1. Remove the back cover using the slot on the top of your phone (1).



2. Lift the cover up (2) and to the right of the phone.

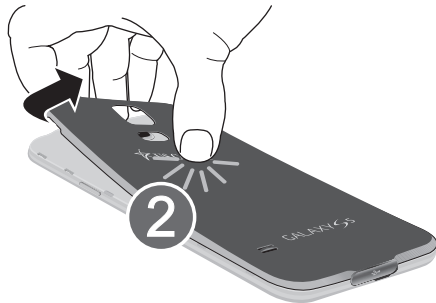

Caution! Do not bend or twist the back cover excessively. Doing so may damage the cover.

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card. During activation, your SIM card will be loaded with your subscription details, such as your PIN, available optional services, and many others features.

Important! The plug-in SIM card information and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

- Carefully slide the SIM card into the SIM card socket (as shown) until the card locks into place.

 
- Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown.



Note: If the card is not inserted correctly, the phone will not detect the SIM card. Re-orient the card back into the slot if the SIM is not detected.

Installing the Battery

1. Insert the battery into the opening on the back of the phone, making sure the connectors align (1).
2. Gently press down to secure the battery (2).

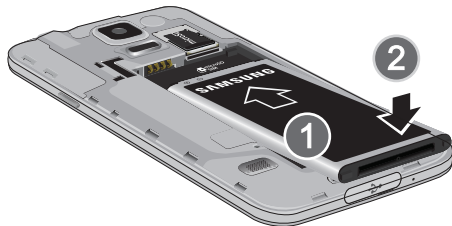


Installing and Installing a Memory Card

You can use an optional microSD™ (SD) or microSDHC™ card to expand available memory space if you desire. These memory cards enable you to store additional images, music, and data. This type of memory card is designed for use with mobile phones, like this one, and other devices.

Note: Your phone has been tested to support up to a 128 GB memory card.

Installing the Memory Card

 1. Remove the battery.
2. Carefully insert the microSD card into the slot until it stops (as shown).
 - Make sure the microSD card's gold contact pins face downward and the card is securely inserted.

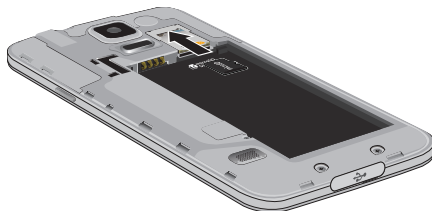

3. Install the battery.

 
For more information on Memory Cards, see “Storage” on page 122.

Removing the Memory Card

1. Remove the battery.
2. Grasp the memory card and slide it from the phone.
3. Install the battery.

Installing the Back Cover

1. Place the battery cover onto the back of the phone (1) and press down (2).

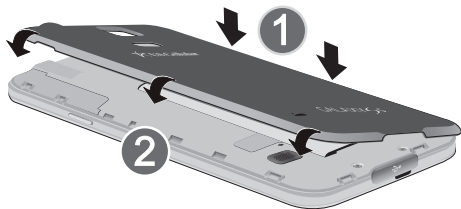

2. Press along the edge of the back cover (3) until you have a secure seal.



Note: Make sure the battery is properly installed before switching on the phone.

Charging the Battery

 
Your device is powered by a rechargeable Li-ion battery. A wall charger, which is used for charging the battery, is included with your device. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

Before using your device for the first time, you must fully charge the battery.

Your device is powered by a rechargeable Li-ion battery. The Travel Charger that is used to charge the battery, is included with your device. Use only Samsung-approved batteries and chargers.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours. Although you can use the phone while the battery is charging, doing so will require additional charging time.

Important! Verify that the battery is installed prior to connecting the wall charger. If both the wall charger is connected and the battery is not installed, the handset will power cycle continuously and prevent proper operation. Failure to unplug the wall charger before you remove the battery, can cause damage to the phone.

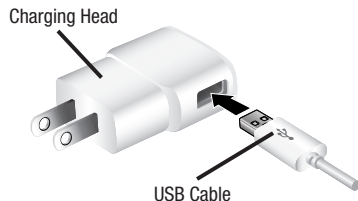


To connect a USB 3.0 cable to the device:

1. Connect the USB cable to the charging head.
2. Locate the Charger/Accessory jack.
3. Open the jack cover, as shown.
4. Insert the USB 3.0 cable into the device's Charger/Accessory jack.
5. Plug the charging head into a standard AC power outlet. The device turns on with the screen locked and indicates both its charge state and percent of charge.

 Important! While the device is charging, if the touch screen does not function due to an unstable power supply unplug the USB power adapter from the power outlet or unplug the USB cable from the device.


 
6. When charging is finished, first unplug the charger's power plug from the AC wall outlet, then disconnect the charger's connector from the device.
7. If you are using the older style USB 2.0 cable to charge your battery, plug the flat end of the cable into the smaller port in the device's Charger/Accessory jack.

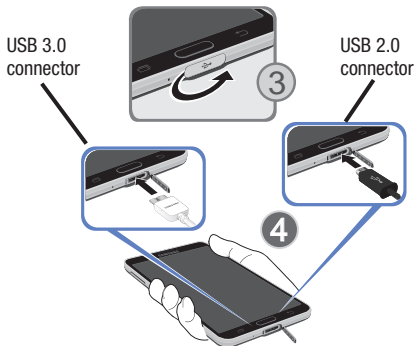

8. When charging is finished, first unplug the charger's power plug from the AC wall outlet, then disconnect the charger's connector from the phone.
9. Close the Charger/Accessory jack cover.




Important! Your touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. (For more information, refer to “*Phone Health/Safety and Warranty Guide*” at the front of this manual.)

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, the battery icon () blinks and the device sounds a warning tone at regular intervals. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your device's display. Solid color () indicates a full charge.

When the battery level becomes too low, the phone automatically turns off.

You can also choose to display a percentage value. Having a percentage value onscreen can provide a better idea of the remaining charge on the battery.

- From the Home screen, tap **Apps**  → **Settings** 
→ **Battery**  → **Show battery percentage**.

Extending Your Battery Life

Active applications, light levels, Bluetooth usage, and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:

- Reduce the time your backlight stays on.
- Turn Bluetooth off when not in use.
- Turn Wi-Fi off when not in use.
- Deactivate Location when not needed. (For more information, refer to “*Location*” on page 89.) Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

- Do not wait until your battery is completely depleted before charging your device. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.
- Use the Power Saving feature to deactivate some hardware and interface functions.
- Check the Battery use screen to review what features or functions have been consuming your battery resources.
- Check the Running Services and close any unnecessary applications.
- Use the Task Manager feature to end/shutdown background applications that are still running. These minimized applications can, over time, cause your device to slow down.
- Animated wallpapers use processing power, memory, and more power. Change your Live Wallpaper to a non-animated Wallpaper gallery or Gallery image.

Switching the Device On or Off

Once the device has been configured, you will not be prompted with setup screens again.



To turn the device on:

1. Press and hold  **Power/End** until the device switches on.



The device searches for your network and after finding it, you can make or receive calls.

2. Swipe your finger across the screen to unlock the phone.

To turn the device off:

1. Press and hold  **Power/End** until the Device options screen appears.
2. Tap  **Power off**.
3. At the **Power off** prompt, tap **OK**.

Locking and Unlocking the Touch Screen

1. Press  **Power/End** to lock the touch screen.
2. Press  **Power/End** again to display the lock screen then swipe your finger across the screen to unlock.



Note: Swipe is the default screen locking method. To change your screen lock, see “*Lock Screen settings*” on page 99.

Configuring your Phone



When you first turn on your phone, you will need to set up a few things.

1. The **Welcome** screen displays. The default language for your phone is English. If you would like to select another language, tap **English** and scroll up or down to select one of the listed languages.
2. Tap the **Accessibility** box at the bottom of the screen to modify any of the Accessibility function if you desire. (For more information, refer to “*Accessories*” on page 121.)
3. Tap **Next** and follow the instructions on each screen to set up your phone.

Creating a New Google Account

In order to utilize your device to the fullest extent, you will need to create a Google™ Account when you first use your device. With a Google Account, Google applications will always be in sync between your phone and computer.

If you did not create a new account during the setup procedure when you first turned your phone on, follow these steps:

1. From the Home screen, tap  **Apps** →  **Gmail**.

The **Add a Google Account** screen displays.

2. Tap **New** to create a new Google account.

— or —





If you already have a Google account, tap **Existing** to sign in and add the account to your phone.

3. Follow the onscreen instructions to add a Google Account.



Note: Once you have created a Google account, you only need to sign in.

Creating a Samsung Account

An active Samsung account is required to begin accessing applications such as ChatON and Samsung Apps. If you did not create a Samsung account when you first set up your phone, follow these steps:



1. From the home screen, tap  **Apps** →  **Settings** →  **Accounts** → **Add account**.
2. Tap  **Samsung account**.
3. Tap **Create account**.
4. Follow the onscreen instructions to create and activate your account.

Setting Up Your Voice Mail

1. From the Home screen, tap  **Phone**, then tap .
2. Follow the tutorial to create a password, record a greeting, and record your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

1. From the Home screen, tap  **Phone**, then tap .
- You may be prompted to enter a password.
2. When connected, follow the voice prompts from the voice mail center.

Accessing Your Voice Mail From Another Phone

1. Dial your wireless phone number.
2. When you hear your voicemail greeting, press the asterisk key on the phone you are using.
3. Enter your password and you are connected to your Voice Mail.

Section 2: Understanding Your Phone

This section outlines some key features of your phone and describes the screen and the icons that appear when the phone is in use. It also shows how to navigate through the phone and provides information on using a memory card.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many useful features. The following list outlines a few of the features included in your phone.

- Android v 4.4.2, KitKat Platform
- Brilliant 5.1" Full HD Super AMOLED® (1080 x 1920) display
- Multi-core processor
- USB 3.0 connector for faster transfer speeds
- Wi-Fi® Capability (802.11 a/b/g/n/ac) @ both 2.4GHz and 5GHz
- Delivers data faster using 4G LTE and High Speed Packet Access Plus (HSPA+)
- Galaxy Gear™ compliant. For more information, please visit: www.samsung.com/us/galaxygearsupport
- Smart Switch™ compliant. For more information, see www.samsungsmartswitch.com

- Fingerprint and Heart Rate sensors
- Ready access to the Internet
- Built-in Bluetooth and advanced Wi-Fi® technology
- Tethering and Wi-Fi hot spot capability
- 16 Megapixel camera and camcorder with 2 Megapixel Front Facing camera
- Smart Remote control using Smart Remote
- Up to 128 GB expandable memory slot
- Corporate and Personal Email
- Sync and update social network applications
- Thousands of Apps available to download via Google Play Store™ and Samsung Hub
- Full Integration of Google Mobile™ Services (Gmail, YouTube, Google Maps, Google Voice Search)
- Multiple Messaging Options: Text/Picture/Video Messaging, and Instant Messaging with Google Hangouts™
- Video with UHD 3840x2160 recording and playback
- Screen Mirroring to share the media files on your device screen with an HDMI device such as an HDMI TV

 
Front View



1. **Status Light:** Displays red when charging or the battery is low, blue when a notification has arrived or you are voice recording, and green when fully charged.
2. **Receiver:** Allows you to hear the caller.
3. **Gestures Sensor:** Used to detect Gesture motions.
4. **Proximity and Light Sensors:** Uses the ambient light level to make adjustments. If the light path is blocked, for example, when holding the phone close to your ear, the touch screen will turn off.
5. **Front Facing Camera:** Used to take pictures while facing the screen and allows you to video conference.
6. **Indicator Icons:** Shows the information needed to operate your phone, such as the received signal strength, phone battery level, time, unread Emails, missed calls, and so on.
7. **Widgets:** Self-contained onscreen applications (not shortcuts). These can be placed onto any of the available screens (Home or extended).

8. **Google Quick Search Widget:** Lets you search for items on the Internet. For more information, refer to “*Google Search widget*” on page 23.
9. **Application Icons:** Shortcuts to your favorite applications on the Home screen.
10. **Home Screen Indicator:** Indicates which Home screen is presently displayed.
11. **Primary Shortcuts:** Allows quick access to important features such as Phone, Contacts, Messages, Internet, and Apps.
12. **Recent Key:** Displays a list of recently opened apps and provides access to the Task Manager.
13. **Home Key:** Displays the Home screen when pressed. Press and hold to display the Google Now app. Double-press to activate S Voice.
14. **Back Key:** Re-displays the previous screen or clears entries.

Back View

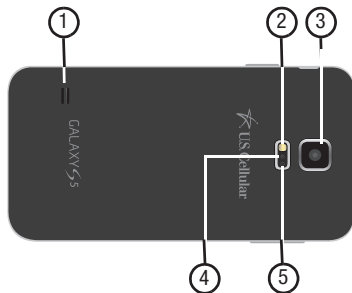


 

1. **External speaker:** Allows you to hear ringers, music, and other sounds offered by your phone.
2. **Flash:** Used to take photos in low-light conditions.
3. **Camera lens:** Used to take photos.
4. **Heart Rate Sensor:** When using the S Health app, this sensor measures your heart rate via your fingertip. For information on the S Health app, see “*S Health*” on page 195.

5. **Temperature and Humidity sensor** allows your device to read both temperature and humidity conditions. This is useful to calculate calories burned within S Health.

Side Views



1. **IR Transmitter** used to emit infrared signals used for controlling external devices. For more information, refer to “Smart Remote” on page 198.

2. **Microphones:** Used during phone calls and allow other callers to hear you clearly when you are speaking to them. There are two microphones on the device:
- Bottom microphone: used during handset mode.
 - Top microphone: used while an active call is in the speakerphone mode and assists in noise cancellation (2 microphone solution).
3. **3.5mm Headset jack:** Used to plug in headphones.
4. **Volume key:** Used to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. When receiving an incoming call:
- Pressing the volume key down mutes the ring tone.
5. **Power/End key:** Ends a call or switches the phone off and on. Press and hold for two seconds to:
- Access the audio modes for the device. Tap an on-screen selection (Mute, Vibrate, or Sound).
 - Turn the device Off  or Restart  the device.
 - Enable Emergency mode 
6. **USB Power/Accessory connector:** Used to connect a power cable or optional accessories such as a USB/ data cable.

Status Bar

The Status Bar shows information about the connection status, signal strength, battery level, and time, and displays additional notifications information.

This list identifies the icons you see on your device's display screen:

Indicator Icons

This list identifies the symbols you'll see on your phone's display and Indicator area:



Displays your current signal strength. The greater the number of bars, the stronger the signal.



Indicates that the Airplane Mode is active. You cannot send or receive any calls or access online information.



Displays when there is no SIM card in the phone.



Displays when there is no network available.



Displays when your phone is in Blocking mode.



Displays when there is a system error or alert.



Displays to indicate a security warning. You are prompted to set a screen lock password.



Displays when a call is in progress.



Displays when a call is on hold.



Displays when the speakerphone is on.



Displays when a call has been missed.



Displays when a call has been muted.



Displays your battery charge level. Icon shown is fully charged.



Displays when your battery is charging. Also displays battery charge level.



Device Power Low – Shows your current battery charge level.



Device Power Critical – Shows your current battery only has less than 5 percent power remaining and will soon shutdown.



Displays when your phone is communicating with the 3G network.



Displays when your phone is communicating with the 4G LTE network.



Displays when your phone is downloading or has downloaded a file. It will blink green when it is installing.



Displays when the an outbound file transfer is in progress.



Displays when the phone is connected to a computer via a supported USB cable connection.



Displays when the phone is tethered via a supported USB cable connection.



Displays when a new text or multimedia message is received.



Displays when a new voice mail is received.



Displays when Email is received.



Displays in the notifications window when there is a new Gmail message.



Displays when the time and date for a Calendar Event has arrived. For more information, refer to “*Calendar*” on page 162.



Displays when you set an alarm to ring at a specified time. For more information, refer to “*Alarm*” on page 171.



Displays when the Sound profile is set to Mute.



Displays when the Sound profile is set to Vibrate.



Displays when Bluetooth is activated.



Displays when a Bluetooth device has been paired with the phone.



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when there is a Wi-Fi access point available but you are not connected to it. May also display if there is a communication issue with the target Wireless Access Point (WAP).



Displays when Wi-Fi Direct is active and your phone is connected to another device.



Displays when your phone has been configured as a portable Wi-Fi hotspot.



Displays when Location is active and acquiring a signal.



Displays when data synchronization and application sync is active and synchronization is in progress for Gmail, Calendar, and Contacts.



Displays when Near Field Communication (NFC) has been activated.



Displays when your device is connected being used to control streaming media and is connected to a Digital Living Network Alliance (DLNA) certified device using the Samsung Link application.



Displays when your device is currently sharing/streaming media to a paired device using the Samsung Link application.



Displays when TTY device has been inserted.



Displays when a screen capture has been taken.





Displays when the keypad is active.

(For more details on configuring your phone's settings, see *"Changing Your Settings"* on page 82.)


Google Search widget

The Google Search widget provides you an onscreen Internet search engine powered by Google™.

1. From the main Home screen, tap the Google Search widget (see “*Front View*” on page 17).
2. Use the onscreen keypad to enter the item you want to search for, then tap .
3. Tap  to use Google Voice Search. Follow the onscreen instructions.

Locking and Unlocking the Phone

To unlock your phone:

1. Press  **Power/End** (located on the upper right side of your phone).
2. The lock screen will display with **Swipe screen to unlock** displayed at the bottom of the screen.
3. Swipe the touch screen in any direction.
4. The Home screen will be displayed.



Note: There are several additional ways you can lock your screen. (For more information, refer to “*Lock Screen settings*” on page 99.)

Menu Navigation

You can tailor the phone's range of functions to fit your needs using both menus and widgets. Menus, sub-menus, and features can be accessed by scrolling through the available onscreen menus. Your phone originally has three home screens but you can expand up to seven home screens.

Command Keys

Recent Key

Tap  **Recent** to display a list of recently opened apps and to access the Task Manager. Touch and hold  **Recent** to access the Home screen options menu.

Home Key

Press  **Home** to display the Home screen.

Back Key

Tap  **Back** to return to the previous screen, option or step.

Terms used in this user manual

Tap

Lightly touch items to select or launch them. For example:

- Tap the on screen keyboard to enter characters or text.
- Tap a menu item to select it.
- Tap an application's icon to launch the application.

Touch and Hold

Activate onscreen items by a touch and hold gesture. For example:

- Touch and hold a widget on the home screen to move it.
- Touch and hold on a field to display a pop-up menu of options.

Swipe and Palm Swipe

To swipe, lightly drag your finger vertically or horizontally across the screen. Use swipe when:

- Unlocking the screen
- Scrolling through the Home screen or a menu

To palm swipe, swipe the side of your hand horizontally across the screen. Use palm swipe when:


- Capturing the screen

Turn over

Turn your phone over so that the screen faces downward. For example:

- Mute incoming calls and playing sounds by turning your phone over.

Home Screen Overview

The main Home screen is the starting point for many applications and functions, and it allows you to add items like application icons, shortcuts, folders, or Google widgets to give you instant access to information and applications. This is the default page and accessible from any menu by pressing .


Navigating the Home Screen Panels

Your phone originally has three home screens but you can expand up to seven home screens. If you like, you can place different applications on each of the home screens.

- From the main Home screen, sweep the screen with your finger in either direction. The main Home Screen is located in the middle with a Home screen on each side.

Navigating the Application Menu

Your phone initially has three Application menu panels available. Follow these steps to navigate through the Application menu panels:


1. At the Home screen, tap . The first Application menu panel displays.
2. To access the other two panels, sweep the screen left or right.
3. Tap one of the application icons.

Note: As you add applications, the number of Application menu panels automatically increases.




Navigating Using Sub-Menus

Sub-menus are available when you are at any Home screen or have selected a feature or application such as Phone, Contacts, Messages, or Internet.

To access a sub-menu:

1. Tap .
A sub-menu will appear at the bottom of the phone screen.
2. Tap an option.

Accessing Recently-Used Apps

1. Tap  from any screen to open the recently-used applications window.
2. Tap an icon to open the selected application.
– or –
Tap  to go to the Task manager.
– or –
Tap  to delete the record of all recently used applications.

Using the Multi Window



This feature allows you to run multiple applications on the current screen at the same time.


Note: Only applications found within the Multi window panel can be active atop another current application on the screen.

Turning Multi window On and Off







There are two different ways you can turn the Multi window feature on and off:

To turn Multi window On using the Quick Start bar:


1. In a single motion, touch the Status bar to reveal the Notifications tab, and then drag it to the bottom of the screen to open the Notifications panel.
2. Swipe the row of Quick Start icons to the left until the Multi window icon is displayed.
3. Tap the **Multi window** entry to turn the feature On. The icon turns green when On.
4. Tap **Home**  to return to the Home screen.
5. Tap the tab  to open the application panel showing all the available Multi window apps.

Note: Once you have turned the Multi window option On in step 3, you only need to press and hold the **Back** key () to hide or display the Multi window tab.

To turn Multi window On using the Settings menu:

1. From the Home screen, tap  **Apps** →  **Settings**.
2. Scroll down to **SOUND AND DISPLAY**, then tap  **Multi window**.
3. Tap the **Multi window** ON/OFF slider, located to the right of the **Multi window** field, to turn the feature on .
4. Tap **Home**  to return to the Home screen.
5. Tap the tab  to open the application tray showing all the available Multi window apps.

To deactivate Multi window:


- Press and hold the **Back** key () . This action hides the Multi window tab from view.

Repositioning the Multi Window


The Multi window contains two components: tab and apps tray. The tab can be manually moved across the screen. The apps tray (containing the scrollable apps) can be relocated to lock onto the different sides of the screen (top/bottom/left/right).

To move the tab:

Note: This is a quick way to get the tab out of the way if you can't get to a button or option behind it.

1. Turn the Multi window feature On.
2. In a single motion, touch and hold the tab  for approximately one-second, then slowly drag it to its new location **along the current** screen edge.

To relocate the Multi window tray:

1. Turn the Multi window feature On.
2. Tap the tab to display the apps panel (containing the scrollable apps).
3. In a single motion, touch and hold the tab  for approximately one-second to detach it from the screen, then slowly drag it to its new location along either side.

Customizing the Multi Window apps


The applications found within the Multi window apps tray can be organized by either being rearranged or removed.

To rearrange the Multi window applications:




1. Turn the Multi window feature On.
2. Tap the tab to display the apps tray (containing the scrollable apps).
3. In a single motion, touch and hold a desired app until it detaches from the tray, then carefully drag it to a new location in the list of apps. Lift your finger or stylus off the screen to let go of the app and drop it into its new location.

 **More** - access to additional functions




 **Create** - create a user-defined custom Multi window (paired window)

 **Edit** - edit the available Multi window apps




To edit a Multi window application:

1. Turn the Multi window feature On.
2. Tap the tab  to display the apps tray (containing the scrollable apps).
3. Tap  **More** →  **Edit** (located at the bottom of the list) to reveal a staging area (on the right) that can house any removed applications from the Multi window tray.
4. Tap **Done** once you have completed the removal process.

To remove a Multi window application:

1. Turn the Multi window feature On.
2. Tap the tab  to display the apps tray (containing the scrollable apps).
3. Tap  **More** →  **Edit** button (located at the bottom of the list) to reveal a staging area that can house any removed applications from the Multi window tray.
4. Tap **Done** once you have completed the removal process.

To restore a Multi window application:

1. Turn the Multi window feature On.
2. Tap the tab  to display the apps tray (containing the scrollable apps).
3. Tap  **More** →  **Edit** located at the bottom of the list) to reveal the staging area containing any previously removed apps.
4. Locate the desired application.
5. In a single motion, touch and hold a desired app until it detaches from the staging area, then carefully drag it to a new location in the current list of apps.

Using Multi Window to run multiple apps on the same screen

Any of the apps found within the Multi window panel can be run at the same time as a current onscreen app.

Once multiple apps are running on the same screen, you can then choose to either swap their positions or maximize a desired app.

Note: Only applications found within the Multi-window panel can be active atop another current application on the screen.



When launching applications that contain multimedia files (music/video), audio from both files will be played simultaneously.

 
In the following example, we will be launching both the Messages and Internet applications.

1. Launch an application such as Messages.
2. Activate the Multi window feature.
3. Tap the tab to display the apps panel.
4. Touch and hold the desired app, such as Internet, until it detaches from the panel.
5. In a single motion, drag it over the current app and drop the new Multi window app over either the top or bottom area of the current onscreen app.

Note: Once two applications are running, the device displays a split screen view containing both the initial app and the new Multi window app. Each application is still independent of the other.

To switch the arrangement of the applications:

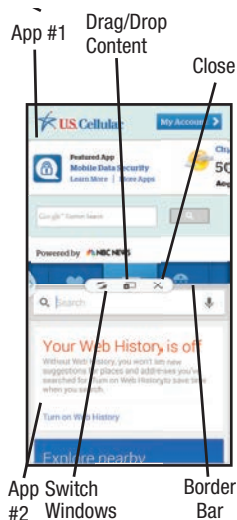

1. Tap the desired application area (top or bottom).
2. With the two applications shown in a split screen, tap the Border button  to show the onscreen functions.
3. Locate and tap  **Switch Windows**. The current apps are switched.




To add text or image to app:

Dragging and dropping a paragraph of text or a screen shot image is now possible with Multi Window.




Note: Not all apps support this feature.

1. Drag the Gallery app onto one of the available onscreen windows. Open an image folder.
2. With the two applications shown in a split screen, tap the Border button .
3. Locate and tap  **Drag and Drop Content**.
4. Drag and drop a paragraph of text or an image from one window into the other.

To close a selected application:

1. With the two applications shown in a split screen, tap one of the two onscreen apps to select it.
2. Tap the Border bar to show the onscreen icons.
3. Locate and tap  **Close Application**. The current app is closed and the remaining app is maximized.

Creating a Customized Multi Window Preset

1. Arrange the Multi window view as desired (app location).
2. Once configured, tap the tab  to display the apps tray (containing the scrollable apps).
3. Tap  **More** →  **Create**.
4. Use the onscreen keyboard to name the new preset of paired windows.
5. Tap **OK**. The new preset then appears at the top of the Multi window list of apps.

Customizing Your Home Screen

You can customize your Home screen by doing the following:

- Customizing the Toolbox
- Creating Shortcuts
- Adding and Removing Primary Shortcuts
- Adding and Removing Widgets
- Moving Icons in the Apps Menu
- Creating Application Folders
- Managing Wallpapers
- Adding and Deleting Home Screens
- Moving Home Screens





Customizing the Toolbox

Activating the Toolbox feature displays an onscreen button that provides quick access to a set of five user-defined applications.

(For more information, refer to “Toolbox” on page 101.)

Important! There can only be at most five applications assigned to the quick access Toolbox button.

To activate the Toolbox feature:

1. From the Home screen, tap  **Apps** →  **Settings**.
2. Scroll down to **SOUND AND DISPLAY**, then tap  **Toolbox**.
3. In a single motion touch and slide the **Toolbox** slider to the left to turn it on .

To customize the Toolbox applications:



1. From the active Toolbox screen, tap **Edit**.
2. Place a checkmark alongside up to five applications. These will be quickly accessible via the on-screen button.
3. Tap **Save** once you have completed the assignment of your applications.

Creating Shortcuts


Shortcuts are different than the current Home screen Widgets that only launch an application. Shortcuts activate a feature, action, or launch an application.

Note: To move a shortcut from one screen to another, it must first be deleted from its current screen. Navigate to the new screen, then add the shortcut.

Adding a shortcut from the Apps Menu



1. Press  to display the Home screen.
2. Navigate to the desired Home Page.
3. Tap  **Apps** to display your current applications.
4. Scroll through the list and locate your desired application.
5. Touch and hold the application icon. This creates an immediate shortcut of the selected icon and closes the **Apps** tab.
6. While still holding the onscreen icon, position it on the current page. Once complete, release the screen to lock the new shortcut into its new position on the current screen.

Adding a shortcut via the Add to Home screen

1. Press  to display the Home screen.
2. Navigate to the desired Home Page.
3. Touch and hold on an empty area of the Home screen.
4. Tap **Wallpapers, Widgets, or Home screen settings**.
5. Press and hold a shortcut from the available list and position it on the current screen.


Deleting a shortcut

Note: This action does not delete the application, it just removes it's shortcut from the current screen.

1. Press  to display the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over the **Remove** icon  and release it. As you place the shortcut into the Trash, both items turn red.

Adding and Removing Primary Shortcuts

You can change any of your primary shortcuts with the exception of the **Apps**  shortcut.



1. Press  to display the Home screen.
2. Touch and hold the primary shortcut you want to replace, then drag it to an empty space on any Home screen.
3. Scroll through the App menu to find the shortcut you want to add as the new primary short cut.
4. Touch and hold the new shortcut, then drag it to the empty space in the row of primary shortcuts.

The new primary shortcut will now appear on all Home screens.

Adding and Removing Widgets



Widgets are self-contained applications that reside in either your Widgets tab or on the main or extended Home screens. Unlike a shortcut, the Widget appears as an onscreen application.

Adding a Widget

1. Press  to display the Home screen.
2. Navigate to the desired Home screen panel.
3. Touch and hold on an empty area of the screen.
4. Tap  **Widgets**.
5. Press and hold an available Widget to position it on the current screen, then release the Widget.







Removing a Widget

Note: This action does not actually delete a Widget, it just removes it from the current Home screen panel.

1. Press  to display the Home screen.
2. Navigate to the desired Home screen panel.
3. Touch and hold a Widget until you can move it around on the screen.
4. Drag the Widget up to the **Remove** icon  and release it.

As you place the Widget into the Trash, both items turn red.





Moving Icons in the Apps Menu

1. Press  to display the Home screen.
2. Tap  to display your current applications.
3. Tap  → **View as** → **Custom**. A green circle will appear next to the option.
4. Tap  and tap **Edit**.
5. Scroll through the list and locate the icon you wish to move.
6. Touch and drag the icon to the position that you want. To move to a different page, drag the icon to the edge of the page until the page scrolls to the desired page.
7. Tap < **Edit** or  **Back** to return to the Apps screen.
– or –
Press  to return to the Home screen.

Creating Application Folders

You can create application folders to hold similar applications if you wish.

To create a folder follow these steps:

1. Press  to display the Home screen.
2. Tap  to display your current applications.
3. Tap  → **Create folder**.
4. Enter a name for the new folder, then tap **Done**.
5. Tap your new folder, then tap  to add application shortcuts to the folder.
6. Touch the application(s) that you would like to move to the folder. Check marks appear next to each selected application.
7. Tap **Done**. Application shortcuts display on top of the folder.


Note: You can also drag other Apps into the folder.

8. To view information on an App in your folder, drag the App icon up to the App info  icon.

Managing Shortcuts


Note: To move a shortcut from one screen to another, you must carefully touch and hold the shortcut and slowly drag it to the edge of the screen. As the shortcut turns light blue, you can begin to move it to the adjacent screen. If this does not work, delete it from its current screen. Activate the new screen and then add the selected shortcut.

To add a shortcut from the Applications screen:

1. From the Home screen, select a screen location for your new shortcut by scrolling across your available screens until you reach the desired one.
2. Tap  **Apps** to reveal all your currently available applications. By default, applications are displayed as an Alphabetical grid.
3. Scroll across the screens and locate your desired application.
4. Touch and hold the onscreen icon. The new shortcut then appears to hover over the current screen.

5. While still holding the onscreen icon, position it on the current screen. Once complete, release the screen to lock the shortcut into its new position.

To delete a shortcut:

1. From the Home screen, touch and hold the desired shortcut. This unlocks it from its location on the current screen.
2. Drag the shortcut over the  **Remove** icon and release it.


Adding and Removing Primary Shortcuts

Note: You can change any of your primary shortcuts with the exception of the **Apps** shortcut.

To remove a primary shortcut:

- From the Home screen, touch and hold the primary shortcut you want to replace, then drag it to an empty space on any available screen. The primary shortcuts are now updated to show an empty slot.


To insert a new primary shortcut:


1. From the Home screen, tap  **Apps**.
2. Locate your desired application, then touch and hold the onscreen icon to position it in the desired primary shortcut location. (For more information, refer to “Managing Shortcuts” on page 35.) The new primary shortcut will now appear on both the Home and Extended screens.

Adding and Removing Widgets


Widgets are self-contained applications that can be placed on any screen. Unlike shortcuts, widgets appear as applications.

To add a Widget:

1. Navigate to a target screen containing an available open area.
2. Press and hold  **Recent** key.
— or —
Touch and hold on an empty area of the screen.
The Edit Home screen option appears.

3. Tap  **Widgets**. Scroll through the Widget pages and locate a desired Widget.
4. Touch and hold an available Widget until it detaches from the screen.
5. While still holding the Widget, scroll over the location of the available screen and let go of the Widget to place it in the desired location.

To remove a Widget:

1. Touch and hold a Widget until it unlocks from the current screen.
2. Drag the widget over the  **Remove** icon and release it.
 - Both items turn red.
 - This action doesn't delete the Widget, it just removes it from the current screen.

To place a widget onto a different screen:



1. Touch and hold the widget until it becomes transparent.
2. Slowly drag it past the edge of the screen until the adjacent page appears highlighted and it then snaps onto the new page.
3. Drag the widget to its desired position on the new screen.
4. Repeat these steps to continue moving it to other screens.

Managing Wallpapers

Wallpapers consist of either Gallery images (user taken), Static Wallpaper gallery images (default wallpapers), or Live wallpapers (animated backgrounds).

Note: Selecting animated Live wallpapers will require additional battery power.




To change the current Home screen wallpaper:

1. Navigate to an available screen containing an open area.
2. Press and hold  **Recent** key to launch the Home Screen Options page.
3. Tap  **Wallpapers** → **Home screen**.
4. Scroll across the available wallpaper images and select a Wallpaper type:

Note: Wallpapers supports the following image types: JPEG, PNG, GIF, BMP, and WBMP.

- Tap **More images** to select from a user image stored in the camera image gallery, crop the image, and tap **Done**.
- Tap a Live wallpaper (**Bubbles** and **Phase beam**) to select from an available animated background, once done tap **Set wallpaper**.

To change Wallpapers from Settings Menu:

1. From the Home screen, tap  **Apps** →  **Settings** →  **Wallpaper**.
2. Choose from **Home screen**, **Lock screen**, or **Home and lock screens**.

Note: The **Home and lock screens** is an option that allows you to change both screens at the same time.

3. Select a wallpaper image and tap **Done** or **Set wallpaper**.

(For more information, refer to “Wallpaper” on page 98.)

To change the current Lock screen wallpaper:

1. From the Home screen, tap  **Apps** →  **Settings** →  **Wallpaper** → **Lock screen**.
2. Select a wallpaper image and tap **Done** or **Set wallpaper**.




Adding and Deleting Screens

Your device comes with up to seven screens. You can delete these screens and then add them back later.




Note: These screens can be deleted and re-arranged.

Important! Your device can only contain at most seven screens and at least one screen.

To add a screen:

1. Navigate to an available screen containing an open area, then press and hold  **Recent** key until the Edit Home screen option page appears.
2. Scroll to the far right of the available screens and tap  **Add screen**. The newly added screen appears as the last page.
3. Press  to return to the Home screen.



To delete a screen:

1. Navigate to an available screen containing an open area, then press and hold  **Recent** key until the Edit Home screen option displays.
2. Scroll across the available screens, then drag the undesired screen up to the  **Remove** tab.
3. Press  **Home** to return to the Home screen.

Rearranging the Screens

1. Navigate to the Edit Home screen option page.
2. Touch and hold a screen and then drag it left or right into its new location. Left most is screen position #1 and right most is screen last screen.

Assigning a New Home Screen

1. Navigate to the Edit Home screen option page displays.
2. Tap  to assign an existing screen as the new Home screen. The new Home screen is highlighted and indicates the  **Home screen** icon at the top of the selected screen.

Notification Panel

The Notification panel includes a pull-down list to show information about processes that are running, recent notifications, and alerts. To display the Status indicator:

1. On the Home screen, touch and hold the Notification panel until the pull-down displays, then drag down vertically.
2. Tap a notification entry to open the associated application.

Note: S Finder and Quick connect can quickly be accessed from the top area of the main Notifications screen.


Clearing Notifications

To clear all notifications from the Notification panel:


1. From the Home screen, touch and hold the Notification panel until the pull-down displays, then drag down vertically.
2. Tap the **Clear** button.
The notifications are cleared and the panel closes.



Accessing Additional Panel Functions

In addition to notifications, the Notification panel also provides quick and ready access to separate device functions. These can be quickly activated or deactivated by toggling them on or off. You can choose the functions that will be displayed.

1. From the notification panel, tap  to display additional Quick setting options.

By default, the following Quick setting options are located in the top two rows and can either be activated (green) or deactivated (gray): Wi-Fi, Location, Sound, Screen rotation, Bluetooth, Mobile data, Download booster, U. power saving, Multi window, and Toolbox.

2. Tap , then locate the **Set quick setting buttons** area located at the bottom of the **Notification panel**.
3. In a single motion, touch and hold a desired function from the bottom (**AVAILABLE BUTTONS**) rows and then drag it to the top two (**ACTIVE BUTTONS**) rows. Additional Quick setting options are: Screen Mirroring, NFC, Sync, Smart stay, Smart pause, Power saving, Blocking mode, Airplane mode, Car mode, Private mode, and Touch sensitivity.

4. Tap **Brightness adjustment** to create a checkmark if you want to be able to adjust the screen brightness via the Notification panel.
5. Tap **Recommended apps** to select applications you want to display on the Notifications panel. to turn this feature on
6. Tap  and then tap  to display only your primary functions.

Entering Text

Your device comes equipped with an orientation detector that can tell if the phone is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text.

Your device also provides several onscreen keypad text entry options to make the task of text entry that much easier.

Text Input Methods

There are three text input methods available:

- **Google voice typing:** allows you to enter text by speaking.
- **Samsung keyboard (default):** Samsung's onscreen QWERTY keypad that can be used in both portrait and landscape orientation.
- **Swype:** a new way to enter text on touch screens. Instead of tapping each key, use your finger to trace over each letter of a word.

To change the input method, see “*Keyboards and Input Methods*” on page 113.

The onscreen QWERTY keypad works the same in both portrait and landscape mode.


Selecting the Text Input Method

The Text Input Method can be assigned from within one of two locations:

Settings Menu:

- From the Home screen, tap  **Apps** →  **Settings** →  **Language and input** → **Default** and select an input method.



Text Input field:

1. From a screen where you can enter text, in a single motion, touch and drag the Status bar down to the bottom of the screen to open the Notifications panel.
2. Tap  (**Choose input method**) and select an available input method.


Using Google Voice Typing

This feature uses Google voice recognition to convert your spoken words into onscreen text.


You can use your voice to enter text using the Google Voice typing feature.

1. From the keyboard, touch the top of the screen and drag it down to display your Notification panel.
2. Tap  (Choose input method) → Google voice typing.
3. At the Listening prompt  (Speak now), speak clearly and distinctly into the microphone.
The text is displayed in the message as you are speaking.

For more detailed information on configuring Google Voice Typing settings, see “Google voice typing settings” on page 117.

4. Tap  (Done) when you are finished.

– or –

Tap  (Resume) to resume recognition.

Note: The feature works best when you break your message down into smaller segments.


Using the Samsung Keyboard

This device has a built-in, QWERTY keypad (portrait mode) or keyboard (landscape mode). Using the QWERTY keypad/keyboard, you can type letter, numbers, punctuation, and other characters.

 
To use the Samsung keyboard you must first configure the settings to default to the Samsung keyboard.

1. From the Home screen, tap  (Apps) →  **Settings** →  **Language and input** → **Default** → **Samsung keyboard**.

– or –

From a screen where you can enter text, in a single motion, touch and drag the Status bar down to the bottom of the screen then select  (Choose input method) → **Samsung keyboard**.

2. The virtual keyboard is then assigned to the Samsung keyboard configuration for all subsequent text input.

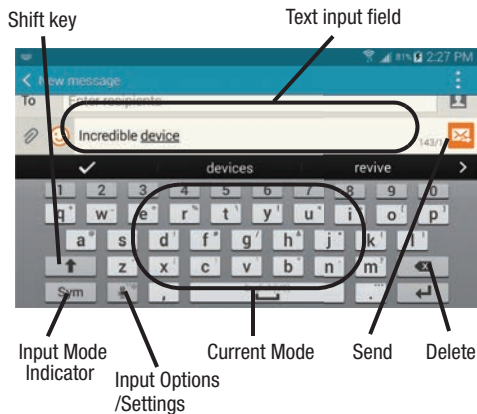



For more detailed information on configuring Samsung Keyboard settings, see “*Samsung Keyboard settings*” on page 113.

Entering Text using Different Input Options

Although the default text input method with the Samsung keyboard is to use the onscreen keys you have other options.

Note: To access settings, touch and hold the **Input Methods** button , then tap  (**Settings**) then select it from the available options.


1. From within an active message, tap the text input field to reveal the onscreen keyboard.
2. Tap  (**Input Methods**) to use the default Voice typing input method to convert your spoken words to onscreen text.
– or –
Touch and hold  to select from other input methods such as:
 - **Voice to text** to launch the device's Google Voice typing application to covert spoken words into onscreen text.
 - **Handwriting** to launch an onscreen handwriting area that can be used to convert onscreen patterns (text) to text.

- **Clipboard** to launch the device's clipboard area from where you can select a current clipboard item to place in your current message.
- **Settings** to access the Samsung keyboard settings menu.
- **Emoticons** to access the available Emoticons pages.
- **Keyboard alignment** to detach the on-screen keyboard so that you can manually dock it anywhere on the current text entry screen. Selecting the feature again re-docks the keyboard into its original location using the original size.

Changing the Text Input Mode in Keyboard

1. From a screen where you can enter text, tap the text input field to reveal the onscreen keyboard.
2. With Samsung keyboard as your text entry method, select one of the following text mode options:
 - **Alphabetic** **ABC** : to use alphabetic characters from the onscreen keyboard. In this mode, the text mode button displays **Sym** .
 - **Symbol/Numeric** **Sym** : to enter numbers by pressing the numbers selecting them on the onscreen keyboard. In this mode, the text mode button displays **ABC** .

There are up to 2 available pages of numeric symbols available by tapping **1/2** .

Note: After typing an initial uppercase character, tap  to toggle capitalization.



All lowercase

Displays when the next character is entered in lowercase.



Initial Uppercase

Displays when the first character of each word is entered as uppercase but all subsequent characters are lowercase.





All Uppercase




Displays when all characters will be entered as uppercase characters.

By default, the first letter of a new entry is capitalized and the following letters are lower-cased. After a character is entered, the cursor automatically advances to the next space.

Using ABC Mode in Samsung Keyboard

1. From a screen where you can enter text, tap the text input field to reveal the onscreen keyboard.
2. Tap **ABC** to configure the keyboard for ABC mode. Once in this mode, the text input type shows **Sym**.

Note: After typing an initial uppercase character, the  key changes to  and all letters that follow are in lower case.

3. Enter your text using the onscreen keyboard.
 - If you make a mistake, tap  to erase a single character.
 - Touch and hold  to erase an entire word.
4. Tap  **Send** to deliver the message.

Using Symbol/Numeric Mode

Use the Symbol/Numeric Mode to add numbers, symbols, or emoticons. While in this mode, the text mode key displays **ABC**.

1. From a screen where you can enter text, tap the text input field to reveal the onscreen keyboard. Rotate the phone counterclockwise to a landscape orientation, if desired.
2. Tap **Sym** to configure the keyboard for Symbol mode. Once in this mode, the text input type shows **ABC**.
3. Tap a number, symbol, or emoticon character.
4. Tap **ABC** to return to ABC mode.

 
To enter symbols:

1. Tap **Sym** to configure the keyboard for Symbol mode.
2. Tap the appropriate symbol key.
 - or —
 - Tap **1/2** button to cycle through additional pages.
 - The first number on this key indicates which page (1 or 2) of additional characters is active.

Entering Text Using Swype

Swype™ is a text input method that allows you to enter a word by sliding your finger or stylus from letter to letter, lifting your finger between words. Swype uses error correcting algorithms and a language model to predict the next word. Swype also includes a tapping predictive text system.


The following example shows how to enter the word “This”. Put your finger down on the “T”, and without lifting, glide it to the “h”, then to the “i” then over to the “s”.

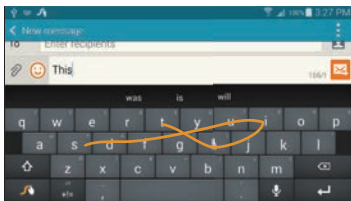

Enabling and Configuring Swype

The Samsung keyboard is the default text input method, so to use Swype, you must first change the default keyboard setting.

To enable Swype:

1. From a screen where you can enter text, touch the top of the screen and drag it down to display your Notification panel.
2. Tap  (Choose input method).
3. Tap the **Swype** radio button. It will turn green.

The Swype keyboard is displayed.

Swype Settings

For information on how you can configure your Swype settings, see “*Swype Keypad Settings*” on page 115.

Swype Text Entry Tips

You can access the SwypeTips application and watch a video or tutorial on using Swype. You can also use the following Swype text entry tips.




- Create a squiggle (like an S shape) to create a double letter (such as pp in apple).

- Touch and hold a key to view the punctuation menu then make a selection.
- Move your finger or stylus over the apostrophe to enter contractions.
- Double-tap on the word you want to change to correct a misspelled word, then tap the delete key to erase one character. Touch and hold the delete key to erase an entire word.



Section 3: Call Functions

This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

Displaying Your Phone Number


- Tap  **Apps** →  **Settings** →  **About device** → **Status**. Your phone number is displayed in the **My phone number** field.

Making a Call

1. From the Home screen, tap  **Phone** and use the onscreen keypad to enter the number you wish to dial.
2. Tap  to make the call.

Note: When you activate the **Auto retry** option in the Voice Call menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. For more information, refer to “*Call Settings*” on page 60.

Quick Dialing a Number from the Contacts List

 
1. From the Home screen, tap  **Contacts**.
2. Locate a contact from the list.
3. In a single motion, touch and drag your finger over the number by going to the right. This action places a call to the recipient.

Running a Call in the Background


 


If you exit the current call screen and return to the Home screen, you are visually notified that you are still on an active call by the phone icon within the Status bar.

This is the best way to stay on your current call and do something else (multi-task) such as access the Contacts list, view a recent email, locate a picture, and so on.

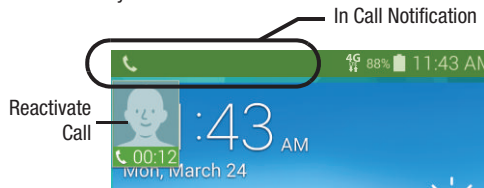- Tap the onscreen reactivate button to return to the currently active call.





Making an International Call


1. From the Home screen, tap  **Phone**, then touch and hold . The + character appears.
2. Use the onscreen keypad to enter the country code, area code, and phone number.
 - If you make a mistake, tap  until the desired numbers have been deleted.
3. Tap  to make the call.

Manual Pause Dialing

To manually call a number with pause(s) without storing it in your Contacts list:

1. From the Home screen, tap  **Phone** and use the onscreen keypad to enter the phone number.
2. Tap  to display the dialer sub-menu.
3. Tap **Add 2-sec pause** to add a three second pause, and use the keypad to enter the additional numbers.



Tip: You can create pauses longer than two seconds by entering multiple two second pauses.

4. Select **Add wait** to add a wait. A wait will pause the calling sequence until you enter a number or press a key.
5. Tap  to make the call.

(For more information, refer to “Adding Pauses to Contact Numbers” on page 62.)




Correcting an Entered Number

Use the following steps to correct a mis-typed entry when dialing.


- After entering a number using the keypad:
 - If you make a mistake, tap  to erase a single character.
 - Press and hold  to erase the entire string of numbers.

Dialing a Recent Number


All incoming, outgoing and missed calls are recorded in the **Call log**. If the number or caller is listed in your Contacts List, the associated name is also displayed.

1. From the Home screen, tap  **Phone**.
2. Tap the  **Logs** tab.
A list of recent calls is displayed.
3. Tap the desired Contact to enter the **Details** page, then tap  to make a call.

Ending a Call




- When you are ready to end your call, tap the  key.

Ending a Call from the Status Bar

1. From an active call, you can launch a separate application or return to the Home screen. The current call is kept active in the background.
2. Tap the Status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel.
3. Tap  **End** to end the currently active call.

Answering a Call

When a call is received the phone rings and displays the caller's phone number, or name if stored in the Contacts List.

1. At the incoming call screen:
 - Touch and drag  in any direction to answer the call.
 - Touch and drag  in any direction to reject the call and send it to your voicemail.
2. Tap  to end the call.

Note: You can answer a call while using the Contacts List or other menu feature. After ending the call, the phone returns to the previously active function screen.



Making Emergency Calls

The Emergency calling mode makes redialing an emergency number a 1-tap process. Before you can resume normal calling operations, you should first exit this mode.



Note: This mode can drain your battery power more rapidly than normal calling mode.

Making an Emergency Call without a SIM card

Without a SIM card, you can only make an emergency call with the phone; normal cell phone service is not available.






1. From the Lock screen, tap **Emergency call**.
2. Enter **911** and tap .
3. Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.
4. Tap  to exit this calling mode.

Making an Emergency Call with a SIM card



1. From the Home screen, tap  **Phone**.
2. Enter the emergency number (example: 911), then tap .
3. Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.





Making a Call Using Speed Dial

You can assign a short cut number to a phone number in your Contacts List for speed dialing.

1. From the Home screen, tap  **Contacts** to display your Contacts List.
2. Tap  to display the Contacts List sub-menu.
3. Tap **Speed dial**.
4. The **Speed dial** screen displays showing the numbers 1 through 100. The number 1 is reserved for Voicemail.
5. Tap an unused number and a list of your contacts displays.
6. Tap a contact to assign to the number. The selected contact's name and number will display in the speed dial number box.
7. To remove a speed dial number assignment, tap  (**Remove**).
8. To make a call using Speed Dial, tap  →  **Keypad** and from the Dialer, touch and hold the speed dial number. If the speed dial number is more than 1 digit long, enter the first few digits, then touch and hold the last digit.

Dialing Options


From the Home screen and Application menus, you have the option to access the Dialer and initiate a call by tapping  **Phone** →  **Keypad**. From the Phone and the Contacts screens, the following tabs are located at the top of your screen:

-  **Keypad**: dials the current number entered using the onscreen keypad.
-  **Logs**: displays a list of all dialed, received, and missed calls.
-  **Favorites**: displays your contacts that you have marked as Favorites.
-  **Contacts**: takes you to your Contacts List where you can select a contact to call.

After you begin to enter numbers, the **Add to contacts** option appears so you can save the Contact if needed.

Call Log



The phone stores the numbers of the calls you've dialed, received, or missed in the Call log. The Call log displays the details of the call.

1. From the Home screen, tap  **Phone**.

2. Tap the  **Logs** tab.



A list of recent calls is displayed. If the number or caller is listed in your Contacts List, the associated name is displayed.

All calls made, received, and missed are listed. Types of calls are identified by the following icons:

- **Incoming Calls:** 
- **Outgoing Calls:** 
- **Missed Calls:** 
- **Rejected Calls:** 
- **Auto Rejected Calls:** 

Calling Back a Missed Call

To call back a missed call number:

1. From the Home screen, tap  **Phone** →  **Logs**.



A list of recent calls is displayed. If the number or caller is listed in your Contacts List, the associated name is displayed.

2. Swipe the desired missed call to the right to call.

 
– or –


Swipe the desired missed call to the left to message.

Saving a Recent Call to your Contacts List

1. From the Home screen, tap  **Phone** →  **Logs**.

A list of recent calls is displayed.

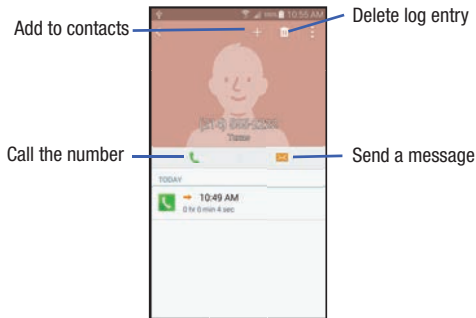

2. Tap the call you want to save to your Contacts List. The call detail page displays.
3. Tap  (**Add to contacts**) to add the call to your Contacts List.

Tap **Create contact**. The Create contact screen is displayed.

– or –

If you want to replace the number for an existing contact, tap **Update existing**.


4. Enter information into the various fields using the keypad.
5. Tap **Save** to save when you are finished.

(For further details about the **Contacts List** feature, see “Adding a New Contact” on page 61.)

Sending a Message to a Recent Call




1. From the Home screen, tap  **Phone** →  **Logs**.

A list of recent calls is displayed.




2. Swipe the entry you want to message to the left.
3. At the Message screen, tap the empty text field and use the onscreen keypad to type in a message.
4. When you are done with your message, tap  to send.

(For more information, refer to “Creating and Sending Messages” on page 73.)





Deleting a Call from the Call Log

1. From the Home screen, tap  **Phone** →  **Logs**.
A list of recent calls is displayed.
2. Touch and hold the call you want to delete from the Call log.
3. Tap  (**Delete**).
4. At the **Delete log** prompt, tap **OK**.
The call is deleted from the Call log.

Adding a Call to the Reject List

1. From the Home screen, tap  **Phone** →  **Logs**.
A list of recent calls is displayed.
2. Touch and hold the call you want to add to the Reject List.
3. Tap  → **Add to reject list**.
4. At the **Add to reject list** prompt, tap **OK**.
Future calls from this number will be rejected and sent to your voicemail.

Call Duration

1. From the Home screen, tap  **Phone** →  **Logs**.
2. Tap  → **Call duration**.
3. The following times are displayed for Voice and Data:
 - **LAST CALL**: shows the length of time for the last call.
 - **DIALED CALLS**: shows the total length of time for all calls made.
 - **RECEIVED CALLS**: shows the total length of time for all calls received.
 - **ALL CALLS**: shows the total length of time for all calls made and received.
4. You may reset these times to zero by tapping  then tapping **Reset**.


Options During a Call

Your phone provides a number of control functions that you can use during a call.

Adjusting the Call Volume

During a call, to adjust the volume, use the **Volume** keys on the left side of the phone.

- Press the **Up** volume key to increase the volume level and press the **Down** volume key to decrease the volume level.
— or —


Quickly add more volume to the incoming audio by tapping  → **Extra volume**. A check mark appears in the check box.

From the Home screen, you can also adjust the ringer volume using these same keys.

In-Call Options


During an active call there are several functions available by tapping a corresponding onscreen button.

- **Add call:** displays the dialer so you can call another person.
- **Keypad:** displays the onscreen keypad, where you can enter number using DTMF (Dual Tone Multi-Frequency).
- **End call:** terminates the call.
- **Speaker:** routes the phone's audio through either the speaker or through the earpiece.
 - Tap **Speaker** to route the audio through the speaker. (You can adjust the speaker volume using the volume keys.) A green line will appear under the Speaker button.
 - Tap **Speaker** again to use the phone's earpiece (see “*Using the Speakerphone During an Active Call*” on page 58). The green line will disappear when Speaker is not activated.
- **Mute/Unmute** turn the onboard microphone either on or off.
 - Tap **Mute** during a call to mute the microphone. A green line will appear under the Mute button.
 - Tap **Mute** again to unmute the microphone. The green line will disappear when Mute is not activated.

- **Bluetooth** connects to a Bluetooth headset.
 - Tap **Bluetooth** during a call to activate a Bluetooth headset. A green line will appear under the Headset button.
 - Tap **Bluetooth** again to de-activate the Bluetooth headset. The green line will disappear when the Headset is not activated.
- Tap  for more options:
 - **Contacts**: allows you to go to your Contact list.
 - **Memo**: allows you to write a memo.
 - **Messages**: allows you to write a message during a call.

Personalizing the Call Sound Setting

During a call it may be necessary to adjust the sound of the incoming call by selecting an audio equalizer setting for the current call.

1. From the currently active call, tap  **Menu** → **Personalize call sound**.


Note: If prompted to enable the feature via the Call settings menu, go to **Settings** → **Call** → **Personalize call sound**.

2. Select an available option.
Choose from: Adapt sound, Soft sound, Clear sound, and Off.

Placing a Call while in a Call

If your network supports this service, you can make another call while a call is in progress.

To make a new call while a call is in progress:


1. From the currently active call, tap **Add call** to dial the second call. The first call is reduced to a thumbnail window.
2. Dial the new phone number and tap  **Call**.

To switch between the two calls:

- Tap **Swap**. The first call now fills the screen, and the second call is reduced to a thumbnail window.

Switching Between Calls



You can answer another call while you have a call in progress if you have activated your Call waiting feature. Otherwise, the other call will go to your Voicemail box. For more information, refer to “Additional settings” on page 136.

1. Tap  and slide to the right to answer another call.
2. Tap **Putting “Name/Number” on hold** to put the first call on hold.
— or —

Tap **Ending call with “Name/Number”** to end the first call.




3. To switch between the two calls, tap **Swap**.
 - **Swap**: Places the current call on hold and then activates the previous call. The active call will appear in a green box. Tap **Swap** again to switch back.

To end a call on hold:

1. Tap  to disconnect the active call.
2. The call on hold will now become the active call. Tap  to end the call.

Using the Speakerphone During an Active Call

While in an active call, it is possible to enable the speakerphone feature.


1. Tap **Speaker**  .
The **Speaker** button now appears as  and the speakerphone is activated.
2. Use the **Volume** keys (located on the left side of your phone) to adjust the volume.
3. To deactivate the speakerphone, tap **Speaker**  .


Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

1. Tap **Mute** .


The **Mute** button now appears as  and Mute is activated.


2. Tap **Mute**  to deactivate the Mute function and reactivate the microphone.

Bluetooth Headset


1. Tap **Bluetooth** .

2. The phone will scan for your Bluetooth headset. When found, connect to the headset.

The **Bluetooth** button now appears as  and the Bluetooth headset is activated.

3. Tap **Bluetooth**  to deactivate the Bluetooth headset and reactivate the phone speaker.

Searching for a Number in Contacts List

1. During the active call, tap  then tap **Contacts**.
2. Tap the Contacts List entry.


For further details about the **Contacts List** feature, see “*Finding an Contacts list Entry*” on page 63.

Call waiting


You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have previously set the Call waiting option to **Activate**.

You are notified of an incoming call by a call waiting tone.

To answer a new call while you have a call in progress:

1. In a single motion, touch  and slide it in any direction to answer the new incoming call.
2. Tap an option from the Accept call after menu:
 - **Putting xxx on hold** to place the previous caller on hold while you answer the new incoming call.
 - **Ending call with xxx** to end the previous call and answer the new call.

Note: The new caller appears at the top of the list. The previous caller is placed on hold and appears at the bottom of the list.






3. Tap the onscreen previous **On hold** number entry and select  **Swap** to switch between the two calls. This places the new caller on hold and activates the previous call.

Important! The currently active call is displayed with a green background.

4. Tap  **Swap** again to switch back.

Call Settings

To access the Call settings menu:

- From the Home screen, tap  **Phone** →  → **Settings** → **Call**.
– or –
- From the Home screen, tap  **Apps** →  **Settings**, under **APPLICATIONS**, tap  **Call**.

(For detailed information on all of the call settings, see “Call” on page 133.)



Section 4: Contacts

This section allows you to manage your daily contacts by storing their name and number in your Contacts list. Contacts list entries can be sorted by name, entry, or group.

Adding a New Contact

Use the following procedure to add a new contact to your Contacts list.

Saving a Number from the Home screen


1. From the Home screen, tap  **Contacts** → .
2. At the **Save contact** prompt, tap on **Device** or an Account name.
3. Tap the image icon and assign a picture to the new entry by choosing one of three options:
 - **Image:** retrieve a previously stored image from your Gallery or from your My files folder and assign it to this entry. Tap an image to assign the image to the contact, then tap **Done**.
 - **Tagged pictures:** retrieve a previously tagged image from your Gallery.

- **Take picture:** use the camera to take a new picture and assign it to this entry, then tap **Done**.
- **Remove:** although not an option with a new entry, deletes any previously assigned image on an existing contact.

4. Tap the **Name** field and use the onscreen keypad to enter the full name. (For more information, refer to “Entering Text” on page 41.)
– or –

Tap  next to the **Name** field to display additional name fields.


5. Tap the **Phone number** field.
The numerical keypad is displayed.

The **Mobile** button  initially displays next to the **Phone number** field. If you want to add a phone number that is not a mobile number, tap the **Mobile** button and select from the other phone number types.

6. Enter the phone number.

Tap  to add another Phone number field or tap  to delete a field.

7. Tap **Email address** . The keyboard displays.

The **Home** button  initially displays next to the **Email** field. If you want to add an Email address that is not a Home email address, tap the **Home** button and select another Email address type.

8. Enter the Email address.

Tap  to add another Email address field or tap  to delete a field.

9. Tap any of the following fields that you want to add to your new contact:



 
- **Groups:** assign the contact to Not assigned, Favorites, ICE - emergency contacts, Co-workers, Family, or Friends.
- **Ringtone:** adds a field used to assign a message tone that will sound when messages are received from this contact.
- **Add another field:** tap this button to add additional fields.

10. Tap **Save** to save the new contact.

Adding Pauses to Contact Numbers



When you call automated systems, you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses and waits. A pause will stop the calling sequence for two seconds and a wait will pause the calling sequence until you enter a number or press a key.

To add a pause or a wait to an existing Contact:

1. From the Home screen, tap  **Contacts**, and then tap the name or number to open the Contact.
2. Tap  to edit.
3. Tap the phone number field.
4. Tap the screen at the position where the pause or wait needs to be added.
5. Tap .
6. Tap **Pause** to add a two-second pause or tap **Wait** to add a wait, and use the keypad to enter the additional numbers. A pause will be displayed as a comma (,) and a wait will be displayed as a semi-colon (;).
7. Tap **Save** to save your changes, or tap **Cancel** to discard.

Editing an Existing Contact

When editing an existing contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From the Home screen, tap  **Contacts**.
2. Tap the Contact that you want to edit.
3. Tap  to edit.
4. Tap any of the fields to add, change, or delete information.
5. Tap **Save** to save the edited information.

Using Contacts


Dialing or Messaging from Contacts list

Once you have stored phone numbers in the Contacts list, you can dial them easily by using the Search field to locate the entry.

From the Contacts list, you can also send messages.

Finding an Contacts list Entry

Contact names and their corresponding phone numbers are saved in your phone's onboard memory and/or with your selected account(s).

1. From the Home screen, tap  **Contacts**.
2. Within the Contacts list (sorted alphabetically), tap a letter on the right side of the display to quickly jump to the contacts beginning with that letter.
3. Tap the contact you wish to call or message.
4. Tap the phone icon to make a phone call or tap the message icon to send a message.

(For more information, refer to “*Creating and Sending Messages*” on page 73.)

Tip: From the Contact list, sweep right over a listing to make a call. Sweep left over a listing to send a message.

Linking Contacts

Linking Contact Information


Many people now maintain multiple email accounts, social networking accounts, and other similar account information. For example, a Facebook account login name might differ from a corporate email account login because they are maintained separately and for different groups of people.

This device can synchronize with multiple accounts such as Facebook, Twitter, MySpace, Corporate email, and Google. When you synchronize your phone with these accounts, each account creates a separate contact entry in the Contacts list.


If one of your contacts (Amy Smith, for example) has a regular email account that you maintain in Gmail, but also has a Facebook account under her maiden and married name, as well as a Yahoo! chat account, when you merge these accounts into your Contacts list you can link all of her entries and view the information in one record.

The next time you synchronize your phone with your accounts, any updates that contacts make to email account names, email addresses, and so on automatically update in your contacts list.

(For more information about synchronizing accounts, see *"Synchronizing Accounts"* on page 66.)

1. From the Home screen, tap  **Contacts**.
2. Tap a contact name (the name you want to link to another entry).

Note: Typically this is the same contact with a different name or account information.


3. Tap  → **Link contacts**.

The contact list is displayed.


Note: Only contacts stored on your phone can be linked.

4. Tap the second contact entry (the entry in which to link). The second contact is now linked with the first and the account information is merged into one screen.



Note: The information is still maintained in both entries, but displays in one record for easier viewing when you link the contacts.

5. Tap the link icon  under the **Connection** bar to view the contact information you joined. The contacts and information displays with an icon next to the contact name to indicate what type of account information is contained in the entry.

Unlinking a Contact



1. From the Home screen, tap  **Contacts**.
2. Tap a contact name (the account name from which you want to unlink an entry).

Note: Typically this is the same contact with a different name or account information.

3. Tap the link icon  under the **Connection** bar.
4. Tap the minus sign  next to entry in which you want to unjoin.
5. At the **Separate contact** prompt, tap **OK**.
The contact is now separated and no longer displays in the merged record screen.


Marking a Contact as Default

When you use messaging type applications, the application needs to know which information is primary (default) in a contact entry list. For example, you may have three different contact records for John Smith, so the application will be looking for the “default” number or entry.


1. From the Home screen, tap  **Contacts**.
2. Tap a Contact name.
3. Tap  → **Mark as default**. The Mark as default screen displays radio buttons next to the contact names or phone numbers of all the linked contacts. The radio button next to the default contact will be green.
4. To change the default contact, tap the radio button next to another entry that you want to be the default. The radio button will turn green, then tap **Save**.

Synchronizing Accounts

From the Accounts menu you decide if you want applications to synchronize, send, and receive data at any given time, or if you want the applications to synchronize automatically. After determining how you want the accounts to synchronize, indicate which account to synchronize with your Contacts list.

1. From the Home screen, tap  **Contacts**.
2. Tap  → **Settings** → **Contacts** → **Accounts**.

If you have previously added any accounts, the **Sync settings** prompt is displayed with your current accounts listed.



3. Tap an account that you would like to synchronize.
4. At the **Sync settings** screen, tap the options that you would like to synchronize for that account.
5. Tap **Sync now** to synchronize the account.
The account is synchronized.
6. Tap  to return to the Contacts list.



Note: You can also synchronize your accounts using the Settings menu. (For more information, refer to “*Synchronizing Accounts*” on page 111.)

Contacts list Options

You can access Contacts list options while at the main Contacts list page or while in the details page for a specific entry.

Options in Contacts list



1. From the Home screen, tap  **Contacts** then tap .
2. The following options are displayed:
 - **Select:** allows you to select entries by placing a check mark alongside a desired entry.
 - **Delete:** allows you to delete one or more of your selected contacts.

- **Business cards:** allows you to create new business cards or access previously photographed business cards.
 - Tap  →  to begin framing and then photographing a new business card. This process automatically imports that information and updates either an existing contact or creates a new one.
- **Merge accounts:** allows you to merge all of your current Contact entries with either your active Google or Samsung account. If several of your contacts are from other external sources, this allows you to “back them up” or copy them to your Samsung account. Tap **OK** to continue or **Cancel** to exit.
- **Speed dial:** allows you to set up speed-dialing.
- **Send message or email:** allows you to send a text /picture message or an email using your Google account.
- **Link contacts:** allows you to link the current contact to another current contact. Similar to a “see also” feature. If you can’t remember a contact’s information, linking entries can help you find the person you are looking for.
- **Settings:** allows you to configure where you access either Call or Contacts settings.
 - **Call:** provides quick access to the Phone settings menu.

- **Contacts:** provides access to Contacts options such as Import/Export, Contacts to display, etc.

- **Help:** provides an on-screen Help file that covers most high level topics for Contacts.



Options at Selected Contact Screen

1. From the Home screen, tap  **Contacts**.
2. Tap a contact and at the contact’s display screen, tap .
3. The following options are displayed:
 - **Delete:** allows you to delete the currently active entry.
 - **Link contacts:** allows you to link the current contact to another current contact.
 - **Unlink contacts:** allows you to unlink contacts that have been linked. This option only appears if the contact has been linked.
 - **Mark as default:** allows you to mark one entry in a contact record to use as the default. For more information, refer to “*Marking a Contact as Default*” on page 65.
 - **Share name card:** allows you to send contact information as an attachment using various applications.




- **Send contact information:** allows you select specific elements of an existing contact (name, Mobile number, email, etc.) and send them to a recipient via a text message. This option does not send the entire Contact entry but only selected elements.
- **Add to reject list:** allows you to add an entry's number to the reject list.
- **Add shortcut to home screen:** adds a shortcut to the current Contacts entry to an available screen location.

Groups

Adding a Contact to a Group




1. From the Home screen, tap  **Contacts**.
2. Tap the Contact that you want to add to a group.
3. Tap  to edit.
4. Tap **Groups**.
5. Tap the group that you would like to add the contact to. You may select as many groups as you like.
6. Tap **Save**.
7. After returning to the main edit screen, tap **Save** again. The contact is added to the group.

Removing a Contact From a Group

1. From the Home screen, tap  **Contacts** →  (**Groups**).
2. Tap a group entry.
3. Tap  → **Remove from group**.
4. Tap all of the contacts you want to remove from this group. A green checkmark will appear next to their name.
5. Tap **Done**.

The contacts are now removed from the group, but remain in your Contacts list.




Creating a New Group

1. From the Home screen, tap  **Contacts** →  (**Groups**) →  (**Create group**).
2. Tap the **Group name** field and use the onscreen keypad to enter a new group name. (For more information, refer to “*Entering Text*” on page 41.)
3. Tap **Group ringtone** to choose a ringtone for assignment to this new group. Tap a ringtone to hear how it sounds, then tap **OK**.
– or –
Tap **Add** to select a ringtone from your music files.
4. Tap **Group message tone** to choose an alert tone for assignment to this new group, then tap **OK**.
5. Tap **Group vibration pattern** to choose a vibration audio file for assignment to this new group, then tap **OK**.
– or –
Tap **Create** and follow the onscreen instructions to create your own vibration pattern.

6. Tap **Add member** to add contacts to the new group.
7. Tap each contact you want to add to create a checkmark. You can also tap **Select all**.
8. Tap **Done**.
9. Tap **Save** to save the new Group category.

Editing a Group



To edit a Group entry, there must be at least one member as part of the selected group.

1. From the Home screen, tap  **Contacts** →  (**Groups**).
2. Tap a group entry.
3. Tap  → **Edit group**.
4. Make modifications to the **Group name**, **Group ringtone**, **Group message tone**, **Group vibration pattern**, or **Vibration pattern** fields.
5. Tap **Add member** to add more contacts to this group.
6. Tap **Done**.
7. Tap **Save** to save the edited Group category.




Favorites

Once you have stored phone numbers in the Contacts list, you can add them to your Favorites list.


To view your Favorites list:

- From the Home screen, tap  **Contacts** →  **Favorites**.

Adding Favorites to your Contacts list

1. From the Home screen, tap  **Contacts** →  **Favorites**.
2. Tap  (**Add to favorites**).
3. When the Contacts list is displayed, tap a contact that you want to add to your favorites list. You may select more than one.
4. Tap **Done**.
5. A gold star will appear next to the contact image in the Contacts list.

Removing Favorites from your Contacts list

1. From the Home screen, tap  **Contacts**.
2. Within the Contacts list, tap a contact that you want to remove from your favorites list. Contacts in your Favorites list will have a gold star.
3. Tap the gold star on the top of the display.
4. The gold star will change to a white star and the contact is removed from your Favorites list. The gold star will no longer appear next to the contact image in the Contacts list.

Managing Contacts



You can export your contact list to and from USB storage or an installed memory card. Contacts are exported and imported as a special VCF file, and contacts are sent as vCards.

Exporting Contacts to Memory

Note: When storing a Contacts list entry into your phone's USB memory or to a microSD memory card, only the name, phone number, and email address are available as fields. Also, if you move a memory card to another phone that does not support additional fields on the memory card, this additional information may not be available.


1. From the Home screen, tap  **Contacts** →  → **Settings** → **Contacts** → **Import/Export**.
2. Tap **Export to USB storage** or **Export to SD card**.
3. At the **Confirm export** prompt, tap **OK** to export.

Importing Contacts to the Phone


1. From the Home screen, tap  **Contacts** →  → **Settings** → **Contacts** → **Import/Export**.
2. Tap **Import from USB storage** or **Import from SD card**.
3. At the **Save contact to** prompt, tap **Device** or an account name that you would like to copy the contact to.
4. At the **Select vCard file** prompt:
 - To import one contact, tap **Import vCard file**.
 - To import multiple selected contacts, tap **Import multiple vCard files**.
 - To import all contacts, tap **Import all vCard files**.
5. Tap **OK** to copy.
6. At the **Select vCard file** prompt, tap **OK** to copy. The selected vCards are copied.

Deleting Contacts list Entries from the Phone

You can delete Phone or account contact entries from your phone's memory.

1. From the Home screen, tap  **Contacts**.
2. Within the Contacts list, touch and hold a contact that you want to delete.

The contact list displays with the contact checked.

3. Tap  **Delete** on the displayed list.
4. At the **Delete contact** prompt, tap **OK** to delete the contact or **Cancel** to exit.

Section 5: Messaging

This section describes how to send and receive different messages using the default Messages app on your phone.

Types of Messages

Your default Messages app provides the following message types:

- Text Messages
- Multimedia (Picture, Video, and Audio) Messages

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.



The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.




Important! When creating a message, adding an image, a sound file, or a video clip to a text message changes the message from a text message to a multimedia message.


Messaging icons are displayed at the top of the screen and indicate when messages are received and their type. For more information, refer to “*Indicator Icons*” on page 20.

Creating and Sending Messages

This section describes how to create a send a message using the Messages app.




1. From any Home screen panel, tap  **Messages** →  **(Compose)**.

Note: The main Home screen initially contains the  **Messages** shortcut. If you delete it, you must tap  **Apps** →  **Messages**.

2. Tap on the **Enter recipients** field to manually enter a recipient or tap  to select a recipient from your Contacts. You can also select the recipient based on Groups, Favorites, or Logs.
3. If adding a recipient from your Contacts, tap the contact to place a checkmark then tap **Done**.
The contact will be placed in the recipient field.

Note: For the Group option, if the number of recipients is less than 10, all members in the group will be added. You will need to delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.



Note: Enter additional recipients by separating each entry with a semicolon (;) then using the previous procedure.

4. Tap the **Enter message** field and use the onscreen keypad to enter a message. (For more information, refer to “*Entering Text*” on page 41.)
5. To add an attachment to your message, tap . (For more information, refer to “*Adding attachments to a message*” on page 76.)
6. Tap  **Add emoticons** to choose an available emoticon from an on-screen list and then add it into your message (at the cursor location) if desired.
7. Review your message and tap **Send** .


Note: If you exit a message before you send it, it will be automatically saved as a draft.

Message Options

Options before composing a message

1. From the main Home screen, tap **Messages** .
2. Before composing a message, tap  to reveal additional messaging options:
 - **Select:** allows you to select desired messages.
 - **Delete:** deletes the entire message and its bubbles.
 - **Draft messages:** displays the draft messages folder and its contents.
 - **Locked messages:** displays the locked messages folder and its contents.
 - **Scheduled messages:** displays the scheduled messages folder and its contents.
 - **Spam messages:** displays the spam messages folder and its contents.
 - **Font size:** allows you to configure the font size in use within your Messages application.
 - **Settings:** allows you to access Messages settings. (For more information, refer to “*Messages Settings*” on page 79.)
 - **Help:** lets you view descriptions of the Messages functions.

Options while composing a message


1. While composing a message, tap  to reveal additional messaging options.
 - **Delete:** allows you to delete any message thread. Select the messages to delete and a green check mark will appear next to the message. Tap **Delete**.
 - **View contact:** displays contact recipient's Contacts entry information.
 - **Add to contacts:** allows you to add a recipient number to either a new or existing Contacts entry.
 - **Quick responses:** displays your available preset text message reply templates.
 - **Add subject:** converts an SMS message into an MMS (Multimedia) message and allows you to enter a subject.
 - **Preview** (only in MMS): allows you to view the MMS message as the recipient(s) will see it, before sending it.
 - **Add slide:** converts an SMS message into an MMS (Multimedia) message and allows you to add an additional “page” of text to your message.

- **Schedule message:** allows you to schedule a time for the current message to be delivered.
- **Duration (5 sec)** (only in MMS): allows you to change the duration of the image slideshow.
- **Layout (bottom)** (only in MMS): allows you to change the layout.
- **Add/Remove to priority sender list:** assigns or removes the current recipient's phone number to/from a priority list for message delivery.

Note: Priority senders appear at the top of the main Messages screen.

- **Discard:** closes the current open message.
- **Font size:** allows you to configure the font size in use within your Messages application.

Adding attachments to a message


To add an attachment to your message, tap  and select one of the following options:

- **Image:** allows you to tap an existing image from your Pictures list to add it to your message.

- **Take picture:** allows you to temporarily exit the message, take a photo with phone's camera, and then add it to your message by tapping **Save**.
- **Video:** allows you to choose an existing video from the Videos list, then add it to your message.
- **Record video:** allows you to temporarily exit the message, record a video clip using the phone's camera, and then add it to your message by tapping **Save**.
- **Audio:** allows you to choose an existing audio file from the Audio list, then add it to your message by tapping the circle to the right of the audio so that it turns green, then tapping **Done**.
- **Record audio:** allows you to temporarily exit the message and record an audio clip using the phone's microphone. It is then automatically attached to the message.
- **Memo:** allows you to add a memo that you have created.
- **Calendar:** allows you to add an event from your calendar.
- **My location:** allows you to attach a Google Maps URL location indicating your current location.
- **Maps:** allows you to attach both a thumbnail and Google maps url link about your current location.

- **Contacts:** allows you to tap on an existing Contacts List entry, then add it to your message by tapping **Done**.



Viewing New Received Messages

1. When you receive a new message, the new message  icon will appear at the top of your screen.
2. Open the Notification Bar and select the message. (For more information, refer to “*Notification Panel*” on page 39.)

– or –

From a Home screen panel, tap  **Messages** then tap the new message to view it.

The selected message appears in the display.

3. To play a multimedia message, tap  .
 - To pause playback of the multimedia message, tap .
4. To scroll through the message (if additional text pages have been added), touch the screen and in a single motion, scroll up or down the page.

Message Threads

Sent and received text and picture messages are grouped into message threads. Threaded messages allow you to see all the messages exchanged (similar to a chat program) and displays a contact on the screen. Message threads are listed in the order in which they were received, with the latest message displayed at the top.

To access message thread options:


- From the main Messages screen, touch and hold the message to display the following options:
 - **Delete:** deletes the currently selected message thread.
 - **Add to spam numbers:** adds the current sender to a spam list. Any new texts from this sender are automatically blocked.

To access additional Bubble options:



- Touch and hold the message bubble within an active message conversation to display the following options:
 - **Delete:** deletes any currently selected message bubble from the thread.
 - **Copy text:** copies the currently selected message bubble or message text from the thread.
 - **Forward:** allows you to forward the currently selected message bubble to an external recipient.
 - **Lock/Unlock:** locks or unlocks the currently selected message bubble from being accidentally deleted.
 - **Share:** Post a copy of this message using Add to Dropbox, Bluetooth, ChatON, Copy to clipboard, Drive, Email, Flipboard, Gmail, Google+, Hangouts, Memo, Messages, or Wi-Fi Direct.
 - **View message details:** displays details for the currently selected message bubble.

Deleting Messages

Deleting a single message thread




1. From a Home screen panel, tap  **Messages**.
2. Touch and hold a message, then tap  (**Delete**).
3. At the **Delete conversation** prompt, tap **OK** to delete or **Cancel** to cancel.

Deleting multiple message threads

1. From a Home screen panel, tap  **Messages**.
2. Tap  → **Delete**.
3. Tap each message you want to delete. A checkmark will appear beside each message you select.
4. Tap **Done**.
5. At the **Delete conversation** prompt, tap **OK** to delete or **Cancel** to cancel.



Message Search

You can search through your messages by using the Message Search feature.

1. From a Home screen panel, tap  **Messages**.
2. Tap  (**Search**).
3. Use the onscreen keypad to enter a word or phrase to search for, then tap .
4. All messages that contain the search string you entered are displayed.

Messages Settings

To configure the settings for text messages, multimedia messages, Voice mails, and Push messages.

1. From a Home screen panel, tap  **Messages** →  → **Settings**.
2. The following Messages settings are available:
 - **Default messaging app** field to set your default messaging application.
 - **Display** alters the display properties for Messages.
 - **Bubble style:** allows you to choose from several bubble styles for your messages. Bubbles are the rounded boxes that surround each message.

- **Background style:** allows you to choose from several background styles for your messages.
- **Change font size:** allows you to change the text size by using the up or down volume keys.
- **Quick responses:** allows you to edit or add new quick responses to use in your messages.
- **Text messages** alters the SMS settings.
 - **Delivery reports:** when this option is activated, the network informs you whether or not your message was delivered.
- **Multimedia messages** alters the MMS settings.
 - **Group conversation:** allows you to send a single message to multiple recipients.
 - **Delivery reports:** when this option is activated, the network informs you whether or not your message was delivered.
 - **Auto retrieve:** allows the message system to automatically retrieve messages.
 - **Roaming auto retrieve:** Automatically retrieve messages while roaming.
 - **MMS alert:** alerts you when the message mode changes from an SMS (text) to MMS (multimedia) mode.

- **Delete old messages:** deletes old messages when the limit is reached, rather than overwriting them.
- **Priority senders:** enables or disables the priority sender feature.
- **Notifications:** allows you to see message notifications on your status bar.
- **Emergency alerts:** allows you to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS). (For more information, refer to “*Emergency Alerts*” on page 81.)
 - **Emergency alerts:** select which types of Emergency alerts you want to receive: Extreme alerts, Severe alerts, or Amber alerts.

Note: Presidential alerts are required to be received. You cannot disable this option.

- **Emergency notification preview:** allows you to play the emergency alert tone so you will know what to expect when an alert is received.
- **Vibrate:** enables or disables vibration with Emergency alerts.

- **Alert sound:** enables or disables playing the Emergency alert tone with Emergency alerts.
- **Alert reminder:** allows you to set reminders after you receive an alert. You can select Once, Every 2 minutes, Every 15 minutes, or Off (default).
- **Signature** configures message signatures. Touch and slide the slider to the right to turn it on .
- **Edit signature:** allows you to enter a desired signature for your message.
- **Spam filter:** when enabled, allows you to configure available spam settings such as:
 - **Add to spam numbers:** allows you to manually enter and assign a phone number as being sent from a spam source.
 - **Add to spam phrases:** allows you to assign a specific text phrase as belonging to a spam message. Ex: Dear friend.
 - **Block unknown senders:** when active, automatically blocks incoming messages from unknown sources or blocked numbers.

- **Delay message sending:** allows you to set a time delay limit that determines how long the messages are held until they are sent. This can allow you to cancel the delivery of a recent message.
- **Safe mode:** allows you to set security parameters for Messages. Choose from Allow access to all links and Potential threat alerts.
- **Callback number:** When set to on, includes your phone's number in your messages as a callback number.

Emergency Alerts

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS) which may also be known as the Personal Localized Alerting Network (PLAN). If your wireless provider has chosen to participate in CMAS/PLAN, alerts are available while in the provider's coverage area. If you travel outside your provider's coverage area, wireless emergency alerts may not be available. For more information, please contact your wireless provider.

Emergency Alerts allows customers to receive geographically-targeted messages. Alert messages are provided by the US Department of Homeland Security and



will alert customers of imminent threats to their safety within their area. There is no charge for receiving an Emergency Alert message.

There are three types of Emergency Alerts:

- Alerts issued by the President
- Alerts involving imminent threats to safety of life (Extreme and Severe)
- AMBER Alerts (missing child alert)

Note: Alerts issued by the President can not be disabled.



Customers may choose not to receive Imminent Threats (Extreme and Severe) and AMBER Alerts. Alerts issued by the President can not be disabled. To disable Imminent Threats and AMBER Alerts, follow the instructions below:

1. From a Home screen panel, tap  **Messages**.
2. Tap  → **Settings** → **Emergency alerts**.
3. Tap **Emergency alerts**.
4. All alerts are enabled by default (checkmark showing). Tap on an alert option to disable the alert and remove the checkmark.

Section 6: Changing Your Settings

This section explains the settings used for customizing your device.

Accessing Settings

- From any Home screen panel, tap  **Apps** →  **Settings**.

The **Settings** screen displays.

Settings Categories

The Settings are divided into 9 main categories. When the Settings screen displays, the following 9 category headings are listed. Scroll down to view all of the headings:


- **QUICK SETTINGS:** are the most frequently used settings by the average person. You can modify your Quick settings so your most frequently used settings are at the top of the list. (For more information, refer to *“Quick Settings” on page 83.*)
- **NETWORK CONNECTIONS:** all of the settings related to the connection of your device to external sources.
- **CONNECT AND SHARE:** all of the settings that are related to sharing information with other devices.

- **SOUND AND DISPLAY:** these settings are related to the sounds, colors, display appearance, and notifications on your phone.
- **PERSONALIZATION:** allows you to customize your phone the way you like it.
- **MOTION:** these settings are for the different motions and gestures you can use to make using your phone easier.
- **USER AND BACKUP:** all of the settings used for accounts, backing up your phone, and resetting your phone.
- **SYSTEM:** these settings are concerned with setting up the system on your phone.
- **APPLICATIONS:** the settings used for managing your applications.

Note: The settings for your device are described in this section in the order that they appear within the Settings menu with the exception of the Frequently used settings.

Searching the Settings

If you are not sure exactly where to find a certain setting, you can use the Setting search feature.

1. From the **Settings** screen, tap .
2. Enter a word or words in the Search box. As you type, settings that match will appear on the screen.
3. Tap an entry to go to that setting.

Note: If the word you entered does not find any matches, **No results found** will be displayed.

Quick Settings


Quick settings are all of the settings that you are most likely to use frequently. When you first access the **Settings** menu, the Quick settings are set to a default list of settings.

- **Wi-Fi** (See “*Wi-Fi Settings*” on page 84.)
- **Download booster** (See “*Download booster*” on page 85.)
- **Bluetooth** (See “*Bluetooth*” on page 85.)
- **Data Usage** (See “*Data Usage*” on page 88.)
- **Sound** (See “*Sound settings*” on page 94.)
- **Display** (See “*Display settings*” on page 97.)
- **Wallpaper** (See “*Wallpaper*” on page 98.)

- **Lock screen** (See “*Lock Screen settings*” on page 99.)
- **Notification panel** (See “*Notification panel*” on page 101.)
- **Finger Scanner** (See “*Finger Scanner*” on page 107.)
- **Safety Assistance** (See “*Safety assistance*” on page 120.)
- **Power saving mode** (See “*Power saving mode*” on page 122.)

Changing the Quick Settings



To change the Quick settings list to include your most frequently used settings, follow these steps:

1. From the **Settings** screen, tap  → **Edit quick settings**.
2. Scroll thru all of the settings and tap the settings icons that you want in your Quick settings menu. The settings that are already in the Quick settings menu are highlighted. Tap a highlighted item to remove it from the Quick settings menu.
3. Tap **Save** to save your new Quick settings menu.

Wi-Fi Settings




This section describes the Wi-Fi settings. (For information on how to use Wi-Fi, see “*Wi-Fi*” on page 148.)

Activating Wi-Fi

1. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .
3. Your phone will automatically scan for available Wi-Fi networks. (For more information, refer to “*Connect to a Wi-Fi Network*” on page 149.)



Activating Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

1. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .
3. Tap  → **Wi-Fi Direct**.
(For more information, refer to “*Wi-Fi Direct*” on page 151.)

Advanced Wi-Fi Settings

The advanced Wi-Fi settings allow you to set up and manage wireless access points.

1. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
2. Tap  → **Advanced**.



The following options are available:

- **Network notification:** alerts you when a new WAP is available.
- **Passpoint:** allows you to connect to passpoint-enabled Wi-Fi Access Points automatically. Tap the check box to turn it on.
- **Sort by:** allows you to sort by Alphabet or Signal strength.
- **Keep Wi-Fi on during sleep:** allows you to specify when to disconnect from Wi-Fi.
- **Always allow scanning:** allows the Google location service and other apps to scan for networks, even when Wi-Fi is turned off.
- **Install certificates:** allows you to install security certificates that you have on a MicroSD card.
- **MAC address:** view your device's MAC address, required when connecting to some secured networks (not configurable).
- **IP address:** view your device's IP address.

Download booster

With the Network booster, you can download large files by using your Wi-Fi and your mobile network at the same time.





Important! Download booster can handle large amounts of data using the mobile network and could result in additional data charges.

1. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Download booster**.
2. Tap the ON/OFF slider, located to the right of the **Download booster** field, to turn it ON .
3. At the **Download booster** pop-up, tap **OK**.

Bluetooth

In this menu you can activate Bluetooth, view or assign a device name, activate your phone so other Bluetooth devices can discover it, or scan for other, available Bluetooth devices with which to pair.

Activating Bluetooth





1. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Bluetooth**.
2. Tap the ON/OFF slider, located to the right of the **Bluetooth** field, to turn Bluetooth ON .
The Bluetooth icon  is displayed on the status bar.
3. Your phone automatically scans for nearby discoverable devices. After scanning, tap a device to pair with it. (For more information, refer to “*Pairing Bluetooth Devices*” on page 155.)
4. Tap  and select a Bluetooth setting to configure:
 - **Visibility timeout:** Use this setting to control when to automatically turn off the Discoverable option: 2 minutes, 5 minutes, 1 hour, or Never time out.
 - **Received files:** Shows the list of files received by using Bluetooth.
 - **Rename device:** Change the name of your device.
 - **Help:** Provides additional information on Bluetooth and Bluetooth settings.
5. Tap the checkbox next to **Galaxy S5** if you do not want your phone visible to other Bluetooth devices.

Tethering and Wi-Fi hotspot

This option allows you to share your phone's mobile data connection via USB or as a portable Wi-Fi hotspot.

Portable Wi-Fi Hotspot

Note: To enable Wi-Fi Hotspot on your phone, dial 611 or go to att.com/mywireless to set up the service.

1. From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **Tethering and Wi-Fi hotspot**.
2. Tap **Portable Wi-Fi hotspot**.
3. Turn Mobile Hotspot on by tapping the slider so that it changes to the ON position .
The Mobile Hotspot icon  is displayed at the top of your screen.
4. Tap  → **Configure**.
5. Enter or edit the Network SSID, Hide my device, Security setting, and Password.
6. Tap **Show password** and **Show advanced options** to see them displayed.
7. Tap **Save**.

8. Tap  for the following option:

- **Timeout settings:** allows you to set the time your device will be available as a portable Wi-Fi hotspot.

For more information, refer to “*Portable Wi-Fi hotspot*” on page 158.



Connecting to your Wi-Fi hotspot from other devices

1. Activate Wi-Fi on the device that wants to connect to your phone.
2. Find **SAMG900R4XXXX** in the Wi-Fi network list and connect to it. XXXX are four randomly generated digits that will appear when you set up a Portable Wi-Fi hotspot on your device.

The connected device can now use internet through your Portable Wi-Fi hotspot.


Note: Activating Wi-Fi and connecting to your phone will be different depending on the type of the other device.

USB tethering

1. From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **Tethering and Wi-Fi hotspot**.
2. Connect your phone to your PC using a USB cable.
3. Tap **USB tethering** to add a checkmark and activate the feature. The USB tethering icon  is displayed at the top of your screen.

(For more information, refer to “USB Tethering” on page 157.)

Bluetooth tethering




1. From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **Tethering and Wi-Fi hotspot**.
2. Connect your phone to your PC using a Bluetooth connection.
3. Tap **Bluetooth tethering** to add a checkmark and activate the feature. The Bluetooth tethering icon is displayed at the top of your screen.

(For more information, refer to “USB Tethering” on page 157.)

Airplane mode


Airplane mode allows you to use many of your phone's features, such as Camera, Games, and more, when you are in an airplane or in any other area where making or receiving calls or data is prohibited.

Important! When your phone is in Airplane Mode, it cannot send or receive any calls or access online information or applications.

1. From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **Airplane mode**.
2. Turn Airplane mode on by tapping the slider so that it changes to the ON position  .
The Airplane mode icon  is displayed at the top of your screen.


Data Usage

From this screen you can view your Mobile data usage and turn your Mobile data capability On or Off.

1. From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **Data usage**.
2. Tap **Mobile data** to create a checkmark and turn Mobile data usage on.
3. Tap **Set mobile data limit** to create a checkmark and allow a data limit to be set.
4. Touch and drag the orange limit bar to the GB limit that you desire.
5. Tap the **Data usage cycle** drop-down menu and select a date.


The data usage displays as a visual (chart) and also displays a list of each application with a breakdown of how much data was used per application.

Note: Data is measured by your device. Your service provider may account for data usage differently.

6. Tap  to display additional options. Tap to activate.
 - **Data roaming:** enables data roaming on your device.
 - **Restrict background data:** restricts some apps and services from working unless you are connected to a Wi-Fi network.
 - **Auto-sync data:** allows your accounts to automatically sync
 - **Show Wi-Fi usage:** displays a Wi-Fi tab that shows Wi-Fi usage.
 - **Mobile hotspots:** displays available mobile hotspots.

Location

The Location settings allow you to set up how the phone will determine your location and the sensor settings for your phone.

1. From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **Location**.
2. The menu is separated into various sections:
 - **Mode**: allows you to choose a location mode. Each mode enables different technologies and affects both the accuracy of the location and battery usage.
 - **RECENT LOCATION REQUESTS**: displays services that have recently requested your location information.
 - **Google Location Reporting**: when set to On, reports your location to apps and web sites that request it, provided you provide approval. With **Location History** set to On, saves up to 100 most recent locations.
 - **My places**: allows you to add location information for your Home, Office, and Car.

More networks


This option displays additional Connectivity information.

- From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **More networks**.

Options display for Airplane mode, Mobile networks, Tethering and portable hotspots, and VPN.

Default messaging app

This option allows you to set the default messaging app that you can use to send all of your messages.


- From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **More networks** → **Default messaging app** and make a selection.

Mobile networks

Set options for network selection and data service.

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Mobile networks options.

Important! Depending on your service plan, changes you make to mobile networks settings may incur extra charges. Consult Customer Service for information.

1. From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **More networks** → **Mobile networks**.
2. Set these options:
 - **Mobile data:** Enable or disable your device's connection to the mobile data network. You can also control this setting at Notifications with the Mobile data toggle.
 - **Data Roaming:** Enable or disable connection to data services when your device is roaming on another network.
 - **Network mode:** Choose a Preferred network mode.
 - **System select:** Changes the CDMA roaming mode. Select **Home only** or **Automatic**.



VPN settings

The VPN settings menu lets you set up and manage Virtual Private Networks (VPNs).

Important! Before you can use a VPN you must establish and configure one.



Adding a Basic VPN

Before you add a VPN you must determine which VPN protocol to use: PPTP (Point-to-Point Tunneling Protocol), L2TP (Layer 2 Tunneling Protocol), L2TP/IPSec PSK (Pre-shared key based L2TP/IPSec), or L2TP/IPSec CRT Certificate based L2TP/IPSec).

1. Before using VPN, you must first set up a screen unlock PIN or password. For more information, refer to “*Lock Screen settings*” on page 99.
2. From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **More networks** → **VPN**.
3. Tap **Basic VPN**.
4. Tap  **(Add VPN network)**.
5. Enter a name for the VPN network in the **Name** field.
6. Select a VPN type from the **Type** drop-down menu.

7. Enter the Server address and any other required fields that are dependent upon the **Type** you entered previously.
8. Tap the **PPP encryption (MPPE)** check box to enable encryption.
9. Tap the **Show advanced options** check box to display additional VPN options.
10. Tap **Save** to save your VPN settings.



Adding an IPsec VPN

1. Before using VPN, you must first set up a screen unlock PIN or password. For more information, refer to “*Lock Screen settings*” on page 99.
2. From the **Settings** screen, under **NETWORK CONNECTIONS**, tap  **More networks → VPN**.
3. Tap **Advanced IPsec VPN**.
4. Tap  **(Add IPsec VPN network)**.
5. Enter a password, confirm the password, and tap **OK**.
6. Enter a name for the VPN connection in the **VPN connection name** field.
7. Select an **IPsec connection type** from the drop-down menu.
8. Enter any other required information.
9. Tap **Show advanced options** to display additional VPN options.
10. Tap **Save** to save your VPN settings.

NFC



NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as Android Beam and S Beam.

To activate NFC, follow these steps:

1. From the **Settings** screen, under **CONNECT AND SHARE**, tap  **NFC**.
2. Tap the ON/OFF slider, located to the right of the NFC field, to turn NFC ON .



Android Beam

When Android Beam is activated, you can beam app content to another NFC-capable device by holding the devices close together. You can beam browser pages, YouTube videos, contacts, and more.

1. From the **Settings** screen, under **CONNECT AND SHARE**, tap  **NFC → Android Beam**.
2. Tap the **OFF / ON** icon to turn Android Beam ON .
3. Touch the back of your device with another NFC-capable device and the content is transferred.


S Beam

When S Beam is activated, you can beam files to another NFC-capable device by holding the devices close together. You can beam images and videos from your Gallery, music files from your Music app, and more.

1. From the **Settings** screen, under **CONNECT AND SHARE**, tap  **NFC → S Beam**.
2. Tap the **OFF / ON** icon to turn S Beam on .
3. Touch the back of your device with another NFC-capable device and the content is transferred.




Tap and pay

Tap and pay allows you to select the default payment application you want to use for making on-phone purchases.

1. From the **Settings** screen, under **CONNECT AND SHARE**, tap  **NFC → Tap and pay**.
2. Select the app that you want as your default.

Nearby devices




This option allows you to share your media files with nearby devices using Wi-Fi, Wi-Fi Direct, and Wi-Fi hotspot.

1. Connect to a Wi-Fi network. For more information, refer to *“Activating Wi-Fi” on page 84*.
2. From the **Settings** screen, under **CONNECT AND SHARE**, tap  **Nearby devices**.
3. Tap the **OFF / ON** icon to turn Nearby devices on .
Verify  (**Nearby devices**) appears at the top of the screen in your status bar.
4. Tap **Shared contents**, then check the media you would like to share. Tap **OK**.
5. Tap **Allowed devices**, then select the connected devices you would like to allow.
6. Tap **Denied devices**, then select the connected devices you would like to not allow.
7. Tap **Download to**, then select the destination of any downloaded (shared) content. Choose from Device or SD card.

8. Tap **Download from other devices**, then select the actions you'll take when you download content from other devices. Choose from either Always accept, Always ask, or Always reject.

Printing


With the Printing option, you can set your device to print on compatible Samsung Wi-Fi printers.

1. From the **Settings** screen, under **CONNECT AND SHARE**, tap  **Printing**.
2. Tap **Samsung Print Service Plugin**.
3. Tap the ON/OFF slider, to turn Printing ON .
Your device will search for compatible printers.
4. Follow the onscreen instructions.
5. Tap  for additional options.

Screen Mirroring


The Screen Mirroring feature allows you to share the media files on your device screen with an HDMI device such as an HDMI TV.

Note: This feature requires the optional AllShare Cast dongle which is available as an accessory. Contact your Wireless Provider for more information.

1. From the **Settings** screen, under **CONNECT AND SHARE**, tap  **Screen Mirroring**.
2. Connect the AllShare Cast dongle to the HDMI device using an HDMI A-to-A cable.
3. Tap **Scan** to scan for available devices.

Sound settings


From this menu you can control the sounds on the phone.

- From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound**.

The following options display:


Sound mode

Sound mode allows you to select Sound, Vibrate, or Mute to be used for all sounds.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound → Sound mode**.
2. Select the option that you would like to use for all of your sounds.


Volume

The Volume option allows you to change the volume for all phone sounds in one easy location.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound → Volume**.
2. Touch and drag the sliders to adjust the sound volume for the various options.
3. Tap **OK**.


Vibration intensity

Vibration intensity allows you to select how intense the vibration is for different options.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound** → **Vibration intensity**.
2. Touch and drag the slider to adjust the Vibration intensity for the various options.


Ringtones

This option allows you to set the ringtone.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound**.
2. Tap **Ringtones**.
3. Tap a ringtone and tap **OK**.
– or –
Tap **Add** to select a file from your music files.


Vibrations

This option allows you to set your phone to vibrate and ring.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound** → **Vibrations**.
2. Select a vibration pattern and tap **OK**.
– or –
Tap **Create** and follow the onscreen instructions to create your own vibration.


Notifications

This option allows you to set the ringtone that will sound for notifications and alarms.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound** → **Notifications**.
2. Tap a ringtone and tap **OK**.


Vibrate when ringing

This option allows you to enable your phone to vibrate whenever it rings.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound** → **Vibrate when ringing** to create a checkmark and enable the feature.


System Tone Settings

The System tone settings are used when you use the dialing pad, make a screen selection, lock your screen, or tap the screen.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound**.
2. Under **FEEDBACK**, tap any of the following options to create a checkmark and activate the feature:
 - **Dialing keypad tone**: makes a sound when you tap a key on the keyboard.
 - **Touch sounds**: makes a sound when you touch the screen.
 - **Screen lock sound**: makes a sound when your screen is locked or unlocked.
 - **Haptic feedback**: makes a vibration when you tap soft keys and on certain UI interactions.
 - **Emergency tone**:


Samsung Keyboard Sound Settings

The Samsung keyboard sound settings are used when you use the dialing pad, make a screen selection, lock your screen, or tap the screen.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound**.
2. Under **SAMSUNG KEYBOARD**, tap any of the following options to create a checkmark and activate the feature:
 - **Sound when tapped**: makes a sound when you tap a key on the Samsung keyboard.
 - **Vibrate when tapped**: makes a vibration when you tap a key on the Samsung keyboard.


Samsung Application Sound Settings

This section describes how to modify sound settings associated with several frequently used apps.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound**.
2. Under **SAMSUNG APPLICATIONS**, tap one of the following apps to access the settings:
 - **Call**: allows you to modify settings for call alerts, ringtone and sound settings, and Voicemail sound settings.
 - **Messages**: allows you to modify settings for the Messaging app.
 - **Email**: allows you to modify settings for your Email accounts.
 - **Calendar**: allows you to modify settings for event notification in your Calendar app.
3. Follow the onscreen instructions to update your app sound settings.


Music effects

Music effects allows you to set the Music effects control panel that will be used when you play music on your phone.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Sound** → **Music effects**.
2. Select the option that you would like to use for your Music effects control panel.


Display settings

In this menu, you can change various settings for the display.

- From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Display**.

The following options display:


- **Brightness**: configures the LCD Brightness levels. Tap Automatic brightness to allow the phone to self-adjust or drag the slider and tap OK.
- **Font**: allows you to set the font style and font size that your phone will use. You can also tap Get fonts online to choose from a wider selection.
- **Screen rotation**: allows you to switch the display orientation automatically when you rotate the phone.

- **Smart stay:** when activated, your screen stays on as long as you are looking at it.
- **Screen timeout:** allows you to adjust the delay time before the screen automatically turns off.
- **Screen mode:** allows you to select from several different screen modes that affect the color and sharpness of your display.
- **Auto adjust screen tone:** allows you to save power because the phone analyzes the displayed screen image and adjusts the LCD brightness.
- **Daydream:** allows you to control what your screen does when your device is docked or sleeping. Tap the OFF / ON icon next to Daydream to turn it on . Follow the onscreen instructions.
- **LED indicator:** allows you to set up how your LED lights can be used as indicators. Tap the features that you want activated to create a checkmark.
- **Touch key light duration:** allows you to adjust the delay before the Touch key light automatically turns off.

- **Increase touch sensitivity:** allows you to adjust the touch sensitivity of your phone automatically depending on the type of material on the display.

Wallpaper

You can change the Wallpaper (background) of your home and lock screens by following these steps:


1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Wallpaper**.
2. Select the screen or screens that you would like to modify. Select **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Scroll through the wallpaper thumbnails located at the bottom of the screen. Tap the one you want.
4. It is displayed on your screen.
5. Tap **Done**.

The new wallpaper is saved.

Lock Screen settings

Choose settings for unlocking your screen. For more information about using the lock and unlock features, see “*Locking and Unlocking the Touch Screen*” on page 13.


Screen lock

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Lock screen**.
2. Tap **Screen lock** for these options then follow the onscreen instructions to set up your Screen lock:
 - **Swipe**: Swipe the screen to unlock it.
 - **Pattern**: A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change your screen unlock pattern.
 - **Fingerprint**: You can select any finger and use the fingerprint to unlock your screen. Place your finger in the marked area and repeatedly move your finger down over the home key until the bar reaches 100%.
 - **PIN**: Select a PIN to use for unlocking the screen.
 - **Password**: Create a password for unlocking the screen.
 - **None**: No pattern, PIN, or password is required. The screen will never lock.

Lock screen options

Activate or deactivates various Unlock screen functions.




Note: The Lock screen options will differ depending on what type of Screen Lock you have selected in step 2.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Lock screen**.
2. The following options are available depending on the Screen Lock type that you have selected:
 - **Dual clock** displays a dual clock on your lock screen when roaming.
 - **Clock size** allows you to select the size of the clock that will appear on your lockscreen.
 - **Pattern type** allows you to select the colors used to display the unlock pattern. (Pattern option only)
 - **Show date** displays the date on your lockscreen.
 - **Camera shortcut** displays a camera shortcut icon on your lockscreen.
 - **Owner information** displays information about you, that you want to be displayed on the lockscreen.

- **Unlock effect** displays the animated special effect you choose when you unlock the display. (Swipe option only)
- **Additional information** displays Weather on Walking mate (from S Health app) information on your lockscreen.
- **Help text** shows help information on the Lock screen (Swipe option only).
- **Make pattern visible** allows you to see the pattern as you draw it (Pattern and Fingerprint options only).
- **Vibration feedback** causes your phone to vibrate if you enter a wrong pattern (Pattern and Fingerprint options only).
- **Lock automatically** allows you to set a time-out for lock screen. (Pattern, Fingerprint, Pin, and Password options only)
- **Lock instantly with power key** when enabled, lets you lock the screen instantly by press the Power/Lock key on the right hand side of your phone. (Pattern, Fingerprint, Pin, and Password options only)

Multi window

The Multi window feature allows you to run multiple applications on the current screen at the same time. For more information, refer to “Using the Multi Window” on page 25.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Multi window**.
2. Tap the ON/OFF slider, located to the right of the Multi window field, to turn it on .
3. Tap **Open in multi window view** to create a checkmark if you want to automatically have Multi window activated whenever you open files from My Files, Video, or any attachments from emails or messages.
4. From any screen, press and hold  **Back** to show or hide the multi window tray.

Notification panel

The Notification panel includes a pull-down list to show information about processes that are running, recent notifications, and alerts.

- From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Notification panel**.

(For more information, refer to “Notification Panel” on page 39.)


Toolbox

This feature allows you to customize a quick access feature that hold up to five frequently used application shortcuts. Once activated, this onscreen button can be placed anywhere. This button appears atop off current screens and can only be disabled via either the Notifications Panel or via the Toolbox screen.

(For more information, refer to “Customizing the Toolbox” on page 31.)



Important! There can only be at most five applications assigned to the quick access Toolbox button.

To activate the Toolbox:


1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Toolbox**.
2. In a single motion touch and slide the **Toolbox** slider to the right to turn it on. The slider color indicates the activation status.

When activated, the  **Toolbox access** button appears on the current screen.



– or –

1. From the Notification panel, tap  (**Open Grid view**) to display additional functions.
2. Toggle on  **Toolbox** (turns green).

To deactivate the Toolbox:

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **Toolbox**.
2. In a single motion touch and slide the **Toolbox** slider to the right to turn it off.

– or –



1. From the Notification panel, tap  (**Open Grid view**) to display additional functions.
2. Toggle off  **Toolbox** (turns grey).

To customize the Toolbox applications:

1. From the active Toolbox screen, tap **Edit**.
2. Place a check mark alongside up to five applications. These will be quickly accessible via the on-screen button.
3. Tap **Save** once you have completed the assignment of your applications.


One-handed operation

The one-handed operation settings help you to use your phone keypads easily with only one hand.

1. From the **Settings** screen, under **SOUND AND DISPLAY**, tap  **One-handed operation**.
2. Tap the **OFF / ON** icon next to **One-handed operation** to the right to turn it ON .

Easy Mode

This application allows you to see your display using the default layout or provide an easier user experience for the first-time smartphone users using **Easy mode**.

1. From the **Settings** screen, under **PERSONALIZATION**, tap  **Easy mode**.
2. Tap the **Easy mode** radio button to activate it.
3. Under **EASY APPLICATIONS**, applications that are affected by Easy mode are checked. Tap any application to uncheck if you want the standard display for that application.

Accessibility

Accessibility services are special features to make using the device easier for those with certain physical disabilities. Use the Accessibility settings to activate these services.

Note: You can download accessibility applications from Play Store and manage their use here.

1. From the **Settings** screen, under **PERSONALIZATION**, tap









Accessibility.


2. The following options are available:

- **Vision:**

- **TalkBack:** activate the TalkBack feature. TalkBack, when installed and enabled, speaks feedback to help blind and low-vision users.
- **Dark screen:** allows you to keep your screen turned off at all times until you double press the Power key to turn the feature off. The TalkBack feature must be enabled.
- **Rapid key input:** allows you to release your finger rather than double tapping to enter a selection when using the TalkBack feature.




- **Speak passwords:** reads out password information. The TalkBack feature must be enabled.
- **Font size:** change the size of the fonts used on the device within menus, options, etc. Choose from: Tiny, Small, Normal, Large, or Huge.
- **Magnification gestures:** use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Notification reminder:** plays a beep when you have unread notifications. Touch and slide the slider  to the right to turn it on.
- **Negative colors:** reverse the display of onscreen colors from White text on a Black background to Black text on a White background.
- **Color adjustment:** allows you to adjust the display colors if you are color blind and have difficulty reading the display because of the colors. Touch and slide the slider  to the right to turn it on. Follow the onscreen instructions.

- **Accessibility shortcut:** allows you to quickly enable accessibility features in 2 quick steps. Touch and slide the slider  to the right to turn it on. Follow the onscreen instructions.
- **Text-to-speech options:** allows you to adjust your text-to-speech settings. For more information, refer to “Speech Settings” on page 130.
- **Hearing:**
 - **Flash notification:** allows you to set your camera light to blink whenever you receive a notification.
 - **Turn off all sounds:** allows you to mute every sound made by the device during taps, selections, notifications, etc.
 - **Hearing aids:** allows you to improve the sound quality of your device for use with hearing aids.
 - **Samsung subtitles (CC):** allows you to turn on subtitles when using applicable Samsung apps. Assistant menu: allows you to improve the device accessibility for users with reduced dexterity. Touch and slide the slider  to the right to turn it on. Follow the onscreen instructions.
- **Google subtitles (CC):** allows you to turn on subtitles when using applicable Google apps. Touch and slide the slider  to the right to turn it on. Follow the onscreen instructions.
- **Sound balance:** allows you to use the slider to set the Left and Right balance when using a stereo device.
- **Mono audio:** allows you to enable stereo audio to be compressed into a single mono audio stream for use with a single earbud/earphone.
- **Baby crying detector:** causes your phone to vibrate when a crying baby is detected.
- **Auto haptic:** causes your phone to automatically vibrate in response to the sounds of downloadable apps such as games. Some apps do not support this feature.
- **Dexterity and interaction:**
 - **Assistant menu:** allows you to improve the device accessibility for users with reduced dexterity. Touch and slide the slider to the right to turn it on . Follow the onscreen instructions.
 - **Air wake up:** allows you to turn on your screen by waving your hand over the device when it is lying face up.

- **Smart scroll:** once your eyes have been detected, the screen will scroll according to your device's tilt angle. Tap the slider to the right of the Smart scroll field to activate the feature. With Smart scroll, the screen will scroll depending on the phone's tilt angle once your eyes have been detected.
- **Press and hold delay:** allows you to select a time interval for this action. Choose from: Short, Medium, Long, or Custom.
- **Interaction control:** allows you to enable or disable motions and screen timeout. You can also block areas of the screen from touch interaction. Touch and slide the slider to the right to turn it on . Follow the onscreen instructions.
- **Direct access:** allows you to open the Accessibility settings by pressing the Home key 3 times in quick succession. Select the settings that you want to open to create a checkmark.
- **Answering and ending calls:** allows you to set up the manner in which you accept incoming calls. Tap a selection to create a checkmark.
- **Single tap mode:** allows you to dismiss or snooze alarms, calendar events and timer alerts, and answer or reject incoming calls with a single tap.
- **Manage accessibility:** save and update your accessibility settings or share them with another device. You can export your settings, import a previously saved file, or share your file with another device.
- **No services installed:** indicates no additional accessibility services are installed. Replaced by a list of accessibility services when such services are installed.





Blocking Mode

When Blocking mode is enabled, notifications for selected features will be disabled. You will only receive notifications of incoming calls from people on your allowed list.

1. From the **Settings** screen, under **PERSONALIZATION**, tap  **Blocking mode**.
2. In a single motion touch and slide the **Blocking mode** slider to the right to turn it on . Confirm that the Blocking mode active icon  appears in the Status bar.
3. Place a green checkmark adjacent to the features that you would like to disable.
4. Configure a timeframe for these features to be active. Remove the checkmark from the **Always** field to configure the **From** and **To** time fields.
5. Tap **Allowed contacts** to assign those contacts that are exempted from these rules. Choose from None, All contacts, Favorites, or Custom. Allowed contacts will then appear in the **Allowed contact list**.

Private Mode

This feature allows you to hide personal content from being accessed by anyone else using your device.


1. From the **Settings** screen, under **PERSONALIZATION**, tap  **Private mode**.
2. In a single motion touch and slide the **Private mode** slider to the right to turn it on .
3. Select an unlock method and complete the associated set up process.
4. Confirm  **Private Mode active** appears in the Notifications area.
5. Follow the online instructions to select content files for Private mode protection.
6. After marking content files for as Private mode, disable this mode to hide your Private mode content.
7. To show your hidden content, set **Private mode** to on . To access your Private mode content, unlock it using the method you selected in Step 3.


Finger Scanner

You can use the Finger Scanner feature as an alternative security method for certain actions and as your lockscreen.

Note: In order for fingerprint recognition to function, your fingerprint information will be stored in your phone.

Registering your fingerprints

1. From the **Settings** screen, under **PERSONALIZATION**, tap  **Finger Scanner**.
2. If you did not register your fingerprints when you first set up your phone, tap **Fingerprint manager**.
3. Read the Disclaimer at tap **OK**.
4. Tap on the finger or thumb that you would like to register.
5. Swipe your finger over the Home key from the first knuckle to the tip of the finger. An animated drawing shows you exactly how.
6. Continue to swipe your finger until the progress bar shows 100%.
7. Enter a password to use as an alternative in case your fingerprint is not read correctly.

8. Confirm the password and tap **OK**.
9. Your fingerprint is now registered. Tap  to return to the fingerprint screen.
10. Under the **SETTINGS** heading, the following options are available:
 - **Fingerprint manager:** allows you to register more fingerprints or deregister the fingerprints that are on your phone.
 - **Change alternative password:** allows you to change your alternative password which is used in case your fingerprint is not recognized.
11. Under the **FEATURES** heading the following options are available:
 - **Screen lock:** allows you to sign into websites which support the remember passwords feature. Follow the onscreen instructions.
 - **Verify Samsung account:** allows you to use your fingerprint instead of your password when signing onto your Samsung account. Follow the onscreen instructions.
 - **Pay with PayPal:** allows you to link your PayPal account to your phone to make quick and secure payments using any of your registered fingerprints.



Motions and gestures

The **Motions and Gestures** settings allow you to set up various Motion activation services.

- From the **Settings** screen, under **MOTION**, tap  **Motions and gestures**.



Air browse

Air browse allows you to scroll through pages or go to the next or previous item in a list by moving your hand up and down, or left and right above the sensor located at the middle top of your display.

1. From the **Settings** screen, under **MOTION**, tap  **Motions and gestures** → **Air browse**.
2. In a single motion touch and slide the slider to the right to turn it on .
3. Tap on the applications that you would like to enable to use the Air browse feature. A checkmark will appear.
4. When using a supported application, move your open hand across the screen to use Air browse.



Direct call

With the Direct Call feature, your phone will dial the currently displayed onscreen Contact entry as soon as you place the device to your ear.

1. From the **Settings** screen, under **MOTION**, tap  **Motions and gestures** → **Direct call**.
2. In a single motion touch and slide the slider to the right to turn it on .


 
Smart alert

Once Smart alert is enabled, you can pickup the device to be alerted and notified if you have missed any calls or messages.

1. From the **Settings** screen, under **MOTION**, tap  **Motions and gestures** → **Smart alert**.
2. In a single motion touch and slide the slider to the right to turn it on .



Mute/Pause

Once enabled, you can pause any onscreen video or mute any current sound by simply covering the screen with your hand or turning it over. Once you remove your hand from the screen, the device goes back to normal by either continuing to play the current video or unmuting the current sound.

1. From the **Settings** screen, under **MOTION**, tap  **Motions and gestures** → **Mute/pause**.
2. In a single motion touch and slide the slider to the right to turn it on .
3. Tap the following methods that you want to use to Mute/Pause your phone:
 - **Covering screen with hand:** Place your hand on the screen to mute incoming calls and alarms, or to pause media while the screen is on.
 - **Turning device over:** Turn your phone over to mute incoming calls, message alerts, and alarms, or to pause media.
 - **Smart pause:** uses the front camera to detect if you are facing the screen and pauses a video when you look away.


Capture screen

Once enabled, you can capture any onscreen information swiping across the screen. In a single motion, press the side of your hand on the screen and swipe from left to right.

1. From the **Settings** screen, under **MOTION**, tap  **Motions and gestures** → **Palm swipe to capture**.
2. In a single motion touch and slide the slider to the right to turn it on .
3. You can find the captured screen in the Images section in My Files and in your Gallery.


Air view

When Air view is enabled, it displays helpful information when you hover your finger over the screen.



1. From the **Settings** screen, under **MOTION**, tap  **Air view**.

Accounts

This menu allows you to set up, manage, and synchronize your accounts.

- From the **Settings** screen, under **USER AND BACKUP**, tap  **Accounts**.



Adding an Account

1. From the **Settings** screen, under **USER AND BACKUP**, tap  **Accounts** →  **Add account**.
2. Tap one of the account types.
3. Use the keyboard and follow the prompts to enter your credentials and set up the account.

A green circle will appear next to the account type once you have created an account. Your email account will also be displayed in the **My Accounts** section of the main Accounts menu.




Removing an Account

Important! Removing an account also deletes all of its messages, contacts, and other data from the device.

1. From the **Settings** screen, under **USER AND BACKUP**, tap  **Accounts**.
2. Tap the account which is located in the **My Accounts** section.
3. Tap the account name.
4. Tap  → **Remove account**, then tap **Remove account** at the prompt to remove the account and delete all its messages, contacts, and other data.


Synchronizing Accounts

Select the items you want to synchronize on your account such as Books, Calendar, Contacts, and more.

1. From the **Settings** screen, under **USER AND BACKUP**, tap  **Accounts**.
2. Tap the account which is located in the **My Accounts** section.
3. Tap the account name.
4. Tap  → **Sync now** to synchronize your account or only tap the Sync items that you want to synchronize.
5. Tap  → **Cancel sync** to stop the synchronization.
6. Additional settings are available under the account name of each account depending on the type of account. These may include Profile, Terms and conditions, Help, Storage usage, Search, Locations, Ads, and so on.


Back up and reset

The Back up and reset settings allow you to back up your data, back up accounts, automatically restore your phone, and reset your phone settings to the factory settings.

- From the **Settings** screen, under **USER AND BACKUP**, tap  **Backup and reset**.


Back Up My Data

By setting this option, the Google server will back up all of your settings and data.

1. From the **Settings** screen, under **USER AND BACKUP**, tap  **Backup and reset**.
2. Tap **Back up my data** to enable or disable back up of application data, Wi-Fi passwords, and other settings to the Google server.


Backup Account

If you have enabled the **Back up my data** option, then the **Backup account** option is available.

1. From the **Settings** screen, under **USER AND BACKUP**, tap  **Backup and reset**.
2. Tap **Backup account** and tap your Google Gmail account or tap **Add account** to set your Google Gmail account to be backed up to the Google server.


Automatic Restore

By setting this option, when you reinstall an application, all of your backed up settings and data will be restored.

1. From the **Settings** screen, under **USER AND BACKUP**, tap  **Backup and reset**.
2. Tap **Automatic restore** to enable or disable automatic restoration of settings from the Google server.

Factory Data Reset

From this menu you can reset your phone and sound settings to the factory default settings.

1. From the **Settings** screen, under **USER AND BACKUP**, tap  **Backup and reset**.
2. Tap **Factory data reset**.


The Factory data reset screen displays reset information.

3. Tap **Reset device**, then follow the prompts to perform the reset.

Warning! Performing a Factory data reset will erase all data from your phone and internal SD card, including your Google account, system and application data and settings, and downloaded applications. It will not erase current system software, bundled applications, and external SD card files such as music and photos.


Language and input

This menu allows you to configure the language in which to display the menus. You can also set onscreen keyboard options.

- From the **Settings** screen, under **SYSTEM**, tap  **Language and input**.



Language

You can change the language used by your device by following these steps:

1. From the **Settings** screen, under **SYSTEM**, tap  **Language and input → Language**.
2. Tap a language from the list.

Keyboards and Input Methods



You can change the keyboard used by your device by following these steps:



1. From the **Settings** screen, under **SYSTEM**, tap  **Language and input**.
2. Tap **Default** and select a keyboard.
Select Samsung keyboard or Swype.
3. Tap the  icon next to the input method that you would like to configure the settings for.

4. Based on your selection of input method, the appropriate settings will appear and are explained below.

Samsung Keyboard settings

From this menu you can set Samsung keyboard options.

1. From the **Settings** screen, under **SYSTEM**, tap  **Language and input**.
2. Tap the  icon next to **Samsung keyboard**.
3. Set any of the following options:
 - **Input languages** settings are used to setup the language you will be using for input.
 - **English(US)** is the default language. Whatever language you select in the Select input languages option below, will be displayed here.
 - **Select input languages** sets the input language. Tap a language from the available list. The keyboard is updated to the selected language.
 - **SMART TYPING** settings provide access to additional typing settings.

- **Predictive text** enables predictive text entry mode. This must be enabled to gain access to the advanced settings. Touch and hold to access the advanced settings. Touch and slide the slider to the right to turn it on .
- **Auto replacement** automatically completes or replaces the current word with the most probable word match after tapping the space bar or entering a punctuation mark. Touch and slide the slider to the right to turn it on .
- **My Shortcuts** creates number key shortcuts to enter predefined words or phrases more quickly.
- **Auto capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).
- **Auto spacing** automatically inserts space between words.
- **Auto punctuate** automatically inserts a full stop in a sentence by tapping the space bar twice when using the onscreen QWERTY keyboard.
- **Keyboard swipe** allows you to combine the Samsung keyboard with an additional input method choose from:
 - **None** leaves text input as only via the onscreen keyboard.

— **SwiftKey Flow** like using Swipe, allows you to enter text by sliding your fingers across the onscreen keyboard. This feature is optimized for use with the onscreen QWERTY keyboard.

— **Cursor control** when enabled, allows you to control your on-screen cursor by moving your finger across the keyboard.

— **Flick input** allows you to flick upwards on a key to view symbols and alternative characters.

- **KEY-TAP FEEDBACK** provides feedback functions to be enabled such as:

— **Sound** enables auditory feedback when you tap an onscreen key.

— **Vibration** enables vibration feedback when you tap an onscreen key.




— **Character preview** provides an automatic preview of the current character selection within the text string. This is helpful when multiple characters are available within one key.

— **Press and hold delay:** allows you to select a time interval for this action. Choose from: Short, Medium, Long, or Custom.

- **MORE SETTINGS** provides access to additional access to more settings.
- **Reset settings** resets the keyboard settings back to their original configuration.

Predictive Text Settings



From this menu you can set Predictive Text settings.

1. From the **Settings** screen, under **SYSTEM**, tap  **Language and input**.
2. Tap the  icon next to **Samsung keyboard**.
3. Tap **Predictive text**.
4. Tap the OFF / ON slider, located at the top of the Predictive text screen, to turn it ON .
5. The following options are available:
 - **Live word update** allows the device to automatically update its word database with popular new words every day.
 - **Personalized data**: allows you to use personal language that you have added to make your prediction results better.
 - **Learn from Facebook**: allows you to login to your Facebook account so your phone can learn your Facebook style.
 - **Learn from Gmail**: allows you to login to your Gmail account so your phone can learn your Gmail style.

- **Learn from Twitter**: allows you to login to your Twitter account so your phone can learn your Twitter style.
- **Learn from Messages**: allows your device to learn from your Messages.
- **Learn from Contacts**: allows your device to learn from your Contacts.
- **Clear server data**: deletes anonymous data that is stored on the personalization server.
- **Clear personal data**: removes all personalized data that you have entered.
- **Privacy policy**: click the link to read the privacy policy. Follow the onscreen instructions.

Swype Keypad Settings

To configure Swype settings:

1. From the **Settings** screen, under **SYSTEM**, tap  **Language and input**.
2. Tap the  icon next to **Swype**.
3. Tap **Settings** on the left side of the screen to alter these settings:
 - **Vibrate on keypress**: activates a vibration sensation as you enter text using the keypad.



- **Sound on keypress:** turns on sounds generated by the Swype application.
 - **Pop-up on keypress:** displays the character above the key when typing.
 - **Long-press delay:** set the time needed to select alternate characters.
 - **Show complete trace:** once enabled, sets whether or not to display the complete Swype path.
 - **Auto-capitalization:** automatically capitalizes the first letter of every sentence.
 - **Auto-spacing:** automatically inserts a space between words. When you finish a word, just lift your finger or stylus and start the next word.
 - **Next word prediction:** once enabled, predicts the next word in your text string based on your current text entries.
 - **Show Voice key:** once enabled, displays the Voice icon on your Swype keyboard so you can use the Voice input option.
4. Tap **Themes** on the left side of the screen to access the following options:
- **Portrait keyboard:** allows you to set the Portrait keyboard to Full screen, Mini left, or Mini right.
 - **Landscape keyboard:** allows you to set the Landscape keyboard to Full screen, Mini left, Mini right, or split.
 - **Keyboard height:** allows you to set the keyboard height in both Portrait and Landscape modes.
 - **Word choice list font size:** allows you to change the font size in the word choice list.
5. Tap **My Words** on the left side of the screen to access the following options:
- **Backup & Sync:** allows you to backup your Swype dictionary and sync your Swype dictionary across multiple devices.
 - **Enter activation code:** prompts you to enter the Swype dictionary activation code.
 - **Living Language:** when enabled, this feature automatically updates your Swype dictionary with popular new words.
 - **Social integration:** allows you to learn information from your Facebook, Twitter, and Gmail accounts to help you while using Swype.
 - **Edit my dictionary:** allows you to edit your personal Swype dictionary.
 - **Clear language data:** deletes all of your personal language data, including your words.

- **Contribute usage data:** when enabled, allows the Nuance® application to collect usage data for better word predictions.
 - **Cellular data:** when enabled, activates cellular data usage by the Swype application so it can receive program updates, language downloads, and other related features via your existing data connection.
6. Tap **Languages** on the left side of the screen to activate and select the current text input language. Default language is English. Touch **Download languages**, to download additional languages.
 7. Tap **Gestures** on the left side of the screen to view helpful information on using gestures while using Swype.
 8. Tap **Help** on the left side of the screen to see the following options:
 - **How to Swype:** provides tips on how to learn to use Swype.
 - **Show helpful tips:** once enabled, displays helpful tips and hints as you are using Swype.
 - **Version:** displays the software version information.

9. Tap **Updates** on the left side of the screen to download any new Swype updates. If an update is available, it will display under the updates heading. If no updates are displayed, then check back later to see any available updates.


Google voice typing settings


From this menu you can set Samsung keyboard options.

1. From the **Settings** screen, under **SYSTEM**, tap  **Language and input**.
2. Tap the  icon next to **Google voice typing**.
3. The following options are available:
 - **Choose input languages:** tap on a language that you want to input. Select Automatic to use the local language or select a language from the list.
 - **Block offensive words:** tap to create a checkmark and enable the blocking of recognized offensive words from the results of your voice-input Google typing.
 - **Offline speech recognition:** Enables voice input while offline.

Speech Settings


This menu allows you to set the speech settings for Voice input.

1. From the **Settings** screen, under **SYSTEM**, tap  **Language and input**.
2. Tap **Voice search** to configure the following:
 - **Language**: Choose a language for your voice input.
 - **Speech output**: Sets whether you will use speech output always or only when using hands-free.
 - **Block offensive words**: Enable or disable blocking of recognized offensive words from the results of your voice-input Google searches.
 - **Hotword detection**: Enable to being able to launch voice search by saying the word “Google”.
 - **Offline speech recognition**: Enables voice input while offline.
 - **Bluetooth headset**: allows you to record audio through a Bluetooth headset if available.
3. Tap **Text-to-speech options** and select **Samsung text-to-speech engine** or **Google Text-to-speech Engine**.

4. Tap  next to the preferred TTS engine configure the following settings:
 - **Language**: allows you to set the language for spoken text.
 - **Settings for Samsung text-to-speech engine** allows you to view Open Source Licenses.
 - **Settings for Google Text-to-speech Engine**: allows you to view Open Source Licenses.
 - **Install voice data**: allows you to install voice data for speech synthesis.
5. Scroll down to the **General** section to access the following options:
 - **Speech rate**: Set the speed at which the text is spoken.
 - **Listen to an example**: Play a sample of speech synthesis (available if voice data is installed).
 - **Default language status**: Displays whether or not the default language is supported.
6. Tap **Read notifications aloud** to have the notifications that you select, read aloud when they arrive.


Pointer speed

This option sets your Pointer speed for your mouse or trackpad when you are using a keyboard dock accessory.

1. From the **Settings** screen, under **SYSTEM**, tap  **Language and input**.
2. Tap **Pointer speed** then drag the slider to the right to go faster or to the left to go slower.
3. Tap **OK** to save your setting.

Date and time

This menu allows you to change the current time and date displayed.

1. From the **Settings** screen, under **SYSTEM**, tap  **Date and time**.
2. Tap **Automatic date and time** to allow the network to set the date and time.




Important! Deactivate **Automatic date and time** to manually set the rest of the options.

3. Optional: Tap **Set date** and tap the up and down arrows to set the **Month**, **Day**, and **Year** then tap **Set**.
4. Optional: Tap **Set time** and tap the up and down arrows to set the **Hour**, **Minute**, and **PM/AM**, then tap **Set**.
5. Tap **Automatic time zone** to allow the network to set the time zone.
6. Optional: Tap **Select time zone**, then tap a time zone.
7. Tap **Use 24-hour format** to display time in 24-hour format. If this is not enabled, the phone automatically uses a 12-hour format.
8. Tap **Select date format** and tap the date format type.

Safety assistance

Safety assistance is intended to help users send a quick notice of their approximate location and visual surroundings to the mobile device of an emergency contact chosen in advance.

Important! This feature is only for your convenience and is not intended as, or should it be treated as, a substitute for emergency calls to the authorities.

1. From the **Settings** screen, under **SYSTEM**, tap  **Safety assistance**.
2. At the **Turn on Safety assistance** prompt, tap **OK**. The **Primary contacts** screen displays.
3. Tap  **Create primary contact**.
4. Create a new contact or select from your existing contacts and tap **Save**.
5. Tap  **Back** to return to the main Safety assistance screen.


6. From the main Safety assistance screen, the following options are available:

- **Emergency mode:** allows you to save power during an emergency by using a minimal home screen layout and limiting the number of usable apps. Touch and slide the slider to the right to turn it on .
- **Geo News:** informs you of natural disasters and extreme weather conditions occurring in your vicinity. Touch and slide the slider to the right to turn it on .
- **Send help messages:** helps you send a quick notice of your approximate location and visual/auditory surroundings to the mobile phone of the Emergency contact that you have created. Tap the power keys 3 times in a row to send an emergency message to your emergency contact. You should still make an emergency call to the appropriate authorities if needed. Touch and slide the slider to the right to turn it on . The following additional options are available:
 - **Send pictures:** pictures taken by the front and rear cameras will be sent to your emergency contact when an emergency has been declared (3 quick taps to the power button).

- **Send sound recording:** a sound recording will be sent to your emergency contact when an emergency has been declared (3 quick taps to the power button).
- **Manage primary contacts:** allows you to create or modify your primary contact information.


Accessories

This menu allows you to modify your Dock, S View Cover, HDMI (Audio output) and Power Sharing settings.

1. From the **Settings** screen, under **SYSTEM**, tap  **Accessories**.
2. Tap **Audio output** to set your Audio output to Stereo or Surround.



Battery

See how much battery power is used for device activities.

1. From the **Settings** screen, under **SYSTEM**, tap  **Battery**.
2. Tap the **Show battery percentage** check box to have the battery percentage displayed on your battery charge icon on your status bar.
3. The battery level displays in percentage. The amount of time the battery was used also displays. Battery usage displays in percentages per feature, function, or application.
Tap one of the listed features, functions, or applications to view how it is affecting battery use.

Power saving mode


Power saving mode allows you to manage your phone to conserve power. You can select Power mode to limit performance on your phone to save power or select Ultra power saving mode to save more power by adjusting the screen to use grayscale and limit access to your applications.

1. From the **Settings** screen, under **SYSTEM**, tap  **Power saving**.
2. Tap either **Power saving mode** or **Ultra power saving mode**.
3. Touch and slide the slider to the right to turn your selection ON .
4. Tap any of the options listed under the mode that you selected.

Storage


From this menu you can view the memory allocation for the memory card and USB as well as mount or unmount the SD card.

To view the memory allocation for your external SD card:

1. From the **Settings** screen, under **SYSTEM**, tap  **Storage**.

The available memory displays under the **Total space** and **Available space** headings for both Device memory and SD card.

SD card

1. Tap **Unmount SD card** to unmount your microSD card so that you can safely remove it, then tap **OK**.
— or —
2. Tap **Format SD card** to format your microSD card. This will delete all data on your microSD card including music, videos, and photos.
3. Tap **Format SD card** again.
4. Tap **Delete all** to continue or tap  **Back** to cancel.

Note: The **Format SD card** option is only available when your microSD card is mounted.


Security

The Security settings allow you to determine the security level for your phone.

Encryption

To require a numeric PIN or password to decrypt your phone each time you power it on or encrypt the data on your SD card each time it is connected:

Tip: Make sure your battery is charged more than 80 percent. Encryption may take an hour or more.



1. From the **Settings** screen, under **SYSTEM**, tap  **Security**.
2. You must first set up a screen lock type if you haven't already done so. (For more information, refer to “Screen lock” on page 99.)
3. Tap **Encrypt device**. For more information, read the displayed help screen.
4. Tap **Encrypt external SD card** to enable the encryption on microSD card data that requires a password be entered each time the microSD card is connected.


Find My Mobile

The Find My Mobile options let you secure and locate your phone if it is lost. You can also locate your phone on a map, lock or erase it if you cannot find it, or make the phone ring so that you can hear and locate it.

Note: To use the Find My Mobile options, you must sign on to your Samsung account, if you have not already done so. (For more information, refer to “Creating a Samsung Account” on page 14.)

Setting up Find My Mobile

1. From the **Settings** screen, under **SYSTEM**, tap  **Security**.
2. Under **FIND MY MOBILE**, tap **Remote controls**. You are prompted to enter your Samsung account password.
3. Enter your Samsung account password and tap **Confirm**. The **Introduction to remote controls** screen displays.
4. Read the introductory text and tap **OK**.
5. Touch and slide the **Remote controls** slider to the right to turn it on .


6. Under **LOCATION CONSENT**, tap **Use wireless networks** to enable use of Google's location service. A check mark displays in the check box when this option is enabled.
7. Tap  **Back** to return to the **Security** settings menu.
8. To prevent your phone from being reactivated after being reset, under **FIND MY MOBILE**, tap **Reactivation lock**. A check mark displays in the check box when this option is enabled.

Finding your phone

- To find your missing phone, browse this URL: <http://findmymobile.samsung.com> and follow the prompts. From this web site you can also ring, lock, and/or erase your phone.

Make passwords visible

When enabled, password characters display briefly as you touch them while entering passwords.

1. From the **Settings** screen, under **SYSTEM**, tap  **Security**.
2. Tap **Make passwords visible** to create a checkmark and enable or disable the display of password characters.


Device Administrators

The Device Administration feature allows you to select one or more administration applications that control your device for security purposes (for example, if your phone is lost or stolen). These applications enforce remote or local device security policies.

Some of the features a device administration application might control are:

- Setting the number of failed password attempts before the device is restored to factory settings.
- Automatically locking the device.
- Restoring factory settings on the device.

Note: If a device uses multiple enabled administration applications, the strictest policy is enforced.

1. From the **Settings** screen, under **SYSTEM**, tap  **Security**.
2. Tap **Device administrators**.
3. Select a device administrator and follow the prompts. If no device administrators are listed, you can download them from the Play Store.

Unknown sources

This feature allows you to download and install non-Market applications.

1. From the **Settings** screen, under **SYSTEM**, tap



Security.

2. Tap **Unknown sources**.

A check mark is displayed to indicate it is active.

Warning! Enabling this option causes your phone and personal data to be more vulnerable to attack by applications from unknown sources.

Verify apps

This feature allows you to either block or warn you before installing apps that may cause harm to your phone.

1. From the **Settings** screen, under **SYSTEM**, tap



Security.

2. Tap **Verify apps**.

A check mark is displayed to indicate it is active.

Security policy updates

When you activate this feature, your phone will automatically check for changes to the security policy and download any updates to improve security and service.

1. From the **Settings** screen, under **SYSTEM**, tap



Security.

2. Tap **Security policy updates** to create a checkmark and activate the feature.

Send security reports

When you activate this feature, your phone will automatically send security reports to Samsung via Wi-Fi for threat analysis.

1. From the **Settings** screen, under **SYSTEM**, tap




Security.

2. Tap **Send security reports** to create a checkmark and activate the feature.


Storage type

This option allows you to select where you will back up your credentials.

1. From the **Settings** screen, under **SYSTEM**, tap  **Security** → **Storage type**.
2. Select the backup storage location for your credentials.

Trusted Credentials

If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From the **Settings** screen, under **SYSTEM**, tap  **Security**.
2. Tap **Trusted credentials**.

The trusted credentials screen has two tabs:

- **System:** Displays CA certificates that are permanently installed in the ROM of your device.
 - **User:** Displays any CA certificates that you installed, for example, in the process of installing a client certificate.
3. Tap a CA certificate to examine its details.
A scrolling screen displays the details.

4. Scroll to the bottom of the details screen and tap **Turn off** to disable a System certificate.


Caution! When you disable a system CA certificate, the **Turn off** button changes to **Turn on**, so you can enable the certificate again, if necessary.

5. Tap **OK** to return to the certificate list.
When enabled, a check mark appears in the check box.

Install from phone storage

Install encrypted certificates from an installed memory card.


Note: You must have installed a memory card containing encrypted certificates to use this feature.

1. From the **Settings** screen, under **SYSTEM**, tap  **Security**.
2. Tap **Install from phone storage**, then choose a certificate and follow the prompts to install.

Clear credentials

Clear stored credentials.

Note: This setting only appears if you have installed encrypted certificates.

1. From the **Settings** screen, under **SYSTEM**, tap  **Security**.
2. Tap **Clear credentials** to remove all certificates.

Help


Review tips and guidelines for using your device.

- From the **Settings** screen, under **SYSTEM**, tap  **Help**, then tap **New features**, **Getting started**, **Applications**, or **Settings**.

About Device

This menu contains legal information, system tutorial information, and other phone information such as the model number, firmware version, baseband version, kernel version, and software build number.

To access phone information:

1. From the **Settings** screen, under **SYSTEM**, tap  **About device**.
2. The following information displays:
 - **Software update:** allows you to update your phone software, if available. For more information, refer to “*Software Update*” on page 129.
 - **Status:** displays the Battery status, Battery level (percentage), Network, Signal strength, Mobile network type, Service state, Roaming status, Mobile network state, the phone number for this device (My phone number), MIN number, PRL version, IMEI number, ICCID number, IP address, Wi-Fi MAC address, Bluetooth address, Up time, and Device status.


- **Legal information:** This option displays information about Open source licenses, Google legal information, Samsung legal information, and Safety information. This information clearly provides copyright and distribution legal information and facts as well as Google Terms of Service, Terms of Service for Android-powered Phones, and much more pertinent information as a reference. Read the information and terms, then tap  **Back** to return to the **Settings** menu.
- **Report diagnostic info:** allows you to report diagnostic information when you have technical problems.
- **Device name:** displays the phone's model name.
- **Model number:** displays the phone's model number.
- **Android version:** displays the android version loaded on this handset.
- **Baseband version:** displays the baseband version loaded on this handset.

- **Kernel version:** displays the kernel version loaded on this handset.
- **Build number:** displays the software, build number.
- **SE for Android status:** displays the Security Enhancement status of your device.
- **Hardware version:** displays the hardware version number.
- **Security software version:** displays the version of the latest security software.

Note: Baseband, kernel and build numbers are usually used for updates to the handset or support. For additional information please contact your Service Provider.

Software Update


The Software update feature enables you to use your phone to connect to the network and download any new phone software directly to your phone. The phone automatically updates with the latest available software when you access this option.

1. From the **Settings** screen, under **SYSTEM**, tap  **About device** → **Software update**.
2. At the **Software update** prompt, tap **OK** to continue.
3. The phone automatically updates the software (if available), otherwise, when the **Software update** prompt displays **The latest updates have already been installed**, tap **OK**.
4. When updating software, once the update file is downloaded, you can delay the update on the start screen by postponing it for a certain period of time. If you want to resume the update before the selected time, tap **Continue update**.

Application Manager


You can download and install applications from Play Store or create applications using the Android SDK and install them on your device. Use Application manager settings to manage applications.

Warning! Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

- From the **Settings** screen, under **APPLICATIONS**, tap  **Application manager**.

Memory Usage




See how memory is being used by Downloaded or Running applications.

1. From the **Settings** screen, tap  **Application manager**.
2. Tap **DOWNLOADED**, **SD CARD**, **RUNNING**, or **ALL** to display memory usage for that category of applications.

The graph at the bottom of the Downloaded tab shows used and free device or USB storage memory. The graph at the bottom of the Running tab shows used and free RAM.

Downloaded

Displays apps you have downloaded onto your device.



1. From the **Settings** screen, under **APPLICATIONS**, tap  **Application manager**.
2. Tap the **DOWNLOADED** tab to view a list of all the downloaded applications on your device.
3. To switch the order of the lists displayed in the Downloaded tabs, Tap  → **Sort by size** or **Sort by name**.
4. To reset your application preferences, Tap  → **Reset app preferences**.

Note: This will reset the preferences for disabled apps, disabled app notifications, default applications for actions, and background data restrictions for apps. You will not lose any app data.

5. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

SD Card

Displays apps you have downloaded onto your SD card.


1. From the **Settings** screen, under **APPLICATIONS**, tap  **Application manager**.
2. Tap the **SD CARD** tab to view a list of all the downloaded applications on your device.
3. To switch the order of the lists displayed in the On SD card tab, Tap  → **Sort by size** or **Sort by name**.

Note: When you Reset app preferences, you will not lose any app data.

4. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

Running Services

View and control services running on your device.

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Application manager**.
2. Tap the **RUNNING** tab. All the applications that are currently running on the device display.
3. Tap one of the applications to view application information.

The following options display:

- **Stop:** Stops the application from running on the device. This is usually done prior to uninstalling the application.


Warning! Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.

- **Report:** Report failure and other application information.

Note: Options vary by application.


Default applications

This menu allows you to pre-set the default applications for your Home screen and your messaging app.

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Default applications**
2. Tap **Home** and tap one of the following options:
 - **TouchWiz easy home**: this option provides a Home screen that provides an easier user experience for the first-time smartphone users.
 - **TouchWiz home**: this is the Home screen that originally displays on your phone.
3. Tap **Messages** and select the method of sending messages. Select either **Messages** (original Samsung messaging app) or **Hangouts** (Google messaging app).
4. To clear defaults that you have set up, tap **Clear**.

Calendar


This section allows you to modify settings associated with the Calendar app. For information on the Calendar app, see “*Calendar*” on page 162.

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Calendar**.
2. Tap **First day of week** and select either **Locale default**, **Saturday**, **Sunday** or **Monday**.
3. Tap **Show week numbers** to display the week numbers along the side of the week entries.
4. Tap **Hide declined events** to activate this option. A check mark indicates selection.
5. Tap **Hide completed tasks** to activate this option. A check mark indicates selection.
6. Tap **Weather** to have weather symbols displayed on your calendar. A check mark indicates selection.

7. Tap **Lock time zone** to lock event times based on your current user-selected time zone. When enabled, allows you to choose **Select time zone** or **View today according to**.
8. Tap **Set alert type** to adjust the event notification method. Choose from: **Alert**, **Status bar notification**, and **Off**.
9. Tap **Notification sound** to assign a ringtone to a calendar event notification.
10. Tap **Vibration** to set the Event notification tone to vibrate.
11. Tap **Quick responses** to select quick responses to emailing guests.

Call

The Call settings menu allows you to modify your settings for making calls with your phone.



- From the **Settings** screen, under **APPLICATIONS**, tap  **Call**.

— or —



From the Home screen, tap  →  → **Settings**.

The following options are available:

Call rejection

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call** → **Call rejection**.
2. Tap **Auto reject mode** and tap one of the following options:
 - **Off**: to turn Auto reject mode off.
 - **All incoming calls**: to reject all calls.
 - **Auto reject numbers**: to reject all calls in your Reject list.
3. Tap **Auto reject list**.
 - Tap  **Create** to manually add numbers to the Reject list.
 - Tap **Unavailable**, to create a checkmark and automatically reject all calls that are not in your Contacts list.


Set up call rejection messages

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call** → **Call rejection** → **Set up call rejection messages**.
2. Tap  **Create** to manually add a reject message.
— or —

Tap one of the pre-written messages to be displayed when you want the call to be rejected. You can edit the message if desired.

3. Tap **Save** to save the reject message.


Answering and ending calls

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call** → **Answering and ending calls**.
2. The following options are available:
 - **Pressing the Home key**: Tap this option to be able to accept incoming calls by pressing the Home key.
 - **Voice control**: Tap this option to be able to accept incoming calls by using your voice.

- **Waving hand over device**: Tap this option to answer a call by waving your hand over the device.
- **Pressing the power key**: This option will allow you to end a call by pressing the power key without turning off the screen.


Call notification pop-ups

This option allows you to have incoming voice call notifications pop-up on your display.

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call**.
2. Tap **Call notification pop-ups** to create a checkmark and activate the feature.


In-call status pop-ups

This option allows you to have in-call status information pop-up on your display.


1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call**.
2. Tap **In-call status pop-ups** to create a checkmark and activate the feature.

Show caller information

This option displays a caller's recent social network activity and the history of your communication with them when a call is received.


1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call**.
2. Tap **Show caller information** to create a checkmark and activate the feature.

Call alerts


1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call → Call alerts**.
2. Tap the following options to create a checkmark and activate the features:
 - **Vibrate on connection to network**: enables your phone to vibrate when it connects to the network.
 - **Call-end vibration**: enables your phone to vibrate when the call ends.

- **Call connect tone**: plays a tone when a call is connected.
- **Minute minder**: beeps twice every minute that you are on a call.
- **Call end tone**: plays a tone when a call is ended.
- **Notify during calls**: turns on alarm and message notifications during a call.

Call Accessories


1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call → Call accessories**.
2. The following options are available:
 - **Automatic answering**: configures the device to automatically answer an incoming call when a headset is detected.
 - **Automatic answering timer**: configures the time delay before the device automatically accepts the incoming call.
 - **Outgoing call conditions**: allows you to make calls even when the device is locked.

Additional settings

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call → Additional settings**.
2. Tap one of the following options:
 - **TTY mode:** allows you to connect your phone and a TTY device via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.
 - **Hearing aids:** allows you to improve the sound quality of your phone when you are using a hearing aid.


Ringtones and keypad tones

This option allows you to personalize the sounds you hear when your phone rings and when you press the keypad.

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call → Ringtones and keypad tones**.
2. Tap **Ringtones**, select a ringtone, and tap **OK**.
3. Tap **Vibrations**, select a vibration type, and tap **OK**.
4. Tap **Vibrate when ringing** to create a checkmark if you want your phone to vibrate when a call is incoming.
5. Tap **Dialing keypad tone** to create a checkmark if you want tones to play when the keypad is pressed.


Personalize call sound

This option allows you to personalize the sounds you hear during a call with and without earphones.


1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call → Personalize call sound**.
2. At the Personalize call sound display, tap one of the following options:
 - **Adapt sound:** allows you to customize your sounds. Follow the onscreen instructions to set up your personal call sound.
 - **Soft sound:** plays a softer sound when the other party is in a noisy environment.
 - **Clear sound:** plays a clearer sound when the other party sounds unclear or muffled.
 - **Off:** turns off your customized call sound and plays the default sounds.

Noise reduction

This option helps to suppress background noise from your side during a call.


- From the **Settings** screen, under **APPLICATIONS**, tap  **Call** → **Noise reduction** to create a checkmark and enable the feature.

Voicemail service

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call** → **Voicemail Service**.
Voicemail service provided by your carrier is the default.
2. Tap **My carrier** to remove the carrier Voicemail service.


Voicemail settings

You can view or modify your voicemail number from this menu.

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call** → **Voicemail settings**.
2. Tap the **Voicemail number** field, backspace to erase the digits, and enter a new voicemail number using the keypad, then tap **OK**.
3. Tap **OK**.


Sound

This option allows you select your default ringtone that you receive whenever you get a call.


1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call** → **Sound**.
2. Tap a ringtone to hear it played.
3. Select a ringtone and tap **OK**.

Vibrate

This option allows you turn on vibration when you receive a call.


1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call**.
2. Tap **Vibrate** to create a checkmark and activate the Vibrate feature.

Other Call Settings

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Call**.
2. Under **OTHER CALL SETTINGS**, the following options are available:
 - **Auto retry**: When enabled, your device automatically redials unanswered calls.
 - **DTMF tones**: Lets you change the length (Normal or Long) of the DTMF tones your device sends to the network.
 - **Voice privacy**: When enabled, your device employs Enhanced encryption (when available) to ensure your privacy.

Contacts


To modify the settings for your contacts, follow these steps:

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Contacts**.
2. The following options are available:
 - **Import/Export**: allows you to move contacts to or from your memory card or USB storage.
 - **Contacts to display**: allows you to choose to display All contacts, those on your Device, Samsung account, Gmail, or only display contacts that are part of a Customized list.


- **Swipe to call or send msg**: allows you to call or message by swiping the contact to the left (to message) or to the right (to call).
- **Only contacts with phones**: allows you to only display contacts that have phone numbers.
- **Sort by**: allows you to sort by First name or Last name.
- **Display contacts by**: allows you to sort by First name first or Last name first.
- **Send contact information**: allows you to send all or individual contacts via Bluetooth in the form of namecards. Tap Export settings and make a selection.
- **Accounts**: allows you to add and manage your Samsung, ChatON, Google, LDAP (Lightweight Directory Access Protocol), and Microsoft Exchange ActiveSync accounts. Tap **Add account** and then follow the onscreen instructions.

Email

The Email settings allow you to customize your Email application.

1. Set up an email account if you haven't already done so. For more information, refer to *"Email" on page 174*.
2. From the **Settings** screen, under **APPLICATIONS**, tap  **Email**.


Managing your Email accounts

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Email** → **Manage accounts**.
All of your Email accounts are listed.
2. Tap an account to modify the settings for that account.

Note: The settings may be different depending on the type of email account.

3. Tap **More settings** for additional options.

General Email Settings

1. From the **Settings** screen, under **APPLICATIONS**, tap  **Email**.
2. Under **GENERAL SETTINGS**, tap **Display**.
The following options are available:
 - **Auto fit content:** allows you to shrink your email content to fit the screen.
 - **Message preview line:** allows you set the number of lines that are shown in the email preview.
 - **Title line in list:** allows you to set the title line to the Email Subject or the Sender.
 - **Hide checkboxes:** allows you to hide the checkboxes that are displayed in your email list.
3. Tap **Default display**. Allows you to select what part of a message displays in a folder list. Choose from: Next email, Previous email, or Email list.

4. Tap **Priority sender settings**.

The following options are available:

- **Set as the default folder:** shows the priority sender inbox whenever you open the Email app.
- **Email notifications:** activates the email notification icon to appear within the Notifications area of the status bar when a new email (Gmail, etc.) is received.
- **Notification sound:** choose a ringtone for email notifications.
- **Vibrate:** activates a vibration when a new email message is received.

5. Tap **Spam addresses** and then tap to add an Email address to your Spam folder.

6. Tap **Delay email sending** to delay the sending of emails.

- Tap **Delay email sending** to check the check box and enable the feature.
- Tap **Set length of delay** to set the delay time. You can set the delay from 3 up to 30 seconds. This will give you time to cancel the sending of an email if needed.

Gallery


This section allows you to modify settings associated with using your Gallery.

1. From the **Settings** screen, under **APPLICATIONS**, tap



Gallery.

2. The following options are available:

- **Sync via Wi-Fi only:** select this option if you only want to sync pictures and videos when you are connected to a Wi-Fi network.
- **Filter by:** allows you to filter your Gallery when searching for certain types of picture or videos. Select an option to make a checkmark.
- **Tag buddy:** allows you to tag your pictures or videos by Location, Category, or Tags. Touch and move the slider to the right to activate the feature .
- **Face tag:** allows you to tag your pictures or videos when a face is present.

3. Tap → **Add account** to add a Samsung, Facebook, or Google account.

Internet

This section allows you to modify settings associated with using your web browser.

1. From the **Settings** screen, under **APPLICATIONS**, tap



Internet.

2. Under **BASICS**, tap any of the following options:

- **Account** allows you to sign on to your Samsung account if you have not already done so. You will need to do this if you want to sync your bookmarks and open pages with other devices. (For more information, refer to “*Creating a Samsung Account*” on page 14.)

- **Set homepage:** Sets the current home page for the Web browser.

- **Auto fill forms:** allows you to enter text to be used in your web profile. Tap Add profile, then enter text for the Web form auto fill.

3. Under **ADVANCED**, tap any of the following options:

- **Privacy:**

- **Suggest search terms and Web addresses:** displays predictions of related queries and popular websites in the address bar as you type.

- **Preload available links:** allows you improve performance when loading pages.

- **Remember form data:** Allows the device to store data from any previously filled out forms. Remove the checkmark to disable this function.

- **Remember passwords:** Stores user names and passwords for visited sites. Remove the checkmark to disable this function.

- **Delete personal data:** allows you to delete all personal data such as Browsing history, Cache, Cookies and site data, Passwords, Auto-fill data, and Location access.

- **Screen and text:**

- **Text scaling:** allows you to preview the text size, scale the text size using a slider bar, set the zoom amount on double tap, and minimize the font size using a slider bar.

- **Force zoom:** allows you to override the website’s request to control zoom.

- **Text encoding:** adjusts the current text encoding.

- **Full screen:** allows you to use Full screen mode to hide the status bar.

- **Text booster:** allows you to view PC websites easily by boosting the text size. Note: the layout may change as a result.

- **Content settings:**

- **Accept cookies:** Allows sites, that require cookies, to save and read cookies from your device.
- **Turn on location:** Allows websites to request access to your location.
- **Turn on JavaScript:** Enables Javascript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
- **Block pop-ups:** Prevents popup advertisement or windows from appearing onscreen. Remove the checkmark to disable this function.
- **Default storage:** Allows you to set your default storage to Device or Memory Card.
- **Website settings:** View advanced settings for individual websites.
- **Turn on notifications:** Allows website notifications. Select Always on, On demand, or Off.
- **Clear notifications:** Deletes website notification access information.
- **Reset settings:** Restores all settings to default.

- **Bandwidth management:**

- **Preload webpages:** Allows the browser to preload pages in the background. You can set to Always, Only on Wi-Fi, and Never.
- **Load images:** Allows web page images to be loaded along with the other text components of a loaded website.
- **Open pages in overview:** Displays an overview of newly opened web pages.

Messages

This section allows you to modify settings associated with using the default Messaging application.


1. From the **Settings** screen, under **APPLICATIONS**, tap




Messages.

2. The following Messaging settings are available:

- **Default messaging app:** allows you to set the default messaging app that you can use to send all of your messages.
- **Display:** the following message display settings are available:
 - **Bubble style:** allows you to choose from several bubble styles for your messages. Bubbles are the rounded boxes that surround each message.
 - **Background style:** allows you to choose from several background styles for your messages.
 - **Change font size:** allows you to change the font size in your messages by using the Volume key.
- **Quick responses:** allows you to select short pre-written sentences that you can use in your messages.
- **Text messages:** the following text message settings are available:
 - **Delivery reports:** when this option is activated, the network informs you whether or not your message was delivered.
- **Multimedia messages:** the following multimedia message settings are available:
 - **Group conversation:** allows you to send a single message to multiple recipients.
 - **Delivery reports:** when this option is activated, the network informs you whether or not your message was delivered.
 - **Auto retrieve:** allows the message system to retrieve messages automatically.
 - **Roaming auto retrieve:** allows the message system to retrieve messages automatically while your device is roaming.
 - **MMS alert:** allows you to receive an alert when MMS mode becomes active.

- **Delete old messages:** deletes old messages when the limit is reached, rather than having them overwritten. Touch and slide the slider to the right to turn it on .
- **Text message limit:** allows you to set a limit on how many text messages can be in one conversation.
- **Multimedia message limit:** allows you to set a limit on how many multimedia messages can be in one conversation.
- **Priority senders:** allows you to send messages with priority.
- **Notifications:** allows you to see message notifications on your status bar.
- **Emergency alerts:** allows you to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS). (For more information, refer to “*Messages Settings*” on page 79.)
 - **Emergency alerts:** select which types of Emergency alerts you want to receive: Extreme alerts, Severe alerts, or Amber alerts.


Note: Presidential alerts are required to be received. You cannot disable this option.

- **Emergency notification review:** allows you to play the emergency alert tone so you will know what to expect when an alert is received.
- **Vibrate:** enables or disables vibration with Emergency alerts.
- **Alert sound:** enables or disables playing the Emergency alert tone with Emergency alerts.
- **Alert reminder:** allows you to set reminders after you receive an alert. You can select Once, Every 2 minutes, Every 15 minutes, or Off (default).
- **Signature** configures message signatures. Touch and slide the slider to the right to turn it on .
- **Edit signature:** allows you to enter a desired signature for your message.
- **Spam filter:** when enabled, allows you to configure available spam settings such as:
 - **Add to spam numbers:** allows you to manually enter and assign a phone number as being sent from a spam source.
 - **Add to spam phrases:** allows you to assign a specific text phrase as belonging to a spam message. Ex: Dear friend.

- **Block unknown senders:** when active, automatically blocks incoming messages from unknown sources or blocked numbers.
- **Delay message sending:** allows you to set a time delay limit that determines how long the messages are held until they are sent. This can allow you to cancel the delivery of a recent message.
- **Safe mode:** allows you to set security parameters for Messages. Choose from Allow access to all links and Potential threat alerts.
- **Callback number:** When set to on, includes your phone's number in your messages as a callback number.

S Voice

This section allows you to modify settings associated with the S Voice app. For information on the Calendar app, see “S Voice” on page 196.

1. From the **Settings** screen, under **APPLICATIONS**, tap  **S Voice**.
2. The following options are available:
 - **Disable voice prompt:** follow the prompts to disable the Voice prompt.
 - **Example commands:** Lists examples of using available S Voice commands.
 - **Tutorial:** Plays a tutorial that demonstrates how to use S Voice.

- **Settings:**

- **Language:** allows you to set your default language for S Voice.
- **Hide offensive words:** allows you to have potentially offensive words replaced with asterisks.
- **About:** displays information about the S Voice app including the Terms of Service and the Privacy Policy.
- **Open via the home key:** allows you to open S Voice by double pressing the Home key.
- **Voice wake-up:** allows you to customize your wake-up command for S Voice.
- **Auto start speakerphone:** automatically turns on the speaker when using S Voice to make a call.

- **Show body of message:** allows you to also see the message content whenever a new message arrives.
- **Check missed events:** allows you to see your missed events whenever you open the S Voice app.
- **Personal briefing:** allows you to receive a voice briefing of your schedule whenever you open the S Voice app.
- **Home address:** allows you to enter your home address to be used in S voice.
- **Log in to Facebook:** a shortcut to log in to your Facebook account.
- **Log in to Twitter:** a shortcut to log in to your Twitter account.

Section 7: Connections

This section describes the various connections your phone can make including Connecting your PC, Wi-Fi, NFC, Bluetooth, USB tethering, and Mobile Hotspot.

PC Connections

You can connect your device to a PC using your PC data cable and various USB connection modes.

Media device (MTP): allows you to transfer media files in Windows, or using an Android file transfer on a Mac.

Camera (PTP): allows you to transfer photos using the camera software, and transfer any files onto a PC that does not support MTP.

Note: To sync your device to your computer it is highly recommended that you install Samsung Kies which is available at <http://www.samsung.com/kies> (for Windows/Mac).

Note: If you are a Windows XP user, ensure that you have Windows XP Service Pack 3 or higher installed on your computer. Also, ensure that you have Samsung Kies 2.0 or Windows Media Player 10 or higher installed on your computer.

Connecting as a Storage Device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the files directory from the memory card by using the device as a memory card reader.

Note: The file directory of the memory card displays as a removable disk, separate from the internal memory.

1. Connect the USB cable to the device and connect the cable to the computer. After a few seconds, a pop-up window displays on the PC when connected.
2. On the PC pop-up, click **Open device to view files**.

3. Tap **Card** to see the contents on your memory card or tap **Phone** to see the contents on your phone.
4. You can now copy and move files back and forth between your PC and your phone.



Wi-Fi

About Wi-Fi




Wi-Fi (short for "wireless fidelity" and sometimes referred to as "wifi") is a term used for certain types of Wireless Local Area Networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data. Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the Router name and password).

Turning Wi-Fi On

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
3. Tap the ON/OFF slider, located to the right of the **Wi-Fi** field, to turn Wi-Fi ON .




Connect to a Wi-Fi Network

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
The network names and security settings (Open network or Secured with WEP) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.
3. Tap the network you want to connect to.

Note: When you select an open network, you will be automatically connected to it.

4. Enter a wireless password if necessary.





Manually add your new network connection

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
3. Tap **Add Wi-Fi network**.

4. Enter the **Network SSID**. This is the name of your Wireless Access Point.
5. Tap the **Security** field and select a security option. This must match the current security setting on your target WAP.
6. If secured, you will also need to enter your WAP's password.
7. Tap **Show advanced options**, if you need to add advanced options such as Proxy settings, IP settings, or Key management.
8. Tap **Connect** to store the new information and connect to your target WAP.





Note: The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the WAP key again, unless you touch and hold a network and tap **Forget network**, or reset your device back to its factory default settings. (For more information, refer to “*Back up and reset*” on page 111.)

Turning Wi-Fi Off

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
3. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi OFF .

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

Manually Scan for a Wi-Fi Network

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
3. Tap  → **Scan**.
All available Wi-Fi networks are displayed.

Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).







Displays when there is a Wi-Fi access point available but you are not connected to it. May also display if there is a communication issue with the target Wireless Access Point (WAP).



Displays when connected to another device using Wi-Fi Direct. For more information, refer to “*Wi-Fi Direct*” on page 151.

Wi-Fi Advanced Settings

The Advanced Wi-Fi menu allows you to set up many of your device's advanced Wi-Fi services.

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
3. Tap  → **Advanced**.






The following options are available:



- **Network notification:** alerts you when a new WAP is available.
- **Passpoint:** allows you to connect to passpoint-enabled Wi-Fi Access Points automatically.
- **Sort by:** allows you to sort by alphabet or RSSI.
- **Keep Wi-Fi on during sleep:** allows you to specify when to disconnect from Wi-Fi.
- **Always allow scanning:** allows the Google location service and other apps to scan for networks, even when Wi-Fi is turned off.
- **Auto connect:** allows you to be automatically connected to an unsecured Wi-Fi Hotspot as soon as your phone detects it.
- **Install certificates:** allows you to install security certificates that you have on a MicroSD card.
- **MAC address:** view your device's MAC address, required when connecting to some secured networks (not configurable).
- **IP address:** view your device's IP address.

Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

Note: See your service plan for applicable charges for Wi-Fi Direct.

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Wi-Fi**.
3. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .
4. Tap  → **Wi-Fi Direct**.
Your phone automatically scans for other Wi-Fi Direct devices.
5. Repeat **steps 1 - 3** on the other device you want to connect with. The steps on a different model of phone, may be different.
6. Once the device you want to connect to is displayed, tap on it.

7. The other device has 2 minutes to tap **Accept** for the connection to be made.
8. Once connected, the other device will show as **Connected** in your list of Wi-Fi Direct devices and the  icon will display at the top of your screen.
9. Tap  for additional options.

Sharing Information with Connected Device

To share Videos, Photos, or other information with the connected device, follow these steps:

1. View the information that you want to share. For example, if you want to share a photo, find the photo in your camera viewer or **My Files** folder, then tap the **Share**, **Share via**, or **Send via** option.
2. Tap the **Wi-Fi Direct** option.
3. Tap the connected device name.
4. Tap **Done**.
5. The file is transferred and the other device will receive a screen notification that a Wi-Fi file has been received. The file can be found in **My Files** → **All files** → **Device storage** in the **ShareViaWifi** folder.

Note: The prompts and shared folder information may differ, depending on the other device model.

NFC

NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as S Beam. (To activate NFC on your device, see “*NFC*” on page 92.)

Android Beam

When Android Beam is activated, you can beam app content to another NFC-capable device by holding the devices close together. You can beam browser pages, YouTube videos, contacts, and more. (For more information, refer to “*Android Beam*” on page 92.)

S Beam

When S Beam is activated, you can beam files to another NFC-capable device by holding the devices close together. You can beam images and videos from your Gallery, music files from your Music app, and more. (For more information, refer to “*S Beam*” on page 92.)

Tap and pay

Tap and pay allows you to select the default payment application you want to use for making on-phone purchases. (For more information, refer to “*Tap and pay*” on page 92.)






Bluetooth

About Bluetooth





Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

To turn Bluetooth on:

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Bluetooth**.
3. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth ON  .
When active,  appears within the Status area.

To turn Bluetooth off:

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. From the **Settings** screen, under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Bluetooth**.
3. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth OFF  .

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



Displays when Bluetooth is active.







Displays when Bluetooth is connected (paired) and communicating with another device.

Bluetooth Settings





The Bluetooth settings menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices





To access the Bluetooth Settings menu:

1. From any Home screen panel, tap  **Apps** →  **Settings**.
 2. Under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Bluetooth**.
 3. Verify your Bluetooth is ON .
- (For more information, refer to "Bluetooth" on page 85.)

To make your device visible:





1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. Under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Bluetooth**.
3. Tap  → **Visibility timeout**.
 - Making your device visible allows it to be detected by other devices for pairing and communication.
4. Select a time that you would like your device visibility to timeout.

To show received files:





1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. Under **NETWORK CONNECTIONS**, tap  **Bluetooth**.
3. Tap  → **Received files**.

A list of all files received from Bluetooth displays.

To change your Bluetooth name:

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. Under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Bluetooth**.
3. Tap  → **Rename device**.
4. After the **About device** screen displays, tap **Device name**.
5. Use the keyboard to modify your device name and tap **OK**.





To scan for Bluetooth devices:


1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. Under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Bluetooth**.
3. Verify your Bluetooth is ON .
4. Tap **Scan** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

Pairing Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. Under **QUICK SETTINGS** or **NETWORK CONNECTIONS**, tap  **Bluetooth**.
3. Verify your Bluetooth is ON .
4. Tap **Scan**. Your device will display a list of discovered in-range Bluetooth devices.
5. Tap a device from the list to initiate pairing.
6. Enter the passkey or PIN code, if needed, and tap **OK**.
7. The external device will then have to also accept the connection and enter your device's PIN code.

Once successfully paired to an external device,  appears within the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Note: Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

Disconnecting a paired device


Disconnecting a paired device breaks the connection between the device and your phone, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active. (*"To access the Bluetooth Settings menu:"* on page 154)
2. From the **Bluetooth** screen, tap the previously paired device (from the bottom of the page).
3. Tap **OK** to confirm disconnection.

Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your phone or it is powered off.

Deleting a paired device (unpair)

Deleting a device from your list removes its “connection record” and upon reconnection would require that you re-enter all the previous pairing information.




1. Verify your Bluetooth is active. (*“To access the Bluetooth Settings menu:”* on page 154)
2. From the Bluetooth settings page, tap  next to the previously paired device. This opens the connected device’s menu options.
3. Tap **Unpair** to delete the paired device.
4. Tap **Rename** to change the name of the paired device.
5. Tap **Call audio** to enable or disable call audio from the paired device.
6. Tap **Media audio** to enable or disable media audio from the paired device.


USB Tethering

This option allows you to share your device’s mobile data connection via a direct USB connection between your device and a single computer.

Note: You can not mount your device’s microSD card to your computer while using the USB tethering feature. If additional software or USB drivers are required, navigate to: <http://www.samsung.com/us/support/downloads>.

To connect using USB Tethering:

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. Under **NETWORK CONNECTIONS**, tap  **Tethering and Wi-Fi hotspot**.
3. Plug in the USB cable between your computer and your device.

4. From the **Tethering and Wi-Fi hotspot** screen, tap **USB tethering**. This places a green check mark next to the entry and activates the feature. A Tethering or HotSpot active notification briefly appears on the screen. Look for the Tethering active icon  in the Status bar area of the screen.
5. Read the onscreen notification regarding data use and tap **OK**.

To disconnect tethering:

1. From the **Tethering and Wi-Fi hotspot** screen, tap **USB tethering** to remove the check mark and disable the feature.
2. Remove the USB cable from the device.

Portable Wi-Fi hotspot





This feature allows you to turn your device into a Wi-Fi hotspot. The feature works best when used in conjunction with 4G/LTE data services (although 3G service can also be used).


The Portable Wi-Fi hotspot connectivity is a wireless version of this same functionality and allows you to provide Internet connectivity to multiple devices.

Important! The Portable Wi-Fi hotspot service cannot be active when device is connected to Wi-Fi. Please disconnect your Wi-Fi connection prior to activating this service.

Note: You must have a tethering plan on your account in order to use the Portable Wi-Fi hotspot.


To activate the Portable Wi-Fi hotspot service:

1. From any Home screen panel, tap  **Apps** →  **Settings**.
2. Under **NETWORK CONNECTIONS**, tap  **Tethering and Wi-Fi hotspot** → **Portable Wi-Fi hotspot**. The **Portable Wi-Fi hotspot** screen displays.
3. In a single motion touch and slide the **Portable Wi-Fi hotspot** slider to the right to turn it ON.
4. Read the onscreen notification regarding data use and tap **OK**.
5. Tap  → **Configure**.
6. Edit the **Network SSID** name and then write it down.
7. Disable the **Hide my device** field if you would like to broadcast your SSID name to nearby devices.
8. Verify the **Security** field is set to **WPA2 PSK**.
9. The default password is your phone number.
Enter a new password then write it down.
 - Additional options include **Show password** and **Show advanced options**.
10. Tap **Save** to store the new settings.


11. Confirm the Portable Wi-Fi Hotspot active icon  appears at the top of the screen.

Note: Using your Portable Wi-Fi hotspot drains your device's battery much faster. The best way to keep using the device as a HotSpot is by connecting to a Charger.

To connect to the Hotspot:

1. Enable Wi-Fi (wireless) functionality on your target device (laptop, media device, and so on).
2. Scan for Wi-Fi networks from the external device and select your device's Mobile Hotspot name (Network SSID) from the network list.
 - The SSID name for your device's hotspot is determined by what you entered into the **Network SSID** field.
 - You can change the name by tapping  **Menu** → **Configure** → **Network SSID** and changing the entry.
3. Select this HotSpot and follow your onscreen instructions to complete the connection.
4. Launch your Web browser to confirm you have an Internet connection.

To change the Portable HotSpot password:


1. From the **Tethering and Wi-Fi hotspot** screen, tap **Portable Wi-Fi hotspot** →  **Menu** → **Configure**.
2. Tap the **Security** field and select **WPA2 PSK**.
3. With security enabled, delete the previous password and enter a new one into the **Password** field.

Important! The more complex the password, the harder it will be for intruders to break your security. It is recommended that you not use names, birthdays, or other personal information.

4. Tap **Save** to store the new settings.

To manage connected devices:

This feature allows you to provide MAC filtering on your device. This is similar to a “VIP list” where only device on the list are allowed access.


1. From the **Portable Wi-Fi hotspot** screen, tap  **Menu** → **Allowed devices** →  (**Add new device**) to add devices to the allowed for connection list.
2. Enter the Device name and Mac address.
3. Tap **OK** to save the new device.

Section 8: Applications

This section contains a description of each application that is available in the Apps Menu, its function, and how to navigate through that particular application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

Note: This manual only addresses applications that have been loaded on your device as of the date of purchase. Information concerning third party applications that you may choose to download from the Google Play Store or otherwise should be obtained from the application provider directly and not from Samsung.

Tip: To open applications quickly, add the icons of frequently-used applications to one of the Home screens. (For details, see “*Customizing Your Home Screen*” on page 31.)

- To access the Applications, tap  **Apps** from any Home screen. The Apps menu displays.




Amazon

Shop with Amazon.

- From the Apps menu, tap  **Amazon**.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. The Calculator also keeps a history of recent calculations.

1. From the Apps menu, tap  **Calculator**.
2. Enter the first number using the onscreen numeric keys.
3. Enter the operation for your calculation by tapping the corresponding onscreen arithmetic function key.
4. Enter the second number.
5. To view the result, tap the equal sign (=).
6. To view calculator history, tap  located at the top right of the calculator buttons. A history of your past calculations is displayed. Tap  to display the calculator keypad.
7. Turn your phone sideways to the landscape position to display the scientific calculator.

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

To access the Calendar:

1. From the Apps menu, tap  **Calendar**.
2. To change your calendar view tap  at the top left of your screen and select one of the following:
 - **Year**: displays the Year view.
 - **Month**: displays the Month view.
 - **Month and agenda**: displays the Month view with your events listed at the bottom.
 - **Week**: displays the Week view.
 - **Day**: displays the Day view.
 - **Agenda**: displays your events.

3. Tap  **Create event** to create a new Calendar event.
4. Tap **Today** to display the current date indicated by a blue box.
5. Tap  and select one of the following options:
 - **Go to:** displays a specific date.
 - **Delete:** allows you to delete All events, All events before today, or an individual event.
 - **Search:** allows you to search within your current events.
 - **Calendars:** allows you to view the current Calendar accounts.
 - **Sync:** allows you to synchronize your calendar with one or all of your accounts. This option only appears when an account has been opened.
 - **Settings:** displays a list of configurable settings.

Calendar Settings

- From any Calendar view, tap  → **Settings**.

For more information, refer to “Calendar” on page 132.

Camera

This section explains how to use the camera on your phone. You can take photographs and shoot video by using the built-in camera functionality. Your 16 megapixel camera produces photos in JPEG format.

Important! Do not take photos of people without their permission.

 
Do not take photos in places where cameras are not allowed.

Do not take photos in places where you may interfere with another person’s privacy.

Using the Camera

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.


- From the Apps menu, tap  **Camera** to activate the camera mode.

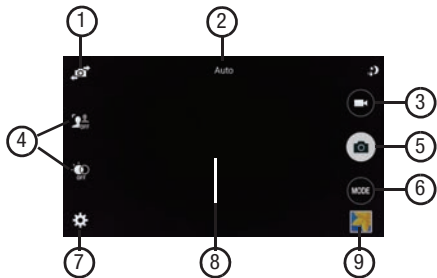

- | | |
|------------------------|-----------------------|
| 1. Front Facing Camera | 6. Change Camera Mode |
| 2. Camera Mode | 7. Settings |
| 3. Record Video | 8. Viewfinder |
| 4. Settings Shortcuts | 9. Image Viewer |
| 5. Camera button | |

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

To use the camera:

- Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
- Before you take a picture, pinch the screen to zoom out or pinch outwards to zoom in. You can magnify the picture up to x4 (400 percent).
- If desired, before taking the photo, you can tap on-screen icons to access various camera options and settings.
- You can also tap the screen to move the focus to the area you touch.
- Press the Camera button  until the shutter sounds. (The picture is automatically stored within your designated storage location. If no microSD is installed, all pictures are stored on the Phone.)


6. While viewing a picture, after you have taken it, pinch the screen outwards to zoom in or pinch the screen inwards to zoom out.

You can magnify the picture up to x4.

7. Tap  **Back** to return to the viewfinder.

Camera Modes

There are many different camera modes that you can use to help optimize your photos depending on the conditions and your experience.

1. From the camera viewfinder, tap the Mode button  to change the mode to one of the following:
 - **Auto:** Automatically adjusts your camera to optimize color and brightness. This is the default setting
 - **Beauty face:** Use this to take photos with lightened faces for gentler images.

- **Shot & more:** use this burst shot mode to combine the best of burst shots with other features. Effects can be directly applied right after taking these pictures. The following effects are available in this mode, Best photo, Best face, Eraser, Drama, and Panning shot.


- **Best photo:** use this to take multiple photos in a short time, and then choose the best photos among them.
- **Best face:** use this to take multiple group shots at the same time and combine them to create the best possible image. Press the Shutter button to take multiple photos. When Gallery opens, tap the yellow frame on each face, and choose the best individual face for the subject. After choosing a pose for each individual, tap Done to merge the images into a single photo, and tap Save.
- **Drama shot:** use this to take a series of photos of a moving object and then merge them together into one image.
- **Eraser:** saves the best of 5 taken pictures and removes any passers by.
- **Panning shot:** use this to take wide photos.

- **Panorama:** use this to take wide panoramic photos. Press the Shutter button to take a photo, and then move the camera in any direction. When the blue frame aligns with the preview screen, the camera automatically takes another shot in the panoramic sequence. To stop shooting, press the Shutter button again.
- **Virtual tour:** use this to mode to take a virtual 3D shot of your surroundings. Follow the onscreen instructions.
- **Dual camera:** allows you to activate both the front and rear cameras simultaneously.

Taking Dual Camera Photos

With the Dual Camera feature, you can take a picture with both the front and rear cameras at the same time.

To take a Dual Camera picture:

1. From the camera viewfinder, tap the Mode button  then tap **Dual camera**.

The camera viewfinder displays an image from the front-facing camera within a postage stamp picture frame on top of the main image displayed from the rear-facing camera.

2. Tap the Camera button  to take the picture.

To resize the front camera image:

- Touch the postage stamp picture frame until the resize handles appear, then drag a corner to enlarge the image.

To reposition the front camera image

- Touch the postage stamp picture frame to detach it and then move it to a desired location.

Camera and Camcorder Settings

This section describes the different settings that you can configure on your camera. Not all of the following options are available in both still camera and video camera modes. The available options vary by mode.

- From the viewfinder, tap .

The following settings are available:

- **Picture size:** Select a resolution for photos. Use higher resolution for higher quality. Higher resolution photos take up more memory.
- **Burst shots:** allows several photographs to be captured in quick succession by touching and holding the Camera button.
- **Picture stabilization:** allows you to enable the stabilization feature to help adjust for jitter during picture taking.
- **Face detection:** allows you to adjust the camera focus based on face detection technology.
- **ISO:** determines how sensitive the light meter is on your digital camera. Choose from Auto, 100, 200, 400, or 800. Use a lower ISO number to make your camera less sensitive to light, a higher ISO number to take photos with less light, or Auto to let the camera automatically adjust the ISO for each of your shots.

- **Metering modes:** allows you to set how the camera measures or meters the light source: Center-weighted, Matrix, or Spot.
- **Tap to take pics.:** allows you enable the ability to also take images by tapping on the screen.
- **Selective focus:** Make objects stand out from the background.
- **Video size:** select a resolution for videos. Use higher resolution for higher quality. Higher resolution videos take up more memory. Highest quality is **UHD** (4K video)
- **Recording mode:** select a resolution for videos. Choose from: Normal, Limit for MMS, Slow motion, Fast motion, or Smooth motion.
- **Video stabilization:** activate or deactivate Optical Image Stabilization.
- **Audio zoom:** enable the feature where the device can focus on an audio source that is not directly in front of the device.
- **Effects:** provides access to pre-installed and downloaded effects. Default effects include: No effect, Vignette, Faded color, Grayscale, Sepia, Tint, Turquoise, Cartoon, Fisheye, Moody, Oil pastel, Rugged, Download (additional effects).

- **Flash:** activate or deactivate the flash.
- **Timer:** Use this for delayed-time shots. You can set the timer to Off, 2 sec, 5 sec, or 10 sec.
- **HDR:** use this to take photos with richer colors and contrasts by merging images taken at different exposure levels.
- **Location tags:** attach a GPS location tag to the photo. To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions. Your location may appear on your photos when you upload them to the Internet. To avoid this, deactivate the GPS tag setting.
- **Storage:** select the memory location for storage.
- **Review pics/videos:** set this option if you want to view each picture after you take it. Select a time value.
- **Remote viewfinder:** activates/deactivates the feature that allows you to take pictures using the viewfinder of a Wi-Fi Direct connected device.
- **White balance:** Select an appropriate white balance, so images have a true-to-life color range. The settings are designed for specific lighting situations. These settings are similar to the heat range for white-balance exposure in professional cameras.
- **Exposure value:** allows you to adjust the brightness level by moving the slider.
- **Guide lines:** display viewfinder guides to help composition when selecting subjects.
- **Voice control:** activates/deactivates voice control feature that allows you to verbally take a photo.
- **Help:** provides an on-screen set of help topics.
- **Reset:** Reset the camera settings.

Viewing your Pictures

After you take a photo, you can access various options from the Image Viewer. The Image Viewer uses your Gallery. For more information, refer to “*Gallery*” on page 177.







Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder that also allows you to record, view, and send videos.

Note: The camera may not be able to properly record videos to a memory card with a slow transfer speed.

Shooting Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.


1. From the Apps menu, tap  **Camera** to activate the camera mode.
2. Using the camera's main display screen as a viewfinder, adjust the image by aiming the camcorder at the subject.
3. Tap the Video key () to begin shooting video. The red light will blink while recording.
4. While recording a video, pinch the screen to zoom out or pinch outwards to zoom in. You can magnify the picture up to x4 (400 percent).
5. You can tap the screen to move the focus to the area you touch.
6. Tap the Pause key () to stop the recording and save the video file to your Camera folder.
7. Tap the Stop key () to stop the recording and save the video file to your Camera folder.
8. Once the file has been saved, tap the image viewer, then tap  to play your video.
9. Tap  to return to the viewer.

Viewing your Videos

After you take a video, you can access various options from the Image Viewer. The Image Viewer uses your Gallery and the Video player. For more information, refer to “*Gallery*” on page 177. Also, see “*Video*” on page 203.

ChatON

With the ChatON application, you can interact with friends and family with text, images, hand-written notes and video shared instantly. You can chat in groups, while a Web client will allow the easy sharing of content and conversations between your phone and PC.

1. From the Apps menu, tap  **ChatON**.
2. Sign on to your Samsung account if you have not already done so. (For more information, refer to “*Creating a Samsung Account*” on page 14.)
3. Read the introduction and tap **Next**.


Note: The first time you use the ChatON app, you will need to download the updated application from the Play Store. When the Play Store page displays, tap **Update** then follow the onscreen instructions. (For more information, refer to “*Play Store*” on page 194.)

4. Follow the onscreen instructions to register and use the ChatON app.

For more information, visit: <https://web.samsungchaton.com>.

Chrome

The Google Chrome app allows you to use the Google Chrome web browser on your phone.

1. From the Apps menu, tap  **Chrome**.
2. Read the Google Chrome Terms of Service and tap **Accept and Continue**.
3. If you have an existing Chrome account, tap **Sign in** to bring your open tabs, bookmarks, and omnibox data from your computer to your phone, otherwise tap **No thanks**.
4. Follow the onscreen instructions to use Google Chrome.

City ID

Subscribe to City ID to display city and state for incoming calls, and to look up city and state information for phone numbers.





- From the **Apps** screen, touch  **City ID**.

Clock

The Clock application allows you to access alarms, view the World Clock, set a stopwatch, use a timer, and set up your desk clock.

Alarm

This feature allows you to set an alarm to ring at a specific time.


1. From the Apps menu, tap  **Clock** → **Alarm** →  **Create alarm**.
2. Tap  (Up) or  (Down) to set the new time for the alarm to sound. Tap AM or PM.

3. Tap Optional settings to access the following:


- **Repeat weekly:** Tap the Repeat weekly checkbox to have the alarm repeat on the same day every week.
- **Alarm type:** sets the way in which the alarm sounds when activated (Melody, Vibration, Vibration and melody, and Briefing).
- **Alarm tone:** sets the sound file which is played when the alarm is activated. Select an option or tap Add for additional options.
- **Alarm volume:** drag the slider to adjust the alarm's volume.
- **Snooze:** use this option to set a Duration (3, 5, 10, 15, or 30 Minutes) and Snooze repeat (1, 2, 3, 5, or 10 Times). Tap the ON/OFF slider to activate.
- **Smart alarm:** tracks body movements and calculates the best time for sounding the alarm. Place the phone somewhere on your bed then the phone's movement sensor (also known as accelerometer) is sensitive enough to work from any part of the bed. Set the Interval and the Tone. Tap the ON/OFF slider to activate.
- **Name:** allows you to use a specific name for the alarm. The name will appear on the display when the alarm activates.

4. Tap **Save** to store the alarm details.

Turning Off an Alarm



- To stop an alarm when it sounds, touch and sweep the  icon to the right.

Setting the Snooze Feature

- To activate the Snooze feature after an alarm sounds, touch and sweep the  icon to the left. Snooze must first be set in the alarm settings. For more information, refer to “Alarm” on page 171.





Deleting Alarms

To delete an alarm, follow these steps:




1. From the Apps menu, tap  **Clock → Alarm**.
2. Press and hold any alarm. All of your alarms are displayed in a list. Tap the alarms you wish to delete to create a green checkmark then tap . Tap **Select all** to delete all alarms.
3. Tap **Undo** if you would like to undelete an alarm you just deleted.

World Clock

World Clock allows you to view the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.


1. From the Apps menu, tap  **Clock → World Clock**. The clock for your time zone is displayed.
2. Tap  **Add city** to add another city to the World Clock.
3. Scroll through the list of cities to find the city you want to add, or tap the Search bar and use the keypad to enter a city to search for.
4. Tap the city you want to add. The clock for that city will display.
5. To set Daylight Savings time, press and hold a city, then tap  **DST settings**.
6. Select **Automatic**, **Turn off**, or **Turn on**.
7. If Daylight Savings Time is selected,  will appear next to the World Clock listing.

Deleting a World Clock Entry

1. From the Apps menu, tap  **Clock** → **World Clock** →  → **Delete**.
2. Tap the city clocks you wish to delete to create a checkmark.
3. Tap  **Delete**. Tap **Select all** to delete all World Clocks.


Stopwatch

You can use this option to measure intervals of time.

1. From the Apps menu, tap  **Clock** → **Stopwatch**.
2. Tap **Start** to start the stopwatch and tap **Lap** to mark a unit of time per lap.
3. Tap **Stop** to stop the stopwatch.
4. Tap **Restart** to continue or tap **Reset** to erase all times recorded.

Timer

You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

1. From the Apps menu, tap  **Clock** → **Timer**.

2. To change the time, tap the time inside the circle. The **Seconds** field is highlighted and set to 30 seconds. Use the keypad to set the number of seconds you want.
3. Tap the **Minutes** field to set minutes.
4. Tap the **Hours** field to set hours if desired. As you tap different fields, they will become highlighted.
5. Tap **Start** to begin the timer and tap **Stop** to pause the timer.
6. After stopping, tap **Restart** to continue or tap **Reset** to set the timer back to the original setting.

Contacts



You can manage your daily contacts by storing their name and number in your Contacts List. Contacts List entries can be sorted by name, entry, or group.

You can also synchronize your phone Contacts List with selected accounts.

(For more information, refer to “*Contacts*” on page 61.)

Drive

With the Google Drive application, everything that you add to your Drive from work or home is also available on your device. You can create and edit documents on your device and the changes are saved everywhere.

1. Sign on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 14.
2. From the Apps menu, tap  **Drive**.
3. Follow the onscreen instructions to use Google Drive.
4. Tap  → **Help** for more information.

Dropbox

Dropbox is a “cloud” file storage service. The Dropbox app lets you create an account with Dropbox or link with your existing Dropbox account.


For more information, refer to dropbox.com.

- From the Apps screen, tap  **Dropbox**.

Email


Email enables you to review and create email using various email services. You can also receive message alerts when you receive an important email.

Creating an Email Account


1. From the Home screen, tap  **Email**.
Your accounts screen displays with an Email setup screen displayed.
2. Enter your email address in the **Email address** field.
3. Enter your password in the **Password** field.
4. If you want to see your password as it is being typed, tap **Show password** to create a checkmark.
5. Tap **Next**.
6. At the **Account options** screen, tap any of the options you would like.
7. Tap **Next**.
8. Enter a name for this email account (optional).
9. Tap **Done**.

Creating a Corporate Email Account

Use the following procedure to configure your phone to synchronize with a corporate email account.



1. From the Home screen, tap  **Email**.
Your accounts screen displays with an Email setup screen displayed.
2. Enter your email address in the **Email address** field.
3. Enter your password in the **Password** field.
4. If you want to see your password as it is being typed, tap **Show password** to create a checkmark.
5. If you want all of your emails sent from this email account by default, tap the checkbox to create a checkmark. This checkbox only appears if you have previously set up an email account.
6. Tap **Manual setup**.
7. Tap the **Microsoft Exchange ActiveSync** field.
8. Enter all the Exchange server information, Domain, User name and Password, then tap **Next**.

9. At the **Activation** prompt, tap **OK**.
The **Account options** screen is displayed.



10. Enter the desired information in the different fields, then tap **Next**.
11. Enter an Account name for this account (Optional) and tap **Done**.
Wait for the Inbox to synchronize before use.
12. Tap  → **Settings** to change the account settings.

Creating Additional Email Accounts

To create additional email accounts after setting up your first account, follow these steps:


1. From the Home screen, tap  **Email**.
Your Email screen displays showing your emails from the active account.
2. Tap  → **Settings**.
3. Tap **Add account** to add another email account.
4. Enter the information required to set up another account. For more information, refer to “*Creating an Email Account*” on page 174.

Switching Between Email Accounts

1. From the Home screen, tap  **Email**.
Your Email screen displays showing your emails from the active account.
2. Tap the Inbox button  at the top of your screen and then tap an inbox.
Your Email accounts screen is displayed.
3. Tap the Email account **Inbox** you would like to switch to. You can also select **Combined inbox** which will display email messages from all accounts.
4. The new Email account is displayed.


Flipboard

This application creates a personalized digital magazine out of everything being shared with you. Access news stories, personal feeds and other related material. Flip through your Facebook newsfeed, tweets from your Twitter account, photos from friends and much more.

1. From the Apps menu, tap **Flipboard** .
2. Swipe the screen up and select some onscreen categories that you are interested in, then follow the onscreen instructions to build your flipboard.
– or –
Tap **Tap to create or sign in** to log into your previously created profile.
3. Follow the onscreen instructions.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message.


1. From the Apps menu, tap  **Gallery**.

All of the Albums that hold your pictures and videos will be displayed with folder name and number of files.






2. Tap an Album and thumbnails of the contents will be displayed.

Note: If your device displays that the memory is full when you access Gallery, delete some of the files by using **My Files** or other file management applications and try again. For more information, refer to “*My Files*” on page 191.

Viewing Pictures



1. From the main gallery, tap  → **Slideshow** to see a slideshow of all of your pictures.
2. Tap a thumbnail to view a single picture.

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

3. The following options are available at the top of the screen when your phone is held horizontally:
 - **Change player**  : allows you to change the device the picture is displayed on if you are using Samsung Link.
 - **Share via**  : allows you to share the picture via various applications.
 - **Delete**  : allows you to delete the picture.
 - **Camera**  : activates the camera.
4. Tap  for additional options.

Viewing Videos




Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.





1. Tap a video to select it.
2. Tap  to play the video.
3. Tap  for additional options.

For video player controls, see “Video” on page 203.

Using S Beam to Share Pictures

 
This feature (when activated via NFC) allows you to beam large files directly to another compatible device that is in direct contact. These files can be larger, such as Videos, HD pictures, and other large files. You can beam images and videos from your gallery, music files from your Music, and more.

1. From the Home screen, tap  **Apps** →  **Settings**.
2. Scroll down to **CONNECT AND SHARE**, then tap  **NFC**.

3. If not already active, in a single motion touch and slide the **NFC** slider to the right to turn it on .
4. Tap **S Beam** and make sure the feature is turned on.
5. If not already active, in a single motion touch and slide the **S Beam** slider to the right to turn it on .
6. On the source device (containing the desired image or video), tap  **Apps** →  **Gallery**.
7. Locate and tap the selected image to open it in the preview window.

Important! Neither device must be in Lock mode or displaying the Lock screen. They must both be active and unlocked. It is recommended that the target device be on the Home screen.

Place devices back to back

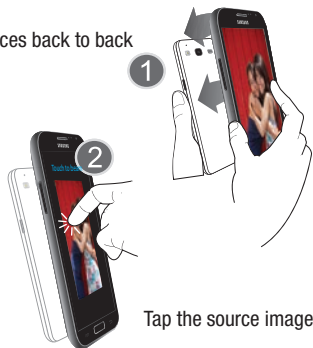

Tap the source image



8. Place the two active NFC-enabled devices back to back to begin (1).

Note: If the **Touch to beam** screen does not appear on the source device:

- Pull them apart.
 - Verify the image is visible in the preview window on the source device (providing the file).
 - Place them together again.
-




9. From the **Touch to beam** screen, tap the reduced image preview to begin the transfer (2).
10. When prompted, separate the two devices. After a few seconds (depending on file size) the recipient will then see the transferred file displayed on their screen.

To share multiple pictures via S Beam:

1. On the source device (containing the desired image or video), tap  **Apps** →  **Gallery**.
2. Locate the selected folder.
3. Touch and hold the first image and place a checkmark on it and all desired images.
4. Place the two active NFC-enabled devices back to back to begin.
5. From the **Touch to beam** screen, tap the reduced image preview to begin the transfer.
6. When prompted, separate the two devices.
7. The picture(s) is transferred to the other device.

Editing a Photo

You can edit your photos using the built-in Photo editor application on your device. The photo editor application provides basic editing functions for pictures that you take on your phone. Along with basic image tuning like brightness, contrast, and color it also provides a wide variety of effects used for editing the picture.

1. From the Home screen, tap  **Apps** →  **Gallery**.
2. Select a folder location and tap a file to open it.
3. With the image displayed, tap  → **Edit** to launch the Photo editor.

Note: To select the picture area, touch and hold the current picture.

4. Use the following editor controls to edit your picture:



Undo: undo the current operation. Touch and hold to undo all changes.



Redo: redo the previous operation. Touch and hold to reapply all changes.



Cancel/Delete: exits the current photo editing session.



Save: stores the currently edited photo.



Adjustment: provide the following adjustment option:

- **Rotate:** allows you to rotate a photo in all 4 directions. You can also mirror image a photo.
- **Crop:** allows you to crop (cut-out) an area of a photo.
- **Resize:** allows you to crop (cut-out) an area of a photo.



Tone: provide the following tonal options: Brightness, Contrast, Saturation, Red, Green, Blue, Temperature, and Hue.




Effect: allows you to add various effects to your photo.



Portrait: allows you to apply various face correction effects such as: Red-eye fix, Airbrush face, Face brightness, Out-of-focus, Beauty face, Face reshaping, or Spot healing.



Decoration: provides creative features such as: Sticker, Label, Frame, Drawing, and Image.

5. Tap  to access the following options:
- **Clipboard:** allows you to select images from your clipboard to add to your picture.
 - **Share via:** allows you to share your saved photo via various applications.
 - **Set as:** assigns the currently saved image as either a: Contact photo, Home and lock screens, Home screen, Lock screen, or wallpaper.

Gameloft

Preview and download great mobile games for your device.

Visit gameloft.com to learn more.



- From the Apps menu, tap  **Gameloft.**

Gmail




Gmail is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings, Gmail can automatically synchronize with your Gmail account on the web.

Signing into Your Gmail


Note: You must sign in to your Gmail account in order to access Gmail.

1. Sign on to your Google account if you are not already signed on. For more information, refer to “*Creating a New Google Account*” on page 14.
2. From the Home screen, tap  **Apps** →  **Gmail.**
3. Follow the onscreen instructions.
The Inbox loads conversations and email.

Creating a Gmail Message

1. From the Gmail Inbox, tap  at the bottom of the screen to create a new message.
2. Enter the recipients Email address in the **To** field. Separate multiple recipient email addresses with a comma.
3. Tap  and select **Add Cc/Bcc** to add a carbon or blind copy.
4. Enter the subject of this message in the **Subject** field.
5. Tap the **Compose email** field and begin composing your message.
6. Tap  to send.

Viewing a Gmail Message


1. From the Gmail Inbox, tap a message to view it.
2. Tap  for additional options.

Google

The Google Search application is the same onscreen Internet search engine that is on the Google Search widget on your main Home screen. (For more information, refer to “*Google Search widget*” on page 23.)


Google Settings

As Google has become more intertwined with other applications, this menu provides a quick and ready access point to configure preferences for Google+, Maps & Latitude, Locations, etc. You can also use the Search function to initiate a Google Search from this menu.

1. From the Apps menu, tap  **Google Settings** and select an onscreen option.
2. Tap one of the Google Settings options.
3. Follow the onscreen prompts to modify your Google Settings.

Google+




Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

- From the Apps screen, touch  **Google+.**

Hangouts

Hangouts is a free Windows and web-based application for instant messaging offered by Google. You can connect with your friends across computers and various Android devices. You can have conversations or video calls with up to 10 friends.

Note: The first time you use Hangouts, you will need to download the updated application from the Play Store. When the Play Store page displays, tap **Update**. (For more information, refer to “*Play Store*” on page 194.)


1. Log on to your Google account if you have not already done so. For more information, refer to “*Creating a New Google Account*” on page 14.
2. From the Home screen, tap  **Apps** →  **Hangouts.**
3. The first time you access Hangouts, tap **Confirm** to confirm your mobile number. If the number is not correct, tap **Edit Number** to change it.
4. Begin using Hangouts.
5. Tap  → **Help** for more information on using Hangouts.

Internet



The Internet is your access to the mobile web. This section explains how to navigate your Internet Browser and introduces you to the basic features.

Accessing the Mobile Web

To access the Browser:

- From the Home screen, tap  **Internet**.
The Quick access homepage displays.


Navigating with the Browser

1. To select an item, tap an entry.
2. To scroll through a website, sweep the screen with your finger in an up or down motion.
3. Sweep the screen left to right to move laterally across a web page.
4. To return to a previous page, tap .
5. To move forward to a web page, tap .

Browser Options

- From any web page, tap  to access your browser options.

Internet Settings

- From any web page, tap  → **Settings** to access your Internet settings. (For more detailed information, see “Internet” on page 141.)

Enter a URL

You can access a website quickly by entering the URL. Websites are optimized for viewing on your phone.

To enter a URL and go to a particular website, follow these steps:

1. Tap the **Search or enter URL** field at the top of your screen.
2. Enter the URL using the onscreen keypad.
The website displays.


Search the Internet

To perform an internet search using keywords, follow these steps:



1. Tap the **Search or enter URL** field at the top of the browser.
2. Enter the keyword(s) to search using the onscreen keypad and tap **Go**.
3. Tap a link to view the website.

Adding and Deleting Windows

You can have up to eight Internet windows open at one time. To add a new window, follow these steps:

1. From your browser, tap  → **New window**.

A new browser window is opened.


2. Tap  (**Windows**) to see thumbnails of all open windows.
3. Tap a window listing to open up that Internet window.
4. Tap  at the top right corner of the web page thumbnail to delete the window.

Going Incognito




The incognito feature allows you to view Internet sites outside of normal browsing. Pages viewed in this incognito window won't appear within your browser history or search history, and no traces (such as cookies) are left on your device.

Note: Any downloaded files will be preserved and will stay on your device after you exit the incognito mode.

To add a new incognito window:


1. From your browser, tap  → **Incognito mode**.
2. At the information prompt, tap **OK**.
3. A new browser window displays.

To exit from the incognito window:


1. From your browser window, tap  (**Windows**).
2. Scroll across the available windows and locate the incognito window. The incognito icon  appears in the upper-left of the new browser window while you are in this mode.
3. Tap  next to the incognito listing to delete this window.

Using Bookmarks

While navigating a website, you can bookmark a site to quickly and easily access it at a future time. The URLs (website addresses) of the bookmarked sites are displayed in the Bookmarks page. From the Bookmarks page you can also view your Most visited websites and view your History.

1. From the Home webpage, tap  **Bookmarks**, located at the bottom right of the screen.

The Bookmarks page displays.

2. Tap  to display the Bookmark options.

Adding Bookmarks

1. From any webpage, tap  → .
2. Use the onscreen keypad to enter the Name, Address, and Location.
3. Tap **Save**.
4. **Saved to bookmarks** will appear at the bottom of the page.


Maps

Depending on your location, you can view basic, custom, and satellite maps and local business information, including locations, contact information, and driving directions. You can also post public messages about a location and track your friends.

Important! Before using Google Maps you must have at least an active data connection. The Maps application does not cover every country or city.

To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage
- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows






1. From the Apps menu, tap  **Maps**.

A map will display with your location in the very center.

2. Follow the onscreen instructions to use the Maps application.

Memo

The Memo application allows you to write memos that can include text, audio, and images.

1. From the Apps menu, tap  **Memo**.
 2. Tap  **Categories** to reveal available Memo categories or Manage categories.
 3. Tap  **Search** to search for a matching text string within your available memos.
 - or –
- Tap  **Tap to create memo** to create a new memo.
- or –
- Tap  **Menu** and select one of the following options:
- **Select:** allows you to select an available memo.
 - **Delete:** allows you to delete selected memos.
 - **Account:** allows you to access an available account.

Messages

Messages lets you exchange text and multimedia messages with compatible device users.

(For more information, refer to “*Messaging*” on page 73.)

- From the Home screen, tap **Messages** .

Mobile Data Security

Mobile Data Security lets you keep your data safe and secure if your phone is lost or stolen.

Note: Contact your Wireless Provider for details.

- From the Apps menu, tap  **Mobile Data Security**.

Mobile TV

Mobile TV is a subscription service that lets you watch your favorite TV shows using your handset.

Important! After a trial period, charges for service apply. Contact your Wireless Provider for details.


- From the Apps menu, tap  **Mobile TV**.

Note: Mobile TV will use a large amount of data and you are responsible for all data charges. It is strongly recommended that you upgrade to a large data plan in addition to this purchase.

Music

Music is an application that can play music files. Music supports files with extensions AAC, AAC+, eAAC+, MP3, WMA, 3GP, MP4, and M4A. Launching Music allows you to navigate through your music library, play songs, and create playlists (music files bigger than 300 KB are displayed).

Playing Music

1. From the Apps menu, tap **Music** .
2. Tap a library category at the top of the screen (Songs, Playlists, Albums, Artists, Music square, or Folders) to view the available music files.
3. Scroll through the list of songs and tap an entry to begin playback.
4. The following Music controls are available:



Pause the song.



Start the song after pausing.



Press and hold to rewind the song. Tap to go to previous song.



Press and hold to fast-forward the song. Tap to go to next song.



Volume control and SoundAlive.



Volume control showing volume muted.



Plays the entire song list once.



Replays the current list when the list ends.



Repeats the currently playing song.



Shuffles the current list of songs randomly.



Songs play in order and are not shuffled.



Lists the current playlist songs.



Displays the current song in the player window.



Assign the current song as a Favorite.



Streams the current music file to another device via Samsung Link.

Music Options

To access additional options:

- While in Music, tap .


The following options are available before you play music:

Note: The following options may or may not appear depending on whether or not music is actually playing. Also, options will be different if the song you are listening to is in a playlist.

- **Listen via Bluetooth:** scans for devices and pairs with a Bluetooth headset.
- **Set as:** allows you to set the music file as a ringtone or alarm tone.
- **Settings:** allows you to change your Music settings. For more information, refer to “*Music Settings*” on page 189.
- **Details:** displays details about the music file such as Title, Artist, etc.

Music Settings

The Music Settings menu allows you to set preferences for the Music app such as whether you want the music to play in the background, sound effects, and how the music menu displays.


1. While in Music, tap  → **Settings**.
2. Select one of the following settings:
 - **Tabs:** this menu allows you to select which categories you want to display. Choices are: Albums, Artists, Genres, Music square, Folders, Composers, Years, Most played, Recently played, or Recently added. Tap each item that you want to display in the Music menu.
 - **Playlists:** this menu allows you to determine which playlists are displayed.
 - **SoundAlive:** set a type of equalization such as Normal, Pop, Rock, Jazz, Dance, Classic, etc.
 - **Adapt Sound:** allows you to set Adapt Sound on when you are listening with earphones to alert of incoming calls and notifications.
 - **Play speed:** set the play speed anywhere between 0.5X and 2.0X using the slider.

- **Music auto off:** when activated, music will automatically turn off after a set interval.
- **Lyrics:** when activated, displays lyrics when available.
- **Smart volume:** automatically adjusts each track's volume to an equal level.

Using Playlists


Playlists are used to assign songs to a list of preferred media which can then be grouped into a list for later playback. These Playlists can be created via either the handset's Music options menu or from within a 3rd party music application (such as Windows Media Player) and then downloaded to the handset.

Creating a Playlist

1. While in Music, tap the **Playlists** tab.
2. Tap  → **Create playlist**.
3. Type a name for this playlist in the field and tap **OK**.


Adding Music to a Playlist

To add files to a playlist:

1. While in Music, tap the **Playlists** tab.
2. Tap the playlist name.
3. Tap  (**Add music**).
4. Tap a music file or tap **Select all** to add all the music tracks to this playlist.
5. Tap **Done**.

Removing Music from a Playlist


To remove music files from a playlist:

1. While in Music, tap the **Playlists** tab.
2. Tap the playlist name.
3. Tap  → **Remove**.
4. Tap the checkbox to the left of each track you want to remove from this playlist or tap **Select all** to remove all the music tracks from this playlist.
5. Tap **Done**.

Editing a Playlist

Besides adding and removing music files in a playlist, you can also rename the playlist.


To edit a playlist:

1. While in Music, tap the **Playlists** tab.
2. Tap  → **Edit title**.
3. Tap a playlist name to edit.
4. Enter a new name for the playlist then tap **OK**.

For information on downloading music for your phone, see “*Play Music*” on page 193.

My Files

My Files allows you to manage your sounds, images, videos, bluetooth files, Android files, and other memory card data in one convenient location.

1. From the Apps menu, tap  **My Files**.
2. Tap **Device storage** to see the contents of your internal SD card.

Note: If you do not have an external SD card inserted, this option will not display. All files shown will be from your internal storage.

Different folders may appear depending on how your phone is configured.

3. If you have an external SD card inserted, tap **SD card** to see the contents of your external SD card (memory card).

Phone

The Phone application allows you to access the dialer keypad, call logs, and favorites. (For more information, refer to “*Call Functions*” on page 48.)

Photos

Automatically save every photo you take with your phone to your Google+ account. Then it is easy to view, organize, and share them with friends and family of your choice.


Visit google.com/+/learnmore/photos to learn more.

Note: This app requires a Google Account.

- From the Apps menu, tap  **Photos**.


Play Books

With Google Play Books, you can find more than 3 million free e-books and hundreds of thousands more to buy in the eBookstore.

1. From the Apps menu, tap  **Play Books**.
2. Log on to your Google account. (For more information, refer to “*Creating a New Google Account*” on page 14.)
3. Follow the onscreen instructions for using the Play Books application.



Play Games

This application takes you directly to the Play Store Games area where you can download games.

1. From the Apps menu, tap  **Play Games**.
2. Log on to your Google account if you have not already done so.
3. Select an available onscreen option and follow the onscreen instructions.


Play Movies & TV

With Google Play Movies & TV, you can rent thousands of different movies and television shows. You can watch instantly, or download your movie or show for offline viewing at a later time.

1. From the Apps menu, tap  **Play Movies & TV**.
2. Log on to your Google account if you have not already done so.
3. Following the onscreen instructions for renting and viewing movies and TV shows.
4. Tap  for additional options.

Play Music

With Google Play Music, you can play music that you have added to your music file as well as any music you copied from your PC. While offline, you can listen to music you have copied from your PC.

1. From the Apps menu, tap  **Play Music**.
2. Log on to your Google account if you have not already done so. (For more information, refer to “*Creating a New Google Account*” on page 14.)
3. At the Google play screen, tap **Add account** if you have not previously used Play Music, and follow the onscreen instructions to create your account and use Play Music.

Play Newsstand

Subscribe to your favorite magazines so you can have them available to read on your phone at any time or any place.

Note: This app requires a Google Account. For more information, refer to “*Creating a New Google Account*” on page 14.


- Touch  **Play Newsstand**.

Visit play.google.com/store/newsstand to learn more.

Play Store


Play Store provides access to downloadable applications and games to install on your phone. Play Store also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

Before using the Play Store you must have a Google Account. (For more information, refer to “*Gmail*” on page 181.)

1. From the main Home screen, tap  **Play Store**.
2. Sign in to your Google account.
3. The first time you sign in, the Play Store Terms of Service will be displayed. Tap **Accept** to continue or **Decline** to exit.
4. Tap **Apps** or **Games** to download or purchase games or applications. You can also download updates to existing applications.
5. Follow on the onscreen instructions.


POLARIS Office 5

POLARIS® Office Mobile for Android is a Microsoft Office compatible office suite. This application provides a central place for managing your documents online or offline. The application can also open Adobe PDF (Portable Document Format) files.

1. From the Apps menu, tap  **POLARIS Office 5**.
2. Enter your Email information (if desired) and touch **Register** to complete the process.
— or —
Touch **Skip** to ignore this registration.
The main POLARIS Office 5 screen displays.
3. Follow the onscreen instructions to use POLARIS Office 5.

S Health

S Health is a wellness application that allows you to better manage your health by providing you with relevant information.

1. From the Apps menu, tap  **S Health**.
The Welcome screen displays.
2. Read the introduction and tap **Next**.
3. Read the Use of S Health, Connecting Third Party Devices and Programs, Proprietary Rights and Licences, and Disclaimer of Warranty.
4. Tap the **I agree** checkbox.
5. Tap **Next**.
6. Sign in to your Samsung account if you have not already done so. For more information, refer to *“Creating a Samsung Account”* on page 14.
7. Follow the onscreen instructions to use S Health.

Before You Start Exercising

This app can be used to monitor your exercise. While moderate physical activity, such as brisk walking, is safe for most people, health experts suggest that you talk with your doctor before you start an exercise program, particularly if you have any of the following conditions:

- Heart disease;
- Asthma or lung disease;
- Diabetes, or liver or kidney disease;
- Arthritis.

You should also check with your doctor if you have symptoms suggestive of heart, lung, or other serious disease, such as:

- Pain or discomfort in your chest, neck, jaw, or arms during physical activity;
- Dizziness or loss of consciousness;
- Shortness of breath with mild exertion or at rest, or when lying down or going to bed;
- Ankle swelling, especially at night;
- A heart murmur or a rapid or pronounced heartbeat;
- Muscle pain when walking upstairs or up a hill that goes away when you rest.

Finally, the American College of Sports Medicine recommends that you see your doctor before engaging in vigorous exercise if two or more of the following apply:

- You are a man older than age 45 or a woman older than age 55;
- You have a family history of heart disease before age 55;
- You smoke or quit smoking in the past six months;
- You have not exercised for three months or more;
- You are overweight or obese;
- You have high blood pressure or high cholesterol;
- You have impaired glucose tolerance, also called pre-diabetes.

When in Doubt - Check it Out

If you are unsure of your health status, have several health problems, or are pregnant, you should speak with your doctor before starting a new exercise program. Working with your doctor ahead of time is a good way to plan an exercise program that is right and safe for you. Consider it the first step on your path to physical fitness.

S Voice

With the S Voice application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc.



1. From the Apps menu, tap  **S Voice**.

The Welcome screen displays

2. Tap **Next**.
3. Read the Samsung Disclaimer and tap the **I agree** checkbox.




4. Tap **Next**.

The S Voice screen displays.

5. Tap **Tutorial** to view information about using S Voice or tap **Start S Voice** to get started using S Voice.
6. At the S Voice screen, tap  or say "Hi Galaxy" to wake up S voice.
7. Speak into the phone and follow the onscreen instructions.
8. Tap  for additional options.

Samsung Apps

With Samsung Apps, you can download hundred of applications from a variety of categories.

1. Sign on to your Samsung account if you have not already done so.
2. From the Home screen, tap  **Apps** →  **Samsung Apps**.
3. Tap an application that you would like, then tap **Free** or **Price** (depending on whether it is free or not).
4. Tap **Accept and download**.
The application is downloaded to your device. You can find the app icon in your app menu.
5. Tap  → **Help** for additional information.


Settings

This app navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone. (For more information, refer to “*Changing Your Settings*” on page 82.)

Slacker

Slacker offers free, internet radio for mobile phones.

Important! You must register and create a free account before using this service.

1. From the **Apps** screen, tap  **Slacker**.
2. Begin selecting music.



Smart Remote

Important! Before initiating use, verify you have an active Internet connection available (either mobile network or Wi-Fi connection).

Note: Before beginning your initial Smart Remote application setup, confirm your TV is turned off.

For more information, refer to www.samsungwatchon.com.



Initial Configuration

1. Sign into your Samsung account.
2. From the Home screen, tap  **Apps** →  **Smart Remote**.


Note: If you are not connected to an active Wi-Fi, you may be prompted to continue the set up process via a mobile network. Click **Connect** to proceed.

3. Select your desired country or region for your TV Guide's source listing.
4. Enter your current zip code and tap **Done**. This zip code must correspond to the location of your desired TV and set top box.
5. From the **Find your TV service** screen, select a service provider from the available channel listing.
6. From the **Personalize** screen, you can either follow the onscreen prompts to personalize your desired content or tap **Skip** to continue without customizing your content.
7. Read the onscreen **PEEL DISCLAIMER** agreement and tap **Agree** to complete the set up process.

Customizing Your Remote

1. From the top of the main screen, tap  (**Remote Control**) → **Continue**.
2. From the **Select your TV brand** screen, tap your TV's manufacturer name.
 - If you have a brand of TV not listed or you are using a projector, select from one of the following two options. Choose from either **Show other brands** or **I have a home projector**.
3. Aim your device at the TV and tap  (**Power**) to confirm the set up process completed successfully and the correct TV IR codes were selected.

Note: The process of the initial TV activation can take up to 10 seconds. Please do not press the button again.


4. If the TV turned on, tap **Yes, this code 1 works**.
– or –
If the TV did not turn on after tapping  (**Power**) and waiting 10 seconds, tap **No, test next code 2** or **Send this code 1 again**.

5. From the **Select your channel source** screen, select the entry that corresponds to your current channel control method:
 - **Set-top Box**: selected when changing channels is done via a receiver box. Channels are not changed via the TV remote but rather through the receiver/box.
 - **My xxx TV**: selected when a signal is fed directly into the TV and no box is used. Channels are changed directly on the TV by using the TV remote and not a box's remote.

Note: Try matching your current channel selection method.

6. Select the Satellite Box Brand from the available list. For example, DirectTV®.
 - If your brand does not appear in the list, tap **Show other brands** and follow the onscreen instructions.

Important! You must configure your set top box for IR communication with your device. If you do not select **More info** below and follow the onscreen instructions you may not be able to properly use the application.







7. When prompted to Enable IR, tap **More info** to learn how to configure your set top box to receive and respond to IR controls.
8. Only after completing the IR setup process and programming your box, tap .

Note: This IR programming of your set top box is a one-time process and once successful should not need to be repeated.


9. If prompted to personalize your experience, follow the onscreen instructions.

Using Smart Remote

To change channels:


1. Sign into your Samsung account.
2. From the Home screen, tap  **Apps** →  **Smart Remote**.
3. From the top of the main screen, tap  (**Remote Control**). This launches an onscreen remote control.
 - **Easy remote**: provides the most common used control features. Scroll down to view additional functions.
4. In a single motion touch and drag up from the bottom-right of the screen to access additional remote tabs. Choose from one of the following:
 - **TV**: provides access to control functions specific to your TV.
 - **[Set top box]**: displays customized control specific to your configured set top box. Ex: satellite dish remote control functions.
5. From the remote screen tap  and then tap  (**Change room**) to choose from different receivers/boxes in different rooms. Ex: Living Room box, Bedroom box, etc.
6. Tap  **Back** to return to the main menu.

Locating your favorite programming:


1. Sign into your Samsung account.
2. From the main Smart Remote screen, tap  (Combined View) to reveal available media categories.
3. Select an available category.

– or –

Tap **Channel Guide** to display on your TV an onscreen listing of available set top box shows.

For additional information on the Smart Remote application, tap  and then select **Help**.

Smart Remote Settings



- From the main Smart Remote screen, tap  and then select an available onscreen option:
 - **Change room:** allows you to select a previously configured room.
 - **Edit channels:** allows you to add or remove channels from your custom list. Press and hold a channel number to update the channel entry.
 - **Settings:** provides access to the Samsung Smart Remote settings menu.
 - **About:** displays onscreen information about the application.
 - **Help:** displays onscreen help information.

Personalize Smart Remote

You can personalize your application to do things such as show content only from your selected media categories, or add an additional room's set top box.


To configure your Just for you settings:

The Just for you option displays available content matching your activated media categories. These categories can be configured during your initial set up or at any later time.

1. Sign into your Samsung account.
2. From the main Smart Remote screen, tap  (Combined View) → **Just for you**.
3. From the **On TV** tab, tap  and then select **Settings**.
4. Access parameters such as **Basic profile**, **Genres** and **Sports** to then configure and enable those parameters you would like to show in the Just for you tab.

To add a new room:

Your device can be used to control boxes/receivers from several rooms. You could go from controlling your set top box in your living room and then move into your bedroom to do the same.

1. Sign into your Samsung account.
2. From the main Smart Remote screen, tap the **On TV** tab
3. Tap  and then select **Settings** → **Add room**.
4. Name the new room and tap **Next**.
5. Enter your current zip code and tap **Done**. This zip code must correspond to the location of your desired TV and set top box.
6. Follow the steps from page 198 to complete the process.

Tone Room Deluxe

Tone Room Deluxe is a service that enables you to access the latest and hottest content from your favorite artists for ringtones and ring back tones from your phone or the Web.

- From the Apps menu, tap  **Tone Room Deluxe**.

Video

The Video application plays video files stored on your phone or microSD card.

1. From the Apps menu, tap  **Video**.

All videos that you have on your phone and memory card will be displayed.

2. Tap the video that you want to play.

The video will begin to play.

3. The following video controls are available:



Pause the video.



Start the video after being paused.



Press and hold to rewind the video. Tap to go to previous video.



Press and hold to fast-forward the video. Tap to go to next video.



Volume control.



PIP (Picture In Picture) view. The video will be played in a small window so you can use your phone for other purposes while watching the video. Double-tap screen to return to previous size.



Original size view. The video will be played in its original size.



Full-screen in ratio view. The video is enlarged as much as possible without becoming distorted.



Keep aspect ratio view.



Full-screen view. The entire screen is used, which may cause some minor distortion.









Streams the video to another device via Samsung Link.

Note: The screen view icons are a three-way toggle. The icon that is displayed, is the mode that will appear after the icon is tapped.

(For more information on downloading videos for your phone, see “Settings” on page 197.)


Voice Recorder

The Voice Recorder allows you to record an audio file up to one minute long and then immediately share it using Wi-Fi Direct, Messages, Gmail, or via Bluetooth. Recording time will vary based on the available memory within the phone.

1. From the Apps menu, tap  **Voice Recorder**.
2. To start recording, tap  **Record** and speak into the microphone.
3. During the recording process you can either tap  **Stop** to stop and save the recording or tap  **Pause** to temporarily halt the recording. After pausing, tap  **Record** to resume recording. Once the audio recording has stopped, the message is automatically saved. Tap  **Cancel** to cancel the recording without saving.
4. Tap  **List** to display a list of current recordings.
5. Tap  **Recording quality** to adjust the recording quality. Choose from: Normal, Interview, Conversation, or Voice memo.
6. Tap  for additional options.

Voice Search

The Google Voice Search application allows you to search the web using only your voice.

1. From the Apps menu, tap  **Voice Search**.
2. When the Google Voice Search screen displays, speak the word or words that you would like to search for on the internet.
3. If the timer expires and the mic icon changes from red to gray, tap the mic icon and speak the word or words that you would like to search for on the internet. Results are displayed on your phone.
4. The following options are available at the bottom of your screen:
 - **Web**: After selecting a different option, tap Web to return to the original search results.
 - **Images**: Displays images for your search.
 - **News**: Displays news items related to your search.
 - **MORE**: After tapping More, sweep your screen to the left to see additional options such as Maps, Shopping, Videos, Blogs, Discussions, Books, Applications, and Phone.

Wi-Fi Now

Wi-Fi Now automatically connects your device to Wi-Fi and helps you save on mobile data usage.

- From the Apps menu, tap  **Wi-Fi Now**.

Your Navigator Deluxe

Provides all the features of an advanced car navigation system. Obtain turn-by-turn driving directions (including voice guided turn-by-turn directions) with GPS accuracy. Search for any destination (including gas stations, ATMs, restaurants, and more). View detailed maps of any location.

Important! Your Navigator Deluxe requires you to activate the GPS location function on your phone. (For more information, refer to *“Location”* on page 89.)

1. From the Apps menu, tap  **Your Navigator Deluxe**.

Note: If the GPS location function on your phone is inactive, follow the prompts to activate it. (For more information, refer to *“Location”* on page 89.)



Tip: The first time you launch Your Navigator Deluxe, your phone downloads Your Navigator Deluxe updates and applications not included with Your Navigator Deluxe to save storage. Activating Wi-Fi can save data charges during this download. (For more information, refer to *“Wi-Fi”* on page 148.)


2. From the Your Navigator Deluxe Home screen select one of the following options:
 - **Drive To:** Obtain turn by turn directions to an address, airport, contact address, and more.
 - **Places:** Search for nearby businesses, the cheapest gas prices, and more.
 - **Maps & Traffic:** View your current location on a map and any traffic in the area.
 - **Local Apps:** Launch applications that enhance Your Navigator Deluxe sessions.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site displays a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Note: YouTube is a data-intensive feature. It is recommended that you upgrade to a large data plan to avoid additional data charges.

1. From the Apps menu, tap  **YouTube**.
2. Tap the search field  to search for specific videos, scroll down to browse through the main page thumbnails, or scroll to the bottom to explore additional options.

3. To view a video, tap an available preview thumbnail or tap the title link.
4. Tap  for additional options.

Note: It is not necessary to sign in to the YouTube site to view content. However, if you wish to sign in to access additional options, tap **Sign in** at the top left corner, enter your YouTube or Google username and password, and tap **Sign in**.

Section 9: Samsung Product Registration

Sign Up Now

Customize your Samsung device experience

- Activate product warranty
- Access to a personalized My Samsung Mobile account
 - No monthly fees

Get More

- Latest info on promotions, events and special offers on related products
 - Review Samsung products and share your opinion
 - Great deals on downloads



Register now at
www.samsung.com/register

Scan this code to go
directly to the registration page.

SAMSUNG
mob!le

A

About Device 127

Accessibility 103

Accounts 110

Add accounts 110

Adding a New Contact

Idle Screen 61

Address Book

Adding a New Contact 61

Adding Pauses to Contact

Numbers 62

Deleting Address Book Entries 72

Dialing a Number 63

Exporting Contacts to Memory 71

Finding an Address Book Entry 63

Group Settings 68

Importing Contacts to Phone 71

Managing Address Book

Contacts 70

Using Contacts List 63

Address Book Options 66

Adobe PDF 194

Airplane mode 87, 94

Alarm 171

Android Beam 92, 152

Applications

Using the Camcorder 177

Using the Camera 164

World Clock 172

Applications settings

managing 130

running services 131

B

Back key 23

Backing up your data 111

Battery

Charging 9

Display Percentage 11

Extending Life 11

Installing 7

Low Battery Indicator 11

Wall Charger 9

Battery Life

Extending 11

Blocking Mode 106

On 106, 108, 109

Bluetooth 85

Outgoing Headset Condition 135

Books

Play Books 192

Bubble

Options 78

Business cards

Conver to contacts 67

C

Calculator 162

Calendar 162

Call Functions 48

Adjusting the Call Volume 56

Answering a Call 51

Background Calling 48

Call Back Missed Call 53

Call Duration 55

Call Log 53

Call waiting 59

Correcting the Number 50

- Dialing a Recent Number 50
- Ending a Call 50
- Ending via Status Bar 50
- International Call 49
- Making a Call 48
- Manual Pause Dialing 49
- Options During a Call 56
- Saving a recent call number to
 - Address Book 54
- Searching for a Number in
 - Address Book 59
- Using the Speakerphone 58
- Call rejection** 133
- Call Sound**
 - Adding More Volume 56
 - Personalize 57
- Camcorder** 169
 - Settings 167
 - Shooting Video 169
- Camcorder Options**
 - Camcorder Options after a Video is Taken 170

- Camera** 164
 - Modes 165
 - Settings 167
 - Taking Pictures 164
- Capture screen** 109
- Changing Your Settings** 82
- Charging battery** 9
- ChatON** 170
- Clock** 171
- Commercial Mobile Alerting System (CMAS)** 81
- Contact settings** 138
- Contacts** 61
 - Convert Business cards 67
 - Merge with Samsung Account 67
- Creating a Playlist** 190

D

- Dialing Options** 52
- Display**
 - icons 20
 - Status Bar 20
- Display Settings** 97
- Draft Messages** 75

- Drive** 174
- Dual Camera** 166
- Dual View** 166

E

- Easy Mode** 102
- Editing a Picture** 180
- Email**
 - Creating a Corporate Email Account 175
 - Creating Additional Email Accounts 175
 - Switching Between Email Accounts 176
- Emergency Alerts (CMAS)** 81
- Emergency Calls**
 - Making 51
 - With SIM 51
 - Without SIM 51
- Entering Text** 41
- Exercising**
 - Before You Start 195
- Extra Volume** 56

F

Flipboard 176

Font Size

Messages 75, 76

G

Gallery 177

viewing pictures 177

viewing videos 178

Gestures 108

Getting Started 5

Setting Up Your Phone 5

Switching Device On/Off 12

Voice mail 15

Gmail

Personalize Swype 117

Google

Settings 182

Google Chrome 170, 171

Google Maps 186

Google Voice Typing 42

Google voice typing settings 117

Google+

Settings 182

Group

Adding a contact 68

Editing 69

Removing a contact 68

Group Settings

Editing a Caller Group 69

H

Handwriting 43

HDR 168

Heart Rate Sensor 18

Help settings 127

Hold

Placing a Call on Hold 57

Home key 23

Home Screen

Assigning a New 39

Hotspots 86, 88, 158

I

Icons

Indicator 20

Icons, description 20

In-Call Options 56

Incognito 185

Create Window 185

Exit Window 185

International Call 49

Internet 184

K

Keyboard Input Methods 113

Keyboard settings 113

Kies via Wi-Fi 90

L

Language and input 113

Language and keyboard settings

select locale 113

Linking Contacts 64

Location services settings 99

Locations 89

Lock Screen

Changing Wallpaper 38

M

Maps 186

Memory Card Installation 7

Menu Navigation 23

Merge with Google 67

Message

Register a Number as Spam 77

Thread Options 77

Message Options 75

Message Search 79

Messages

Change Font Size 79

Delay Delivery 81, 145

Editing Signature 80, 144

Font Size 75, 76

Priority List 76

Priority Senders 80, 144

Messaging

Block Unknown Senders 80, 145

Creating and Sending Text

Messages 73

Default Application 79

Deleting a message 78

Draft 75

Locked 75

Options 75

Scheduled Messages 75

Settings 79

Signing into Email 174

Signing into Gmail 181

Spam 75

Types of Messages 73

microSD card 7

Installing 7

Removing 8

microSDHC card 7

Mobile HotSpot

Allowed Devices 160

Changing Password 160

MAC Filtering 160

Mobile Hotspot

Activating 159

Connecting 159

Mobile networks

settings 90

Mobile TV 187

Mobile Web 184

Entering Text in the Mobile Web

Browser 184

Using Bookmarks 186

Motion 109

Motions 108

Motions and gestures 108

Movies 177

Multi Window

Activate/Deactivate 26

Close App 30

Custom Preset 30

Customizing 27

Rearrange Apps 27

Removing Apps 28

Restoring Apps 28

Running Multiple Apps 28

Switch Arrangement 29

Tab Repositioning 27

Tray Relocation 27

Using 25

Multi-Tasking

Background Calling 48

Music 188

Music Options 189

Music Player

- adding music 190
- creating a playlist 190
- playlists 190
- removing music 190
- settings 189

Mute 56, 59

My Files 191

N

Navigation

- command keys 23
- context-sensitive menus 24
- terms used 24
- touch gestures 24

Nearby devices 93

NFC

- On 178

O

On/Off Switch 12

P

Paired Windows

- Multi Window Preset 30

PC Connections 147

Personal Localized Alerting

Network (PLAN) 81

Phone

- icons 20

Photo

- Editing 180

Pictures 177

- Gallery 177

- Sharing 178

Places 192

Play Books 192

Play Movies & TV 177, 192

Play Music 193

Play Newsstand 193

Play Store 194

Pointer speed 119

POLARIS Office 5 194

POLARIS® Office 5 194

Portable Wi-Fi Hotspot 158

Primary Shortcuts 18

- Adding and Deleting 35
- Customizing 35
- Replacing 36

Privacy settings

- factory data reset 112

Private Mode

- On 106

Q

Quick Dialing 48

Quick Settings 83

R

Reject list 55

Reset

- factory data 112

Restarting Device 19

Roaming

- settings 90

S

S Beam 92

- On 178
- Sharing Multiple Pictures 179
- Sharing Pictures 178

S Voice 196

Samsung Account

- Merge Contacts 67

Samsung Keyboard

- ABC Mode 45
- Changing the Input Type 44
- Enabling 42
- Entering Symbols 45
- Keyboard Swipe 114
- Reset Settings 115
- Symbol/Numeric Mode 45

Scientific Calculator 162

Screen capture 109

Screens

- Adding and Deleting 38
- Rearranging 39

Security 111, 129

Security settings

- device administration 124
- trusted credentials 126

Sensor

- Temperature and Humidity 19

Settings 82, 167

Shortcuts

- Adding from Application
 - Screen 35
- Deleting from a Screen 35

Managing 35

Primary 18

SIM card

- installation 6
- Installing 6

Smart Remote

- Personalize 202
- Settings 201
- Using 200

Smart Switch 16

Snooze 172

Software Update 129

Spam

- Add a Phrase 80, 144
- Add Number 77
- Block Unknown Senders 80, 145
- Filter Settings 80, 144
- Manually Add a Number 80, 144

Spam Messages 75

- Assigning 75

Speakerphone Key 58

Status Bar 20

Stopwatch 173

SwiftKeyFlow

- Samsung Keyboard 114

Swype

- Cellular Data 117

Swype Keypad Settings 115

Swype Settings 46

Synchronization settings

- auto-sync 99

Synchronizing Accounts 111

T

Tap and pay 92

Tethering 86, 90

- Active Icon 158
- Disconnecting 158
- see USB Tethering 157

Text Input

- Methods 41

Text Input Method

- Selecting 41

Timer 173

- Automatic Answering 135

Toolbar

Off 101

On 101

Toolbox

Activation 31

Customization 31

Customizing Applications 31,
102

Touch Screen 13

Lock/Unlock 13

Transferring Large Files 178

Travel Charger 9

U

UHD

4K Video 167

Understanding Your Device

Back View 18

Front View 17

Side Views 19

Understanding Your Phone 16

Features of Your Phone 16

Unmute 56

USB 2.0

Cable Installation 10

USB 3.0 16

Cable Installation 10

USB Connections

As Storage Device 147

USB Settings

As Storage Device 147

USB Tethering 87, 157

Activating 157

Using Favorites

Adding Favorites 186

V

Video 203

Video player 203

Voice Mail

Accessing 15

From Another Phone 15

Setup 15

Voice Recorder 204

Voice Typing 42

Volume 94

W

Wallpaper

Home and Lock Screens 38

Wallpapers

Changing Home Screen 37

Changing Lock Screen 38

Changing via Settings Menu 38
Managing 37

WatchON

Adding a New Room 202

Changing Channels 200

Configure Just For You 202

Customizing Your Remote 199

Initial Configuration 198

Locating Programs 201

Web 184

Widgets

Adding and Removing 36

Gmail 181

Moving to a Different Screen 37

Settings 197

Voice Recorder 204

Wi-Fi 148

Wi-Fi Direct 84, 151

Wi-Fi hotspot 86

Wi-Fi Settings 84

World Clock

Deleting an Entry 173

World clock 172

WPA2 PSK 159, 160

YouTube 206

Y